21 Series | Hydraulic VRC 2-Post Straddle

Installation Manual

Important:

Read this entire manual. Important safety information is included.

Before starting the installation, verify the job site dimensions and the dimensions of the delivered materials against the PFlow Industries, Inc.
General Arrangement (GA) drawing.

The illustrations depicted in this manual are not to scale or detail. The illustrations are for reference only.





Description		Section Page	
1.	Contact Information	15705-0011	1 1
2.	General Information	15710-0004	2 1
	Introduction		2 1
	General Overview		2 1
	Code Requirements		2 1
	Parts		2 1
	Service		2 1
	Feedback		2 1
3.	Warranty Information	15710-0014	3 1
	Parts and Labor		3 1
	Definitions		3 1
	Warranty		3 1
	Exclusions		3 1
	Obligation		3 1
	Liability		3 2
	Warranty Procedures		3 2
	Pre-Authorization		3 2
	Invoices		3 2
4.	Important Safety Information	15707-0004	4 1
	Read the Entire Manual		4 1
	Intended Purpose		4 1
	Safety Alert Symbols		4 1
	Danger Statements		4 2
	Warning Statements		4 2
	Hydraulic Safety Precautions		4 4
	Caution Statements		4 5
	Electrical Safety Precautions		4 6
	De-energize the Circuit		4 6
	Electrical Safety Precautions		4 7
	Working on Energized Circuits		4 7
	Notes for the Installation Electrician		4 7
5.	Glossary	15710-0018	5 1
	Unique Descriptions and Names		5 1
	Gate Types		5 8
	Identifying Call Outs		5 9

Desc	eription		Section Page
6. E	Equipment Arrival and Unpacking	15710-0006	6 1
А	rrival		6 1
Ir	nspection		6 1
Т	ransportation Damage and Claims		6 1
S	Shipping Photograph Examples		6 2
S	Shipping Packet		6 3
R	Return Goods Authorization (RGA)		6 3
٧	Varranty Work		6 3
F	Recommended Tools		6 4
7. P	re-Installation Responsibilities	15710-0008	7 1
Е	Ind User Responsibilities		7 1
	nd User and/or Mechanical and/or Electrical nstaller Responsibilities		7 1
N	Mechanical Installer Responsibilities		7 2
Е	Electrical Installer Responsibilities		7 2
8. J	ob Site General Arrangement (GA) Review	15710-0011	8 1
9. F	requently Asked Questions	15710-0011	9 1
10. S	Sequence of Installation		10 1
11 . F	Placement	15710-0020	11 1
V	/erify Job Site Dimensions and Carriage Orientation	n	11 1
N	Mark Alignment		11 1
Р	Position the Carriage		11 2
12. 0	Column Setup	15707-0005	12 1
Р	Purpose		12 1
	Confirm the Orientation of Each Column		12 1
S	Straddle Configuration Column Guidelines		12 1
S	Spliced Column Guidelines		12 2
Α	Assemble the Spliced Columns		12 2
Α	lign the Spliced Columns		12 3
Т	ack Weld the Spliced Columns		12 3
S	Spliced Column Finish Welding Details		12 4
R	Raise and Secure the 1st Column		12 5
Р	Prepare the Upper Wheelblock		12 6
	nsert the Wheelblocks and the Optional Carriage Tensioner		12 7
	attach the Upper Wheelblock		12 8
	attach the Lower Wheelblock		12 8
R	Raise and Secure the 2nd Column		12 9
V	/erify the Guide Angle to Guide Angle Alignment		12 9

Description	Section Page	
12. Column Setup (continued)		
Align the Wheelblocks to the Guide Angle		12 10
Review the Columns for Plumb		12 10
Install the Header Assembly		12 11
Review the Columns		12 12
Install the Lift Chains		12 13
Adjust the Length of the Lift Chains		12 15
13. Bracing 15707-0006		13 1
Required Anchoring and Bracing Guidelines		13 1
Side to Side and Front to Back Bracing		13 2
Bracing Supplies		13 2
Anchoring Guidelines		13 3
Bracing Guidelines		13 4
15. Adjust the Optional Carriage Tensioner	15 1	

Description		Section Page
16. Gate Installation	15709-0005	16 1
Identify Components		16 1
Sliding Gate		16 2
Assemble the Sliding Gate		16 2
Install the Gate Post Extensions		16 3
Raise and Secure the Sliding Gate		16 4
Anchor the Gate Post Base Plates		16 4
Plumb and Square the Gate		16 4
Install Support Braces		16 4
Verify Gate Operation		16 4
Install the Gate Interlock		16 5
Verify the Gate Interlock Operation		16 5
Adjust the Interlock Keeper Assembly Magnet		16 5
Bi-Parting Swing Gate		16 6
Assemble the Bi-Parting Swing Gate		16 6
Install the Gate Post Extensions		16 7
Raise and Secure the Gate Assembly		16 8
Anchor the Gate Post Base Plates		16 8
Plumb and Square the Gate		16 8
Install Support Braces		16 8
Verify the Gate Panel Swing		16 8
Install the Gate Interlock		16 9
Verify the Gate Interlock Operation		16 9
Adjust the Interlock Keeper Assembly Magnet		16 9
Swing Gate		16 10
Assemble the Swing Gate		16 10
Install the Gate Post Extensions		16 11
Raise and Secure the Swing Gate Assembly		16 12
Anchor the Gate Post Base Plates		16 12
Plumb and Square the Gate		16 12
Install Support Braces		16 12
Verify the Gate Panel Swing		16 12
Install the Gate Interlock		16 13
Verify the Gate Interlock Operation		16 13
Adjust the Interlock Keeper Assembly Magnet		16 13

Description	Section Page
16. Gate Installation (continued)	
Single Vertical Acting (SVA) Gate	16 14
Establish Placement	16 14
Prepare the Chains in the Gate Posts	16 15
Begin Horizontal Assembly	16 16
Install the Header	16 16
Install the Chains	16 17
Assemble the Gate Panel	16 18
Attach the Gate Panel to the Gate Chains	16 18
Raise and Secure the Gate	16 19
Align the Gate Assembly	16 19
Anchor the Gate Post Base Plates	16 19
Plumb and Square the Gate	16 20
Install Support Braces	16 20
Adjust the Gate Panel	16 21
Install the Gate Panel Interlock	16 22
Verify the Gate Operation	16 22
Begin Vertical Assembly	16 23
Establish Placement	16 23
Prepare the Chains in the Gate Posts	16 23
Raise and Secure the Gate Posts	16 23
Install the Header	16 24
Install the Chains	16 24
Assemble the Gate Panel	16 25
Attach the Gate Panel to the Gate Chains	16 26
Install Support Braces	16 26
Adjust the Gate Panel	16 27
Install the Gate Interlock	16 28
Verify the Gate Operation	16 28

Scription Coto Installation (continued)	Section Page
. Gate Installation (continued)	40.1.00
Carriage Mounted Single Vertical Acting (SVA) Gate	16 29
Establish Placement	16 29
Prepare the Chains in the Gate Posts	16 30
Begin Horizontal Assembly	16 31
Install the Header	16 31
Install the Chains	16 32
Assemble the Gate Panel	16 33
Attach the Gate Panel to the Gate Chains	16 33
Raise and Secure the Gate	16 34
Align the Gate Assembly	16 34
Plumb and Square the Gate	16 35
Weld the Gate Posts	16 35
Install Support Braces	16 35
Attach the Bumpers	16 36
Adjust the Gate Panel	16 36
Install the Gate Limit Switch and Stationary Junction Boxes	16 37
Verify the Gate Operation	16 37
Begin Vertical Assembly	16 38
Establish Placement	16 38
Prepare the Chains in the Gate Posts	16 38
Raise and Secure the Gate Posts	16 38
Install the Header	16 39
Install the Chains	16 39
Assemble the Gate Panel	16 41
Attach the Gate Panel to the Gate Chains	16 41
Plumb and Square the Gate	16 42
Weld the Gate Posts	16 42
Install Support Braces	16 42
Attach the Bumpers	16 43
Adjust the Gate Panel	16 43
Install the Gate Limit Switch and Stationary Junction Boxes	16 44
Verify the Gate Operation	16 44

17. Gate Cable Interlock	Description		Section Page
General Description	17. Gate Cable Interlock	15709-0029	17 1
Carriage Cam	Purpose		17 1
Column Mounted Roller Assembly	General Description		17 3
Control Cable	Carriage Cam		17 3
Gate Cable Interlock Assembly	Column Mounted Roller Assembly		17 3
Danger / Warning Statements	Control Cable		17 3
Adjust the Interlock Assembly 17 5 Adjust the Cam and Cable 17 5 Position the Roller Arm on the VRC Column 17 6 Wire the Electrical Switches 17 8 18. Enclosure Panels 15709-0038 18 1 Full Height Enclosures 18 1 Inventory Enclosure Panels 18 2 Assemble and Install Enclosure Panels 18 2 4. Assemble and Install Enclosure Panels 18 2 19. Signage Locations 15709-0035 19 1 20. Landing Platform or Ramp 15709-0004 20 1 Install the Gate Post Extensions 20 1 Install the Landing Platform 20 1 Install the Ramp 20 1 21. Hydraulic Installation and Start-up Procedures 15707-0007 21 1 Hydraulic Safety Precautions 21 1 General Hydraulic Information 21 2 Install the Hydraulic Pump 21 3 Review the GA Drawing for Placement 21 3 Placement Considerations 21 3 Thread Sizes 21 3 Clean the Fittings and Hose to the 21 4 Upper Cylinder Port	Gate Cable Interlock Assembly		17 3
Adjust the Cam and Cable Position the Roller Arm on the VRC Column Wire the Electrical Switches 17 8 18. Enclosure Panels 15709-0038 18 1 Full Height Enclosures Inventory Enclosure Panels Assemble and Install Enclosure Panels 15709-0035 19 1 20. Landing Platform or Ramp Install the Gate Post Extensions Install the Landing Platform Install the Ramp 20 1 21. Hydraulic Installation and Start-up Procedures Hydraulic Safety Precautions 21 2 Install the Hydraulic Information 21 2 General Hydraulic Precautions 21 3 Review the GA Drawing for Placement Placement Considerations 21 3 Thread Sizes 21 4 Attach the Fittings and Hose to the Lower Cylinder Port Join the Hydraulic Hoses 21 5	Danger / Warning Statements		17 4
Position the Roller Arm on the VRC Column	Adjust the Interlock Assembly		17 5
Wire the Electrical Switches	Adjust the Cam and Cable		17 5
18. Enclosure Panels 15709-0038 18 1 Full Height Enclosures 18 1 Inventory Enclosure Panels 18 2 Assemble and Install Enclosure Panels 18 2 19. Signage Locations 15709-0035 19 1 20. Landing Platform or Ramp 15709-0004 20 1 Install the Gate Post Extensions 20 1 Install the Landing Platform 20 1 Install the Ramp 20 1 21. Hydraulic Installation and Start-up Procedures 15707-0007 21 1 Hydraulic Safety Precautions 21 1 General Hydraulic Information 21 2 Install the Hydraulic Precautions 21 2 Install the Hydraulic Pump 21 3 Review the GA Drawing for Placement 21 3 Placement Considerations 21 3 Thread Sizes 21 3 Clean the Fittings and Hoses 21 4 Attach the Fittings and Hose to the 21 4 Upper Cylinder Port 21 5 Join the Hydraulic Hoses 21 5	Position the Roller Arm on the VRC Column		17 6
Full Height Enclosures Inventory Enclosure Panels Assemble and Install Enclosure Panels 18 2 19. Signage Locations 15709-0035 19 1 20. Landing Platform or Ramp Install the Gate Post Extensions Install the Landing Platform Install the Ramp 20 1 21. Hydraulic Installation and Start-up Procedures Hydraulic Safety Precautions General Hydraulic Information General Hydraulic Precautions Install the Hydraulic Pump Review the GA Drawing for Placement Placement Considerations Clean the Fittings and Hoses Attach the Fittings and Hose to the Upper Cylinder Port Attach the Fittings and Hose to the Lower Cylinder Port Join the Hydraulic Hoses 15709-0035 19 1 18 2 18 2 18 2 18 2 19 1 15709-0004 20 1 15707-0007 21 1 21 1 21 1 21 2 21 3 21 4 21 5	Wire the Electrical Switches		17 8
Inventory Enclosure Panels Assemble and Install Enclosure Panels 18 2 19. Signage Locations 15709-0035 19 1 20. Landing Platform or Ramp 15709-0004 20 1 Install the Gate Post Extensions 20 1 Install the Landing Platform 20 1 Install the Ramp 20 1 21. Hydraulic Installation and Start-up Procedures Hydraulic Safety Precautions 21 1 General Hydraulic Information 21 2 General Hydraulic Precautions 21 3 Review the GA Drawing for Placement Placement Considerations 21 3 Thread Sizes 21 3 Clean the Fittings and Hoses Attach the Fittings and Hose to the Upper Cylinder Port Attach the Fittings and Hose to the Lower Cylinder Port Join the Hydraulic Hoses 21 5	18. Enclosure Panels	15709-0038	18 1
Assemble and Install Enclosure Panels 19. Signage Locations 15709-0035 19 1 20. Landing Platform or Ramp 15709-0004 20 1 Install the Gate Post Extensions 20 1 Install the Landing Platform 20 1 Install the Ramp 20 1 21. Hydraulic Installation and Start-up Procedures Hydraulic Safety Precautions General Hydraulic Information 21 2 General Hydraulic Precautions 21 2 Install the Hydraulic Pump 21 3 Review the GA Drawing for Placement Placement Considerations 21 3 Thread Sizes 21 3 Clean the Fittings and Hoses Attach the Fittings and Hose to the Upper Cylinder Port Attach the Fittings and Hose to the Lower Cylinder Port Join the Hydraulic Hoses 21 5	Full Height Enclosures		18 1
19. Signage Locations15709-003519 120. Landing Platform or Ramp15709-000420 1Install the Gate Post Extensions20 1Install the Landing Platform20 1Install the Ramp20 121. Hydraulic Installation and Start-up Procedures15707-000721 1Hydraulic Safety Precautions21 1General Hydraulic Information21 2General Hydraulic Precautions21 2Install the Hydraulic Pump21 3Review the GA Drawing for Placement21 3Placement Considerations21 3Thread Sizes21 3Clean the Fittings and Hoses21 4Attach the Fittings and Hose to the Upper Cylinder Port21 5Attach the Fittings and Hose to the Lower Cylinder Port21 5Join the Hydraulic Hoses21 5	Inventory Enclosure Panels		18 2
20. Landing Platform or Ramp Install the Gate Post Extensions Install the Landing Platform Install the Ramp 20 1 Install the Ramp 20 1 21. Hydraulic Installation and Start-up Procedures Hydraulic Safety Precautions General Hydraulic Information General Hydraulic Precautions Install the Hydraulic Precautions Install the Hydraulic Pump 21 3 Review the GA Drawing for Placement Placement Considerations 21 3 Thread Sizes Clean the Fittings and Hose to the Upper Cylinder Port Attach the Fittings and Hose to the Lower Cylinder Port Join the Hydraulic Hoses 21 5	Assemble and Install Enclosure Panels		18 2
Install the Gate Post Extensions Install the Landing Platform Install the Ramp 20 1 Install the Ramp 20 1 21. Hydraulic Installation and Start-up Procedures Hydraulic Safety Precautions General Hydraulic Information 21 1 General Hydraulic Precautions Install the Hydraulic Pump 21 3 Review the GA Drawing for Placement Placement Considerations 21 3 Thread Sizes 21 3 Clean the Fittings and Hoses Attach the Fittings and Hose to the Upper Cylinder Port Attach the Fittings and Hose to the Lower Cylinder Port Join the Hydraulic Hoses 21 5 21 5	19. Signage Locations	15709-0035	19 1
Install the Landing Platform Install the Ramp 20 1 21. Hydraulic Installation and Start-up Procedures Hydraulic Safety Precautions General Hydraulic Information General Hydraulic Precautions Install the Hydraulic Precautions Install the Hydraulic Precautions Install the Hydraulic Pump Install the Hydraulic Hoses Install the Hydraul	20. Landing Platform or Ramp	15709-0004	20 1
Install the Ramp 20 1 21. Hydraulic Installation and Start-up Procedures Hydraulic Safety Precautions General Hydraulic Information General Hydraulic Precautions 21 2 Install the Hydraulic Pump Review the GA Drawing for Placement Placement Considerations Thread Sizes Clean the Fittings and Hoses Attach the Fittings and Hose to the Upper Cylinder Port Attach the Fittings and Hose to the Lower Cylinder Port Join the Hydraulic Hoses 20 1 21 1 25 1 26 1 27 1 28 1 29 1 20 1 21 2 21 2 21 3 21 3 21 3 21 3 21 3 21 3 21 4 21 5 21 5 21 5	Install the Gate Post Extensions		20 1
21. Hydraulic Installation and Start-up Procedures15707-000721 1Hydraulic Safety Precautions21 1General Hydraulic Information21 2General Hydraulic Precautions21 2Install the Hydraulic Pump21 3Review the GA Drawing for Placement21 3Placement Considerations21 3Thread Sizes21 3Clean the Fittings and Hoses21 4Attach the Fittings and Hose to the Upper Cylinder Port21 4Attach the Fittings and Hose to the Lower Cylinder Port21 5Join the Hydraulic Hoses21 5	Install the Landing Platform		20 1
Start-up ProceduresHydraulic Safety Precautions21 1General Hydraulic Information21 2General Hydraulic Precautions21 2Install the Hydraulic Pump21 3Review the GA Drawing for Placement21 3Placement Considerations21 3Thread Sizes21 3Clean the Fittings and Hoses21 4Attach the Fittings and Hose to the Upper Cylinder Port21 4Attach the Fittings and Hose to the Lower Cylinder Port21 5Join the Hydraulic Hoses21 5	Install the Ramp		20 1
Hydraulic Safety Precautions General Hydraulic Information General Hydraulic Precautions Install the Hydraulic Pump Review the GA Drawing for Placement Placement Considerations Thread Sizes Clean the Fittings and Hoses Attach the Fittings and Hose to the Upper Cylinder Port Attach the Fittings and Hose to the Lower Cylinder Port Join the Hydraulic Hoses 21 1 21 1 21 2 21 3 21 3 21 3 21 3 21 4 Attach the Fittings and Hose to the 21 4 21 5 21 5	21. Hydraulic Installation and	15707-0007	21 1
General Hydraulic Information General Hydraulic Precautions Install the Hydraulic Pump Review the GA Drawing for Placement Placement Considerations Thread Sizes Clean the Fittings and Hoses Attach the Fittings and Hose to the Upper Cylinder Port Attach the Fittings and Hose to the Lower Cylinder Port Join the Hydraulic Hoses 21 2 21 3 21 3 21 3 21 3 21 4 21 5 21 5	Start-up Procedures		
General Hydraulic Precautions Install the Hydraulic Pump Review the GA Drawing for Placement Placement Considerations Thread Sizes Clean the Fittings and Hoses Attach the Fittings and Hose to the Upper Cylinder Port Attach the Fittings and Hose to the Lower Cylinder Port Join the Hydraulic Hoses 21 2 21 3 21 3 21 3 21 3 21 4 21 4 21 5	Hydraulic Safety Precautions		21 1
Install the Hydraulic Pump Review the GA Drawing for Placement Placement Considerations Thread Sizes Clean the Fittings and Hoses Attach the Fittings and Hose to the Upper Cylinder Port Attach the Fittings and Hose to the Lower Cylinder Port Join the Hydraulic Hoses 21 3	General Hydraulic Information		21 2
Review the GA Drawing for Placement 21 3 Placement Considerations 21 3 Thread Sizes 21 3 Clean the Fittings and Hoses 21 4 Attach the Fittings and Hose to the Upper Cylinder Port Attach the Fittings and Hose to the Lower Cylinder Port Join the Hydraulic Hoses 21 5	General Hydraulic Precautions		21 2
Placement Considerations Thread Sizes Clean the Fittings and Hoses Attach the Fittings and Hose to the Upper Cylinder Port Attach the Fittings and Hose to the Lower Cylinder Port Join the Hydraulic Hoses 21 3 21 3 21 4 21 4 21 5	Install the Hydraulic Pump		21 3
Thread Sizes 21 3 Clean the Fittings and Hoses 21 4 Attach the Fittings and Hose to the Upper Cylinder Port Attach the Fittings and Hose to the Lower Cylinder Port Join the Hydraulic Hoses 21 5	Review the GA Drawing for Placement		21 3
Clean the Fittings and Hoses Attach the Fittings and Hose to the Upper Cylinder Port Attach the Fittings and Hose to the Lower Cylinder Port Join the Hydraulic Hoses 21 4 21 5 21 5	Placement Considerations		21 3
Attach the Fittings and Hose to the Upper Cylinder Port Attach the Fittings and Hose to the Lower Cylinder Port Join the Hydraulic Hoses 21 4 21 5 21 5	Thread Sizes		21 3
Upper Cylinder Port Attach the Fittings and Hose to the Lower Cylinder Port Join the Hydraulic Hoses 21 5	Clean the Fittings and Hoses		21 4
Lower Cylinder Port Join the Hydraulic Hoses 21 5	<u> </u>		21 4
	•		21 5
	Join the Hydraulic Hoses		21 5
			21 5

Description	Section Page
21. Hydraulic Installation and	
Start-up Procedures (continued)	
Component Identification	21 6
Attach the Upper High Pressure Hoses	21 8
Attach the Lower Vent to Tank Hoses	21 8
Attach the Adapter Fittings to the Hydraulic Pump	21 8
Start-up Procedures	21 9
Confirm Emergency Stop Safety Operation	21 9
Confirm Motor Rotation	21 9
Make Sure There are No Leaks	21 9
Confirm Carriage Stops are Level with the Floor	21 10
Confirm Pressure Readings	21 10
Confirm that the Pump Motor Shuts Off	21 10
Confirm VRC Travel Times	21 11
Confirm Gate Safety Operation	21 11
Confirm Push-button Operation	21 11
Conduct a Load Test	21 12
22. Adjust Motor Overload Sensor (MOL) 15702-0022	22 1
The Purpose of the Motor Overload Sensor (MOL)	22 1
Locate the Full Load Amperage (F.L.A.) Value	
Test and Calibrate the MOL	22 1
23. Installation Completion Checklist 15707-0008	23 1
24. Installation Questionnaire 15708-1500	24 1
25. Acceptance Certification - VRC 15710-0017-VRC	25 1

Table of Contents





Section 1 | Contact Information



www.pflow.com P 414 352 9000 F 414 352 9002 6720 N. Teutonia Ave. Milwaukee, WI 53209



PFlow Industries, Inc. 6720 N. Teutonia Avenue Milwaukee, Wisconsin 53209



Office



Phone: 414-352-9000 Fax: 414-352-9002



Customer Support Department e-mail: csd@pflow.com



e-mail: sales@pflow.com



For a list of contact personnel visit the PFlow Industries, Inc. website at: https://www.pflow.com/contact

Documentation

PFlow Industries, Inc. reserves the right to make changes or improvements to the standard model line at any time. PFlow Industries, Inc. reserves the right to make changes to subsequent editions of the manual without prior notice to holders of this edition.

Copyright Notice

© Copyright February 2022 by PFlow Industries, Inc.

All rights reserved.

No part of this manual may be reproduced or used in any form without expressed written permission from PFlow Industries, Inc.

This publication may be photocopied by the original purchaser. Any other type of reproduction is prohibited without express written permission from PFlow Industries, Inc.

Trademarks

All trademarks referenced in this manual are the property of their respective owners.

System Modifications/ **Disclaimer**

Mechanical or electrical modifications performed on the equipment not approved by PFlow Industries, Inc. may void any warranty and/or service agreements. Please contact the PFlow Customer Support Department for assistance with service modifications.

Training

Training is available upon request from the Customer Support Department. Half-Day, Full-Day, and Two-Day sessions are customized to fit specific needs either for a single equipment type or for the entire product line.

On-site Supervision

On-site supervision services are available from the Field Service Department. Contact our Field Service Manager for more details.

Source Language

This manual is written in American English.

Section 1 | Contact Information





Section 2 | General Information

www.pflow.com P 414 352 9000 F 414 352 9002 6720 N. Teutonia Ave. Milwaukee, WI 53209

Introduction

This manual provides information about the PFlow Industries, Inc. custom designed Vertical Reciprocating Conveyor (VRC). As the nations' leading manufacturer of vertical material handling equipment, PFlow Industries, Inc. is confident that this new VRC will provide many years of reliable service.

General Overview

The VRC provides a safe and simple means of moving material from one level to another. The simplicity of design and few moving components ensure a trouble-free, long life, with low maintenance and little downtime.

Code Requirements

This VRC is designed for the movement of materials only, up to the VRC's rated capacity, from one level to the next. Do not allow anyone to ride on the VRC. VRCs are not elevators, and are specifically excluded within the scope of the ASME A17.1 Safety Code for Elevators and Escalators. VRCs are included in ASME B20.1 Safety Standard for Conveyors and Related Equipment, which is incorporated by reference into OSHA 29 CFR 1910. A copy of the ASME B20.1 standard can be purchased at www.asme.org and other sources. PFlow Industries, Inc. recommends that this standard be referenced for appropriate installation, maintenance, inspection, and operation in relation to hazards. All electrical designs and components are in accordance with National Electric Code (NEC) requirements. Local codes may require initial inspection of the installation and periodic inspection and testing of the unit. Contact PFlow Industries, Inc. for more information in the event an inspection is required.

NOTE

The information and illustrations in this manual are intended only as an aid to understanding the VRCs general installation. The information and illustrations do not cover every possible contingency or circumstance regarding nonstandard options or site conditions.

If there is a problem, call PFlow Industries, Inc. at (414) 352-9000, during normal business hours, 8:30 a.m. to 5:00 p.m. central standard time, Monday through Friday. Outside of those hours, see the PFlow Industries, Inc. Contact Information page for additional information. Use the model number and serial number or the PFlow Industries, Inc. General Arrangement (GA) drawing number for the lift in all correspondence.

Parts

Equipment damage resulting from modification in any manner from the original model, including the substitution of parts other than factory authorized parts, will void the warranty. Furthermore, PFlow Industries, Inc. will not be liable for any loss, injury, or damage to persons or property, nor for direct, indirect, or consequential damage of any kind resulting from modified or substitution of parts other than factory authorized parts of said material or equipment.

PFlow Industries, Inc. maintains a complete stock of, or has access to, all replacement components. Detailed records of all equipment sold are kept. If a component is damaged in shipment, is defective or missing, contact PFlow Industries immediately.

Service

The PFlow Industries, Inc. Customer Support Department will assist maintenance and service personnel with any questions or problems regarding the equipment or installation.

Feedback

Your feedback is important. Please help PFlow Industries, Inc. understand if the equipment has met your expectations. Please complete the questionnaire in this manual. The questionnaire will help us address any comments and/or concerns.

Section 2 | General Information





Section 3 | Warranty Information



www.pflow.com P 414 352 9000 F 414 352 9002 6720 N. Teutonia Ave. Milwaukee. WI 53209

Parts and Labor

Parts:		Labor:	
Structure	Lifetime	Structure	Lifetime
Manufactured Components	1 Year	Manufactured Components	1 Year
Purchased Components	1 Year	Purchased Components	90 Days
Gates and Enclosures	90 Days	Gates and Enclosures	90 Days

Definitions

- Structure is defined as columns, carriage, and pre-fabricated bracing (excluding carriage side guards).
- Manufactured components are defined as those components manufactured by PFlow Industries, Inc.
- Purchased components are those components that are used as supplied by vendors.

Warranty

PFlow Industries, Inc. expressly warrants to the original purchaser that this product will be free from defects in material and workmanship under normal, intended use. The warranty period begins 30 days after shipment.

Exclusions

This warranty does not apply to:

- 1. Equipment or components damaged or broken in transit or shipping.
- 2. Replacement of wear parts.
- 3. Equipment failures caused by abuse, misuse, exceeding recommended capacities, impact with other objects, negligence, improper installation, unskilled use, unskilled maintenance, inadequate maintenance, or incorrect adjustments.
- 4. Exposure to a corrosive or abrasive environment or exterior elements unless specifically built for that environment.
- 5. Equipment that has been repaired, altered or modified in any manner outside of the manufacturing facility, substitution of parts other than factory authorized parts, removal of any parts, or addition of any parts without prior written permission by PFlow Industries, Inc.
- 6. Any losses or damages resulting from loss of data, loss of revenue or profits, loss of products, incidental or consequential damages, delays, or expenses incurred by failure of said part or parts even if advised of the possibility thereof.
- 7. Lost time and/or additional trips for missing or damaged components.
- 8. Expedited freight charges.

Obligation

The obligation for PFlow Industries, Inc. is limited to only the replacement or repair of defective components that received prior authorization. This is the owner's sole remedy.

PFlow Industries, Inc. will bear normal labor charges performed by an authorized PFlow Industries, Inc. service agent during standard business hours, excluding overtime, holiday rates, or any additional fees.

This warranty applies to all models and no person except an officer of PFlow Industries, Inc. is authorized to modify this warranty or to incur on behalf of PFlow Industries, Inc. any other obligation or liability in connection with PFlow Industries, Inc. equipment.

Section 3 | Warranty Information



www.pflow.com P 414 352 9000 F 414 352 9002 6720 N. Teutonia Ave. Milwaukee, WI 53209

Liability

PFlow Industries, Inc. believes, to the best of our knowledge, that the information in the equipment manuals are accurate. In the event that technical or typographical errors exist, PFlow Industries, Inc. reserves the right to make changes to subsequent editions of the manual without prior notice to holders of this edition. The reader should consult PFlow Industries, Inc. if errors are suspected.

The customer's right to recover damages caused by fault or negligence on the part of PFlow Industries, Inc. shall be limited to the amount paid to PFlow Industries, Inc. by the customer. The limitation of liability of PFlow Industries, Inc. will apply regardless of the form of action, whether in contract or tort, including negligence. Any action against PFlow Industries, Inc. must be brought within one (1) year after that cause of action accrues.

PFlow Industries, Inc. will not be liable for any loss, injury, or damage to persons or property, nor for direct, indirect, or consequential damage of any kind resulting from failure or defective operation of said material or equipment.

Warranty **Procedures**

All billing must be in accordance with our Warranty Procedures. Replacement of defective parts will be handled in accordance with the Return Materials Authorization (RMA) policy for PFlow Industries, Inc.

Pre-**Authorization**

- All warranty work must be pre-authorized by PFlow Industries, Inc. Customer Support Department prior to starting work.
- Where distance and or experience may be more cost-effective, PFlow Industries, Inc. reserves the right to use alternate organizations.
- Labor is defined as a maximum of two hours travel per call, plus reasonable on-site repair time as determined by PFlow Industries, Inc.
- Local purchase of components must be pre-authorized.
- 1. Notify the PFlow Industries, Inc. Customer Support Department of the problem for authorization.
- 2. PFlow Industries, Inc. will determine:
 - The cause of the problem.
 - Who will do the repair work.
 - The repair details involved.
- 3. If PFlow Industries, Inc. decides that your organization or your subcontractor will do the work, an authorization number will be assigned which must be referenced on all subsequent paperwork.

NOTE Notify PFlow Industries, Inc. by phone, FAX, or e-mail during the next business day if an event occurs during our non-working hours. Issuance of an authorization number does not quarantee approval and/or payment.

Invoices

- 1. Submit an invoice for approval within 30 days after the date the work was completed. Payment is made 30 days after the date of approval.
- 2. A deduction from outstanding payments to PFlow Industries, Inc. for warranty is never authorized.
- 3. Invoices received without sufficient information will be returned. Invoices will be reconsidered for approval when complete documentation is received. All invoices must include, in detail, the following:

☐ PFlow serial number.	☐ Labor hours expended resolving the problem.
\square Date the work was performed.	□ Rates per hour.
\square Description of the problem.	☐ Copies of receipts for materials purchased.
☐ Travel time incurred.	☐ Detailed description of work completed.

Section 4 | Important Safety Information



www.pflow.com P 414 352 9000 F 414 352 9002 6720 N. Teutonia Ave. Milwaukee, WI 53209

Read the Entire Manual

Important: carefully read the entire manual upon receipt of the VRC. Improper installation, alteration, adjustment, service, cleaning, or maintenance could result in death, severe injury, or property damage. Instructions and warnings must be read and thoroughly understood by all operators and users. PFlow Industries, Inc. recommends that the owner conduct regular staff training including safety instructions on a regular basis to avoid the risk of accident or damage to the VRC.

Following procedures other than those indicated in this guide to install, use, and maintain the VRC is considered inappropriate and may cause fatal accidents, personal injury, or property damage, in addition to invalidating the warranty.

Intended Purpose

The intended purpose of the PFlow Industries, Inc. Vertical Reciprocating Conveyor (VRC) is to provide a safe and simple means of moving materials only, up to the VRCs rated capacity, from one level to another. VRCs are **not** elevators. The VRC is exclusively intended for use in establishments where all operators have been trained to understand the purpose, limitations, and associated hazards of the VRC. Any other use of the VRC is strictly forbidden.

Potential Risks and Possible Misuse

PFlow Industries, Inc. has attempted to protect against as many hazards as possible. The following potential risks should be addressed before the VRC is put into operation:

- Risk of injury caused by falling products.
- Risk of injury caused by product extending beyond the confines of the carriage.
- Risk of injury caused by exceeding the weight capacity of the VRC.
- Hazards occurring at places where the VRC connects to incoming and outgoing conveyors.
- Risk of injury if any safety features are bypassed.
- Risk of injury due to the use of corrosive chemicals or water jet.

Safety Alert Symbols

To ensure your safety and the safety of those around you, it is important that you read, observe, and understand ALL safety precautions relative to a particular task. Safety precautions in the manual are labeled with an alert symbol followed by the word **DANGER**, **WARNING**, or **CAUTION**.



This is the safety alert symbol. It is used to alert you to potential physical injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

Indicates a hazardous situation that, if not avoided, will result in death or serious injury.

<u>^</u>WARNING

Indicates a hazardous situation that, if not avoided, could result in death or serious injury.

ACAUTION

Indicates a hazardous situation that, if not avoided, could result in minor or moderate injury.

NOTICE Used to address practices not related to physical injury.

ADANGER

- Stay within the rated lift capacity.
- Make sure all safety devices are in place and operable before using the equipment. If any safety device is missing or inoperable, immediately remove the equipment from service.



- High Voltage! A licensed electrician must install all electrical connections and permanent wiring in accordance with applicable local or national electrical codes. Make sure the equipment is properly grounded in accordance with local electrical codes or, in the absence of local codes, with the current edition of the National Electrical Code NFPA No. 70.
- Falling column hazard! Make sure all beams, columns, posts, enclosure panels, and components are properly supported during installation. Illustrations may show the beams, columns, posts, enclosure panels, and components unsupported in order to make the equipment and installation instructions clearly understood.
- Keep clear of unsupported platforms. Stay out of the area under a raised platform. If a maintenance operation requires the carriage to remain in the raised position, refer to Bulletin 15709-0083 for additional information or contact PFlow Industries, Inc. Customer Support Department for assistance.

WARNING

This equipment can be dangerous if not used properly. Allow only competent adults who have been properly trained and authorized personnel to operate this equipment.



- Passengers are not permitted. Riding may result in death or serious personal injury.
- This equipment must be maintained to ensure safety. Allow only properly trained personnel to service the equipment. Implement a routine safety inspection plan and follow the recommended preventive maintenance schedule in the owner's manual.



• Lockout/tagout equipment before performing any adjustments or maintenance. If the equipment is not locked out, it could start unexpectedly and cause injury or damage. Make sure all personnel are aware of the potential for stored energy to be present even after the power has been locked out. Refer to ANSI Z244.1 and OSHA 29 CFR 1910.147 for minimum requirements for a lockout/tagout system. There may be additional state or local requirements.



 Components and accessories may be heavy. To prevent serious injury, use the appropriate lifting apparatus when handling the components and installing the VRC.



- If any defects relating to operating safety and reliability are detected or if any damage occurs, the VRC must be taken out of operation immediately.
- Before the VRC is put into operation, all VRC parts must comply with all relevant health and safety directives and regulations.
- Do not switch the main power supply on or start the VRC when persons are in contact with the VRC.
- Make sure that no persons or objects are within the range of any moving parts of the VRC.
- Climbing, sitting, walking, or riding on equipment while the equipment is in operation could result in death or serious injury.
- If this VRC needs to be modified in any way, contact PFlow Industries, Inc. for assistance. Do not make any unauthorized changes.



- Falling Hazard! Close all gates before the carriage is moved. Never leave the lift unattended with the gates in the open position. Never close gates when a person is on the carriage or within the fenced area.
- Place the load in the center of the lift platform to avoid shifting loads.
 Make sure that any portion of the load does not overhang the perimeter of the carriage. This could create an unstable load condition.



- Lockout/tagout the VRC before removing jammed product. Be aware that stored energy in the lift components may move or shift when the jam is removed. De-energize any circuit before work is begun.
- Do not overtravel! Stops, mechanical or electrical, must be in place to prevent the carriage from traveling beyond the intended floor level.
 Overtravel could cause permanent damage to the carriage or failure of the lifting mechanism.
- Entanglement hazard! Secure long hair, wear snug-fitting clothing, and avoid wearing jewelry while using the VRC.

Hydraulic Safety Precautions

WARNING



- Wear personal protective equipment, such as gloves and safety glasses, whenever installing, servicing, or checking a hydraulic system.
- Assume that all hydraulic hoses and components are pressurized. Relieve all hydraulic pressure before disconnecting any hydraulic line.
- Never try to stop or check for a hydraulic leak with any part of your body; use a piece of cardboard to check for hydraulic leaks.
- Small hydraulic hose leaks are extremely dangerous, and can inject hydraulic oil under the skin, even through gloves.
- Infection and gangrene are possible when hydraulic oil penetrates the skin. See a doctor immediately to prevent loss of limb or death.



• Ingesting hydraulic fluid is toxic and hazardous to people and wildlife. Symptoms may be skin irritation, weakness in the hands, intestinal bleeding, pneumonia, or death. Seek first aid immediately. Dispose of spilled fluids appropriately.



- Hydraulic fluid is flammable. Make sure you know where fire extinguishers are kept and how to use them. Do not weld on or near pipes, tubes, or hoses that are filled with fluid.
- Do not overfill the hydraulic oil tank. Any overflow could cause a fire. Immediately repair any hydraulic oil leaks and clean up any spills.
- Shut off all electrical power to the Vertical Reciprocating Conveyor (VRC) while filling the hydraulic oil tank.
- Materials and fluids soaked in hydraulic fluid should be stored in sealed metal containers and disposed of at proper places.



 Hydraulic fluid is slippery. Wipe up spills immediately to reduce the risk of falls or slips.

Section 4 | Important Safety Information



www.pflow.com P 414 352 9000 F 414 352 9002 6720 N. Teutonia Ave. Milwaukee, WI 53209

A CAUTION

- During operation, the surfaces of some components may become hot. Avoid touching hot surfaces or wear protective gloves.
- Inform personnel about the location and operation of emergency stops and power disconnection points.
- If any unsafe or unusual conditions are observed, stop the equipment and remove it from service. Report the condition to your supervisor.
- Paint overspray on the hydraulic cylinder rod will damage the packing seals and void the manufacturer's warranty. Cover exposed rods with removable plastic or soluble grease while painting or touching up the VRC.

Section 4 | Important Safety Information



www.pflow.com P 414 352 9000 F 414 352 9002 6720 N. Teutonia Ave. Milwaukee, WI 53209

Electrical Safety Precautions

ADANGER



High Voltage! Employees servicing or maintaining VRCs may be exposed to death or serious personal injury if hazardous energy is not properly controlled. De-energize any circuit before work is begun. Follow your facilities procedures or OSHA lockout/tagout (LOTO) procedures anytime maintenance or service is being performed on any electrical box or component.

ACAUTION

The incoming voltage source must match the voltage identified on the rating tag. The rating tag provides essential technical information required for any installation, maintenance, or repairs. Do not remove, damage, or modify the rating tag.

De-energize the Circuit

- 1. Lockout/tagout whenever any work, maintenance, or service is performed on any electrical box or component. Make sure circuits are de-energized before starting work, using a functional, properly rated, and well maintained multimeter or voltage sensing device. Make sure the device is rated for the level of voltage being measured and is sensitive enough for the application.
- 2. Use fuse pullers to change a fuse; *never* use bare hands, pliers, or screwdrivers.
- 3. Install covers on exposed electrical devices or wires to protect personnel from serious injury.
- 4. Ground all metal connection boxes, switch boxes, starting boxes, transformers, motors, limit switches, interlocks, and push-button stations to prevent shock to personnel.
- 5. When using a portable meter, never leave one lead dangling with the other lead connected. Anyone touching the lead may receive a shock through the meter.
- 6. Make sure that all is clear following lockout/tagout procedures before applying power to a circuit. This is necessary in order to protect personnel from injury and to prevent damage to the equipment.
- 7. Avoid accidental contact with equipment or conductors which are known to be energized or are **not** known to be de-energized. If it is necessary to work on equipment while it is energized, use extra care. Always test and repair equipment that appears damaged or delivers an electric shock.

Take time to be careful! Follow all safety precautions to prevent death or personal injury.

Section 4 | Important Safety Information



www.pflow.com P 414 352 9000 F 414 352 9002 6720 N. Teutonia Ave. Milwaukee, WI 53209

Electrical Safety Precautions

ADANGER



High Voltage! To prevent serious injury, death, or property damage, all electrical connections and permanent wiring must be installed by a licensed electrician in accordance with applicable local or national electrical codes. Arc flash and shock hazard appropriate PPE is required. This equipment must be adequately grounded in accordance with local electrical codes or, in the absence of local codes, with the current edition of the National Electrical Code NFPA No. 70.

Working on Energized Circuits

When electrical repair or maintenance work is required that prohibits de-energizing the circuits involved, extreme caution must be used. The work should be completed only by authorized, well trained and supervised personnel who are fully aware of the dangers involved. All practical safety measure must be used to protect the personnel performing the required work. In addition to the NFPA No. 70 codes, the following precautions **must** be taken:

- 1. Remove all wristwatches, watch chains, rings, necklaces, metal appendages to clothing, oversized metallic belt-buckles, metal piercings, or loose clothing. These items have the potential to make accidental contact with energized surfaces. In addition, secure long hair with a hair net or cover with a plastic helmet.
- 2. Remove all hair barrettes or bobby pins. These items are electrically conductive and accidental contact may cause serious personal injury.
- 3. Wear dry clothing and shoes. Moisture should not be present on the soles of shoes. Water is electrically conductive and accidental contact may cause death or serious personal injury.
- 4. Insulate the worker from the ground. Cover any adjacent grounded metal surfaces with an insulating material. Suitable insulating materials are dry wood, rubber mats, dry canvas, dry phenolic material, or heavy, multi-ply paper (cardboard). Make sure that the insulating material has no holes present and there are no conductive materials (e.g., staples) embedded. Cover a sufficient area with the insulating material to make sure that adequate space is permitted for worker movement.
- 5. Use insulated tools when working on energized circuits or fuse box. These insulated tools must be rated to withstand the voltage of the energized circuits.

Notes for the Installation Electrician

The installation electrician must take the following precautions:

- 1. Locate and review the electrical schematics furnished with the equipment.
- 2. Verify the proper fit-up, wiring and operation of all required electrical components.
- 3. Mount the push button station out of reach of someone located on the carriage (approximately six feet [1829mm]).
- 4. Wire standard lift limit switches on the chain tensioning assembly (see the job specific electrical schematic as required) for mechanical VRCs as follows:

 If the tensioner chain becomes slack causing the arm on the limit switch to move down or if a strong tension is exerted on the tensioner chain causing the arm to move up, there is a break in the control power. The limit switches are designated with an LS# on the electrical schematic.

Section 4 | Important Safety Information





Unique Descriptions and Names

PFlow Industries, Inc. has incorporated, as well as created, a number of unique descriptions, names, and terminology for parts, components, and devices included in the Vertical Reciprocating Conveyor (VRC). This glossary includes these unique terms and other common terms to help understand this manual and the information it contains. In addition, the glossary will aid the user in communicating the correct information during troubleshooting and service situations. Although the wording and descriptions may sound familiar to the person who has read the manual, other terms and descriptions might not. It is recommended by PFlow Industries, Inc. that this glossary be reviewed before reading the remainder of this manual.

Alkyd paint

A fast-drying enamel paint, color-mixed per the customer's request, and applied using standard methods as specified by the paint manufacturer.

ANSI

American National Standards Institute: www.ansi.org

ASME

American Society of Mechanical Engineers: www.asme.org

Authorized person

Trained or qualified personnel approved to perform a specific duty or duties.

Back-Frame

The vertical portions of the carriage on a cantilever VRC, typically a series D vertical support mast.

Backstop panel

Also known as a Mezzanine roll-off panel, this is a panel that is installed opposite the ing edge at upper ing levels of a VRC platform that does not penetrate a floor. The backstop panel helps protect personnel and/or products from falling off the platform when ing or uning. This term should not be confused with the term "backstop" as defined in ASME B20.1.

Backstop

As defined by ASME B20.1; A mechanical device to prevent reversal of a ed conveyor under action of gravity when forward travel is interrupted.

BVAC

A bi-panel vertical acting gate.

Cantilever

A style of VRC where the carriage rides along the guide columns that are located on the same side of the carriage. This style lift can accommodate ing on three sides; right, front, and left.

Capacity

The maximum weight for which the VRC is designed.

Carriage

The entire structural assembly that travels on the guide columns and carries the material.

Carriage gate

A gate that is mounted directly on the carriage deck.

CEMA

Conveyor Equipment Manufacturers Association: www.cemanet.org

Chain

See Drive chain, Lift chain and Roller chain.



F 414 352 9002

Chain driven live roller (CDLR)

A horizontal conveyor that is driven by separate loops of chain or a continuous chain. The chain contacts all roller sprockets, depending on the type and function of the horizontal conveyor. Either double or single sprockets are fitted to the horizontal conveyor rollers.

Chain guide tube

A tube welded to the back side of the VRC column that encloses the lift chain and tensioner chain.

Chain tensioner

A device that monitors the lift chain tension. If the lift chain is too tight, becomes slack, or breaks, the limit switch mounted on the chain tensioner will trip and remove control power.

Columns

The vertical structural members in which the wheelblocks attached to the carriage travel up and/or down.

Column splice

Columns shipped in more than one piece must be joined in the field during installation. Field assembly and welding is required.

Constant pressure push button

A push button which must remain pressed and maintained by the operator in order to perform a desired operation. If the push button is released, the desired operation stops.

Controls

Any combination of electrical devices used to control the operation of a VRC. This normally includes push buttons, relays, limit switches, interlocks, etc.

Control panel

An enclosure housing various electrical components that control the VRC.

Control voltage

The control voltage is typically provided by the control transformer and is used to energize the various low voltage electrical devices.

Conveyor, Vertical Reciprocating

See Vertical Reciprocating Conveyor (VRC).

Dead

A static weight that is a permanent force, acting on a structure (see Platform).

Deck

The floor of the carriage (can be smooth plate, tread plate, or open grid).

DeckLock system

An added measure of safety to prevent uncontrolled descent of the carriage.

Diagonal drop bar

Edge-defining bar and snap chain across the operating end(s) of the carriage to define the material area on the platform and may minimize material movement. The diagonal drop bar is hinged at the base and swings down. This is not a material stop.

Direct acting cylinder

The cylinder which transmits lifting force directly to the carriage rather than through the use of cables, pulley, or chains.

Drivebase assembly

Gear reducer, brake motor and mechanical components that power the chain that lifts and lowers the carriage for mechanical VRCs. This assembly is typically mounted at the top of the lift guide columns.

Drive chain

Drive chains on the F series mechanical VRC, through a series of a shaft and sprockets that allow the carriage to be raised and lowered.

Drift

The action of a VRC carriage slowly dropping, usually due to slight internal leaks in a hydraulic system or mechanical slippage of a motor brake.

EBVAC

An electrically powered bi-panel vertical acting gate.

Effective width/length

Refers to usable space for the materials on the carriage, not the overall dimensions which includes space allowed for carriage side guards and snap chains.

Electrical cable

Electrical cables consist of at least two conductors contained within a protective outer cover.

Enclosure (lift guarding)

Structure surrounding a VRC to prevent outside interference with its normal operation and to safeguard personnel. Typically 8' (2,438 m) high panels composed of expanded metal or other materials that will prevent a 2" (51mm) diameter ball from passing through (ASME B20.1 requirement).

Epoxy coating

Abrasion-resistant, two-part industrial-strength protective coating system applied over sandblasted and primed steel or direct to metal. The epoxy coating is ideal for outdoor, chemical, or caustic wash-down environments or applications where standard alkyd enamel is viewed as insufficient.

EVAC

An electrically powered single panel vertical acting gate.

Expanded metal (EM)

A sheet of metal uniformly slit and stretched, forming diamond-shaped openings in the metal sheet. Expanded metal is a one piece construction that will not unravel under normal circumstances and will hold its shape. Expanded metal comes in a standard (raised) or flattened diamond pattern in a variety of gauges, opening sizes, materials and sheet sizes.

Explosion proof (EXP)

Electrical devices (e.g., control panels, motors, limit switches) that are designed to operate safely in a specific location or area where potentially explosive environments can or do exist.

Floor-to-Floor distance

The distance from one operating floor level to the adjacent operating floor level (see Vertical travel).

Full height enclosures (FHE)

Structure surrounding the full height of a VRC to prevent outside interference with its normal operation and to safeguard personnel. Typically panels composed of expanded metal or other materials that will prevent a 2" (51mm) diameter ball from passing through (ASME B20.1 requirement).

Gate

A device that opens and closes manually or automatically to allow access to the carriage for ing and uning. The gate is normally a swing, sliding, or vertical acting device constructed of similar expanded metal as the enclosure (see specific gate type).

General Arrangement (GA) drawing

The drawing produced by PFlow Industries, Inc. which shows the VRC lift, gates, and enclosures. The drawing may show but does not specify building details.

Guarded by location

Describes moving parts so protected by the parts remoteness from the floor, platform, walkway, or other working level, or by the parts location with reference to the frame, foundation, or structure to reduce the foreseeable risk of accidental contact by persons or objects. The parts remoteness from foreseeable, regular, or frequent presence of public or employed personnel may constitute guarding by location in reasonable circumstances. (See ASME B20.1 standard)

Guide angles

Guide angles are attached to the guide column to help capture and contain the guide wheels in the columns and guide the carriage.

Guide column

The structural members connected to the carriage that guide the carriage travel up and down.

Header

Header refers to the horizontal structure spanning the width of the carriage or gate. The carriage header defines the material height on straddle units.

HMI (Human Machine Interface)

The user interface in the control system that provides graphic control of the VRC. The HMI communicates with the programmable logic controller (PLC).

Hollow shaft

VRC mechanical shaft of the mechanical drivebase which penetrates the gear motor rather than coupling to the gear motor. This minimizes wear points.

Hydraulic cylinder

A device which converts fluid power into linear force and motion. The hydraulic cylinder usually consists of a movable element such as a piston and piston rod, plunger or ram, operating within a cylindrical bore.

Hydraulic power unit

Refers to motor, pump, and reservoir assembly. The reservoir is shipped with oil. Most hydraulic power units come with the control panel attached and pre-wired to the hydraulic pump.

Incoming voltage

The main voltage being supplied for operation of the equipment.

Interlock (Gate/Door)

An electro-mechanical locking system used on the gates or access doors of a VRC. The system prevents the VRC operation unless all such gates or access doors are closed. The system also prevents the opening of any such gate or access door unless the VRC carriage is present at that particular landing or opening.

Intermediate level

A floor level or levels between the uppermost and bottommost operating floor.

Junction box

An electrical control box used to join, centralize, and distribute wiring from different locations.

Keylock control

A keyed push button station that prevents unauthorized use of the VRC.

Kick plate

A curb on the outermost edge of the inoperable sides of the carriage deck which is designed to contain product and is a minimum of 4" (102mm) high.

Knock-Down (KD)

Lift components shipped in two or more pieces. Typically field welding is required (e.g., KD carriage, KD headers, KD uprights, KD gates).

Landing

A permanent-working surface at a fixed elevation used for ing or uning the carriage.

Lift chain

A chain that lifts the carriage and material.

Lift location light

Illuminated push button that indicates at which level the carriage is located.

Lifted

The total weight that the VRC is designed to lift at a specific speed. Typically, this is the dead plus live (see Rated).

Limit switch

An electrical device which is used to control the carriage position or monitor various mechanical devices.

pattern

A method to describe the direction material is moved on and off a carriage at different operating floors or levels. These can be used in combinations.

- "C" pattern: Carriage configuration allowing a /un opening on one side of the carriage deck.
- "Z" pattern: Carriage configuration allowing a /un opening on opposite sides of carriage deck.
- "90 degree" pattern: Carriage configuration allowing a /un openings at right angles on the carriage deck.

test

The carriage is ed to rated capacity, and the VRC is operated.

Macropoxy

Macropoxy is a fast drying, polyamide epoxy designed to protect steel in industrial exposures. Ideal for protection of sharp edges, corners, and welds.

Mechanical stop

A mechanical means of stopping carriage travel at a fixed position.

Momentary contact push button

A push button which only has to be pressed for an instant to activate the desired operation.

Non-operating end

The side(s) of a carriage not used for ing/uning. Handrails or expanded metal sides and kick plate are normally supplied as minimum guarding.

Operating end

The side(s) of the carriage used for ing/uning. At a minimum the side(s) are normally equipped with a safety chain as guarding.

Overall dimension

The outside dimension of the carriage structure or the entire lift.

Overtravel limit switch

A safety device provided on mechanical VRCs to stop carriage travel beyond the uppermost or lowermost floor level if the floor level positioning limit switch fails.

Photo eye

Photoelectric sensor that uses a focused beam of light to span the distance to a reflector. The VRC controls receive a signal when the reflected beam of light is detected by a sensor.

Pit

A depression in the floor a minimum of 1" (25mm) deeper than the carriage profile, which allows the carriage deck to be flush at operating floor or level.

Platform

The structure that forms the floor of the carriage and that directly supports the material (see Deck).

Pneumatic gate operator

A device that requires in-plant, clean and dry air to automatically open and close a gate. The device can be operated by either manually through the use of pull cords or push buttons, or automatically through the use of a PLC.

Pressure switch (hydraulic)

A sensor which detects hydraulic pressure. The sensor is set to trip at a predetermined pressure. When this pressure setting is reached, the pressure switch will activate, opening the control circuit and stopping the pump motor.

Programmable logic controller (PLC)

A micro-processor based device that controls the VRC through a resident software program.

Push-button (PB) station

The wall mounted, pedestal mounted, or hand held device used to control the operation of the VRC.

Qualified person

A person, who by possession of a recognized degree, certificate, professional standing, or skill, and who by knowledge, training and experience, has demonstrated the ability to deal with problems relating to the subject matter, the work, or the project.

Ramp

An access ramp used to move material on and off a carriage deck.

Rated

The weight the VRC is designed for and installed to lift at a rated speed (see lifted).

Reflector

A plastic, prismatic object used to reflect a beam of light emitted from a photoelectric sensor.

Roll-Off panel

See back-stop panel.

Roller chain

The type of chain drive most commonly used for transmission of mechanical power. The roller chain consists of a series of short cylindrical rollers held together by side links and connecting pins. The roller chain is driven by a toothed wheel called a sprocket.

Safety cam

Spring-ed, hardened steel cam directly attached to the lift chain or gate chain that engages if the lift chain or gate chain breaks or slackens, preventing the carriage or gate panel from dropping more than a few inches.

Side guards

A protective enclosure on the outermost edge of the inoperable sides of the deck welded to the carriage to contain material. Can be rails, sheet steel, or expanded metal.

Slack chain device

A device that monitors a chain and trips if the chain goes slack. If the chain becomes slack or breaks, the limit switch mounted on the slack chain device will trip and remove power to the circuit.

Spliced guide column

Guide column that is fabricated and delivered in two or more sections necessitated by manufacturing, handling, or installation constraints.

Sprocket

A wheel typically mounted on a shaft. The wheel has a row of teeth around its edge that fit into the links of a chain.

Straddle

A style of VRC where the carriage rides between two guide columns that are located on opposite sides of the carriage. This style of lift will accommodate "C" and "Z" type ing patterns.

Top of roller (TOR)

Top elevation of a horizontal conveyor system roller which is also the lower elevation of the .

Touchscreen

See HMI.

Transom

A panel or panels used to close an enclosure opening above the VRC entrance.

Travel

The difference in elevation between the bottommost level of the carriage platform and the uppermost level of the carriage platform, regardless of whether the carriage is pit or floor mounted.

UHMW (Ultra-High Molecular Weight)

An abrasion-resistant, high-impact, polyethylene material used throughout the VRC to protect and/or guide moving parts.

Uprights

The portion of the carriage that houses the wheels that guide the carriage between the columns.

VAC

A single panel vertical acting gate.

VFD

(Variable-Frequency Drive)

A VFD is a type of drive used in electro-mechanical drive systems to control AC motor speed and torque by varying the motor frequency and voltage.

Velocity fuse

A device that senses hydraulic flow across a control orifice when the pressure differential exceeds a predetermined amount. A spring-biased poppet closes, shutting flow to the damaged hydraulic circuit and prevents the lift carriage from descending.

Vertical travel

Distance the carriage deck travels; floor-to-floor or total distance (see Travel).

Vertical Reciprocating Conveyor (VRC)

A reciprocating power actuated lifting device (not designed to carry passengers or an operator) that receives s on a carriage and transports these objects from one operating elevation to another.

VRC specification

PFlow Industries, Inc. informational data sheet providing general information on a specific VRC.

Wheelblock assembly

Sub-assembly fastened to the carriage upright that contains the guide roller elements that travel along the column. The lift chain is typically attached to the safety cam.

Gate Types:

Single swing gate This type of gate hinges on one side and latches on the other, is either right

or left-hand swing. Clear space is required in front of the VRC for the gate to

swing open.

Bi-parting swing gate The bi-parting, swing gate has hinges on each side and latches in the center.

Clear space is required in front of the VRC for the gates to swing open.


Single panel vertical The VAC gate panel closes to the floor and opens in the upward direction. **acting gate (VAC)**


Double panel verticalThe BVAC gate is the same as the single panel VAC above in operation and use except the two (2) panels telescope from a nested position.


Horizontal sliding gate The horizontal sliding gate operates in the same manner as a vertical acting gate except the gate functions in the horizontal direction.

Roll-up door The roll-up door can be anything from an industrial type roll-up steel door to self-storage facility type door.

Section 5 | 8

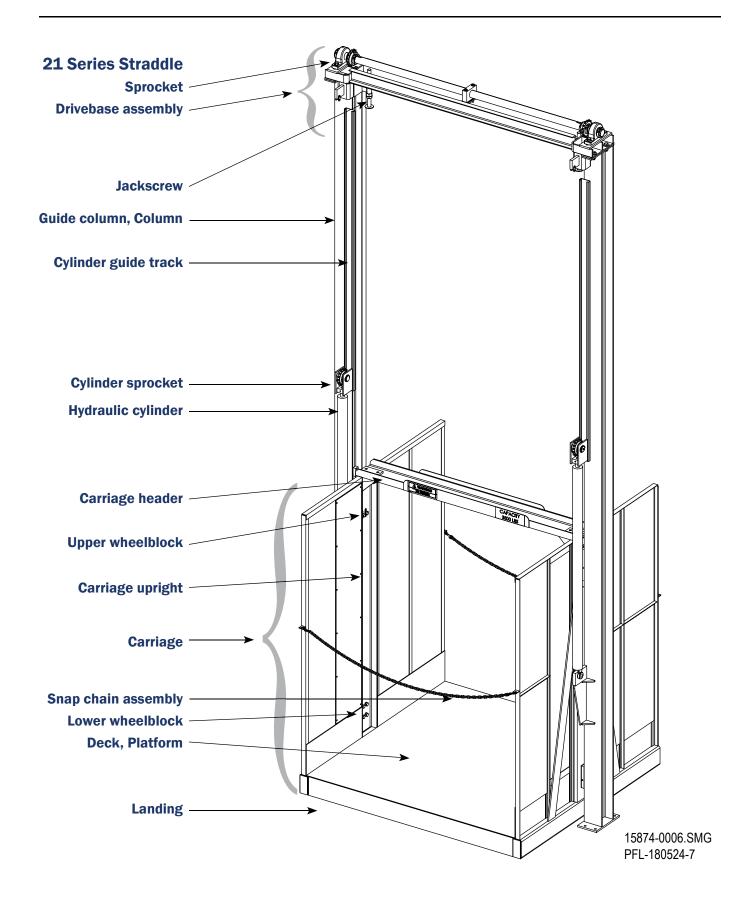

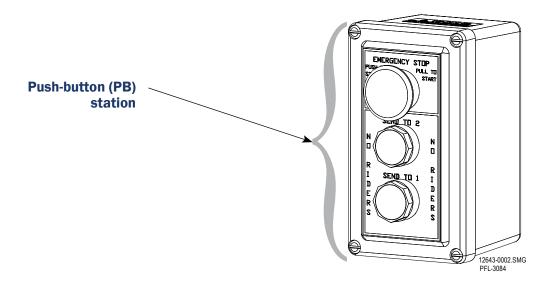

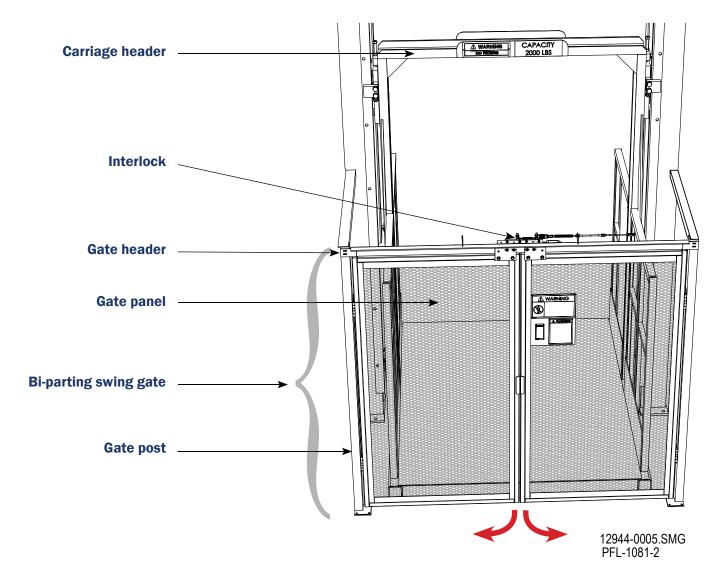

Section 6 | Equipment Arrival and Unpacking

www.pflow.com P 414 352 9000 F 414 352 9002 6720 N. Teutonia Ave. Milwaukee, WI 53209

Arrival

A fork truck capable of lifting approximately 2,000 lbs. (907 kg) is required. Larger sections may require a heavier lifting capacity fork truck or crane. Refer to the shipping weights for the equipment required for your job. Prior to shipping, PFlow Industries, Inc. takes pictures of all the items shipped, contents of the parts crate, and individual boxes to make sure the shipment is complete.

NOTICE The material in the boxes, cartons, etc. are delivered to the carrier agent complete and in good condition. Report shipping damage or discrepancies immediately to the PFlow Industries, Inc. Customer Service Department. PFlow Industries, Inc. is not responsible for damage due to shipping or receiving once the equipment has left the factory nor will PFlow Industries, Inc. file any claims for damage that may occur.

Inspection

Upon receipt, conduct an immediate inspection while the equipment is still on the truck or immediately after it is moved to the receiving area. Do not wait until after the equipment is moved to a storage area.

Verify that the number of items on the Bill of Lading agrees with the number of items delivered. Examine all pieces to determine if damage has occurred during transit. Do not sign a delivery receipt or a freight bill until a proper count has been made and inspection of all packages are complete. Should damage occur in shipment, it is a matter between the carrier and the consignee. In such cases, the carrier is assumed to be responsible for the safe delivery of the equipment, unless negligence can be established on the part of the shipper.

Verify the dimensions of the delivered materials against the PFlow Industries, Inc. General Arrangement (GA) drawing. If anything is missing or incorrect, contact the PFlow Industries, Inc. Customer Service Department immediately. Failure to notify the PFlow Industries, Inc. Customer Service Department may affect the completion time of the installation. The warranty does not cover lost time and/or additional trips for missing or damaged components.

Transportation Damage and Claims

- 1. Note all visible loss or damage that has occurred directly on the carrier's delivery receipt.
- 2. Have the driver sign the delivery receipt. If the driver refuses to sign, make a notation of this refusal on the receipt.
- 3. If the driver refuses to allow inspection, write the following on the delivery receipt: "Driver refuses to allow inspection of containers for visible damage." Have the driver sign the delivery receipt.
- 4. Contact the carrier's office immediately upon finding damage and request an inspection. Mail a written confirmation to the carrier's office with the time, date, and the person called.
- 5. Save any packages and packing material for further inspection by the carrier.
- 6. Promptly file a written claim with the carrier and attach copies of all supporting paperwork. Report all hidden damage directly to the freight carrier within seven days of delivery.







Parts Crate Contents



Section 6 | Equipment Arrival and Unpacking

www.pflow.com P 414 352 9000 F 414 352 9002 6720 N. Teutonia Ave. Milwaukee, WI 53209

Shipping Photograph Examples





Shipping Packet

The shipping packet contains the Owner's Manual, installation instructions, General Arrangement drawing, electrical schematic, and additional information applicable to the installation.

An additional copy of the schematic is inside the control panel.

Unpack the Equipment

- Save all packing materials for inspection by the carrier.
- Cut and remove the restraining straps.
- Remove the protective shrink wrap and cardboard material.
- Remove all wooden retaining blocks and crating.
- Remove the materials from the pallet.
- Dispose of the packing material in an environmentally responsible manner.

Return Materials Authorization (RMA)

All replacement components needed as a result of any damage will require a purchase order, authorization number, and compliance with PFlow Industries, Inc. Return Materials Authorization (RMA) procedures. The RMA number shall be obtained from PFlow Industries, Inc. Customer Service Department. The RMA number helps to identify and track the component when returned to PFlow Industries, Inc.

Warranty Work

Warranty procedures are included in this manual. All warranty work must be pre-authorized by the PFlow Industries, Inc. Customer Service Department prior to starting work.

- 1. Notify the PFlow Industries, Inc. Customer Service Department of the problem for authorization.
- 2. PFlow Industries, Inc. will determine:
 - The cause of the problem.
 - Who will do the repair work.
 - The repair details involved.
- 3. If PFlow Industries, Inc. decides that your organization or your subcontractor will do the work, an authorization number will be assigned which must be referenced on all subsequent paperwork.

NOTE Notify PFlow Industries, Inc. by phone, FAX, or e-mail during the next business day if an event occurs during our non-working hours. Issuance of an authorization number does not guarantee approval and or payment.

Section 6 | Equipment Arrival and Unpacking



www.pflow.com P 414 352 9000 F 414 352 9002 6720 N. Teutonia Ave. Milwaukee, WI 53209

Recommended Tools

The following is a list of recommended tools necessary to expertly install the equipment to industry standards. This is only a guideline. Individual sites and applications may require additional items.

Welding Machine and Equipment (Helmet, Gloves, Rods)	Socket Set: 1/2" Drive Sockets Sizes to 1-1/4"		
Lifting Cables, Straps, Slings or Chains: 2,000 lb. (907 kg) Capacity* (Minimum)	Hammer Drill & Bits: (1/4", 3/8", 1/2" Anchors; 4" Length Minimum)		
Chain Fall: 2,000 lb. (907 kg) Capacity* (Minimum)	Open or Box-End Wrenches to 1-5/16"		
Scissor Lift (optional but helpful)	Electric Drill and Drill Bits		
Fork Lift: 2,000 lb. (907 kg) Lifting Capacity* (Minimum)	Hex Keys to 3/8"		
Step Ladder(s)	Tap set: 1/4-20 to 3/4-10		
Come-Along Tool	Sledge Hammer		
Disk Grinder	Hack-Saw, Reciprocating Saw, or Portable Band-Saw		
"C" Clamps	Extension Cords		
Drift Punch	Chalk Snap-Line		
Carpenter's Framing Square	Plumb Bobs		
Spirit Level: 4' (1,22 m) Long	25' (7,62 m) Measuring Tape		
Vacuum	Rags		
String	Fire Extinguisher		
Pry bar	Portable Light		

^{*}Larger sections may require a heavier lifting capacity.

Before You Begin

Read this entire manual.

Pre-Installation Responsibilities

Proper preparation of the job site before beginning the installation can mean the difference between an installation that is safe and smooth and an installation that is difficult. Being aware of who is responsible for the listed activities will make sure the installation is a smooth process.

PFlow Industries, Inc. recommends that an installer with knowledge and experience on how to rig and erect structural steel discuss not only these items but all other concerns directly with the people on the job site.

A pre-installation job site visit is always recommended and considered to be included in the responsibilities of the mechanical installer.

End User Responsibilities

- 1. Assign the authorized on-site contact.
- 2. Provide the contact information for the authorized on-site contact.
- 3. Determine the work hours allowed to work on-site.
- 4. Arrange for other trades or in-plant production to avoid conflict with the proposed installation schedule or between trades.
- 5. Determine the work procedures and safety guidelines particular to the job site.
- 6. Communicate on-site safety meetings prior to beginning the installation.

End User and/or Mechanical Installer and/or Electrical Installer Responsibilities

- 1. Secure any required job site, local, or state permits before beginning the installation.
- 2. Determine if a local inspection and sign-off is required after the installation has been completed.
- 3. Unload and transport the equipment to the installation area.
- 4. Determine storage options (if applicable). Storing the equipment outside will void the warranty. If the equipment is stored indoors for a month or longer, consult PFlow Industries, Inc. for maintenance procedures required to keep the warranty in effect.
- 5. Prepare all necessary job site areas (e.g., pit, floor opening, adequate bracing locations, shaftway openings, doorways) for the installation.
- 6. Coordinate any job site or building modifications necessary to get the equipment to the installation area.
- 7. Determine if the weight and the size of the components exceed the lift requirements to handle and lift the heaviest load. If the weight of the load is in question, please contact the PFlow Industries, Inc. Customer Service Department.
- 8. Locate the pick-point capable of lifting and handling the necessary components.
- 9. Determine approved bracing locations and attachment points on the job site. Make sure that the bracing attachment points will withstand the static lateral load for bracing the lift. Details are called out on the GA drawing.
- 10. Make sure that the floor under the columns will withstand the base plate loading stated on the VSP spec sheet.

Section 7 | Pre-Installation Responsibilities



www.pflow.com P 414 352 9000 F 414 352 9002 6720 N. Teutonia Ave. Milwaukee, WI 53209

Mechanical Installer Responsibilities

- 1. Conduct a pre-installation job site visit.
- 2. Review the General Arrangement (GA) drawing for any discrepancies between the GA drawing and the job site.
- 3. Compare the dimensions listed on the GA drawing to the dimensions on the actual job site.

NOTE

Discrepancies in the pit length, pit width, pit depth, overhead clearances, and a pit that is not square or level are just a few items that could create a problem. These discrepancies must be addressed immediately with PFlow Industries, Inc.

- 4. Report any discrepancies to the PFlow Industries, Inc. Customer Service Department.
- 5. Determine if additional bracing material is required.
- 6. Complete mechanical erection of the equipment as sold by PFlow Industries, Inc. and called out on the GA drawing, and follow all instructions in the installation manual and safe work procedures.
- 7. Mount all electrical devices at non-union job sites.
- 8. Return trip upon completion of the electrical installation and be present for the final checkout, adjustments, and training. Complete and return the Installation Completion Checklist to PFlow Industries, Inc. Customer Service Department at csd@pflow.com

Electrical Installer Responsibilities

- 1. Review the General Arrangement (GA) drawing for any discrepancies between the GA drawing and the job site.
- 2. Report any discrepancies to the PFlow Industries, Inc. Customer Service Department.
- 3. Complete electrical connection of the equipment as sold by PFlow Industries, Inc. and shown on the electrical drawings and GA drawing.
- 4. Follow all instructions in the installation manual and safe work procedures.
- 5. Be present for the final checkout, adjustments, and training. Complete and return the Installation Completion Checklist to PFlow Industries, Inc. Customer Service Department at csd@pflow.com

Section 8 | Job Site vs General Arrangement Drawing

www.pflow.com P 414 352 9000 F 414 352 9002 6720 N. Teutonia Ave. Milwaukee, WI 53209

Before You Begin

Read this entire manual.

General Arrangement (GA) Drawing

Job site conditions may be different than those listed on the GA drawing. This drawing includes configuration and dimensional data specific to the job site:

- Job number
 - Equipment dimensions Appl
- Clearance dimensions
- Static lateral load
- Applicable options

The VRC can only be used according to the specifications given in this manual and the General Arrangement (GA) drawing. If the VRC is to be used outside the original design, contact the PFlow Industries, Inc. Customer Support Department to determine if the intended use is possible.



WARNING

Inappropriate and/or modified use of the VRC can result in dangerous safety issues and/or damage. If this VRC needs to be modified in any way, contact PFlow Industries, Inc. for assistance. Do not make any unauthorized changes.

Obtain written confirmation from PFlow Industries, Inc. before using the VRC in a modified or unspecified manner. PFlow Industries, Inc., cannot be held liable for any accidents and/or damages that may occur through inappropriate or unauthorized use of the VRC.

- 1. Locate the PFlow Industries, Inc. GA drawing in the shipping packet inside the parts crate.
- 2. Review the GA drawing for any discrepancies.
- 3. Compare the dimensions listed on the GA drawing to the dimensions of the actual job site and the materials received.

NOTE


Discrepancies in the pit length, pit width, pit depth, overhead clearances, and a pit that is not square are just a few items that could create a problem. These discrepancies must be addressed immediately with PFlow Industries, Inc.

4. Report any discrepancies to the PFlow Industries, Inc. Customer Support Department.

Contact the PFlow Industries, Inc. Customer Support Department with any questions or concerns at any time throughout the installation of this equipment.

Sample GA Drawing

The sample drawing shown is only an example and is not applicable to this VRC.

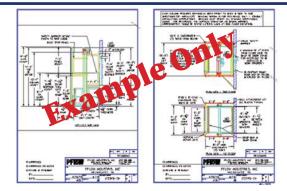

Section 8 | Job Site vs General Arrangement Drawing





Section 9 | Frequently Asked Questions

www.pflow.com P 414 352 9000 F 414 352 9002 6720 N. Teutonia Ave. Milwaukee, WI 53209

Frequently Asked Questions

Proper preparation of the job site before beginning the installation can mean the difference between an installation that is smooth and an installation that is difficult. PFlow Industries, Inc. has prepared a list of site specific questions to investigate:

- 1. Is 3-phase power available for the installation work?
- 2. Is welding permitted?
- 3. Is a "hot permit" required?
- 4. Is a fire watch required? Are there special welding requirements (e.g., special coatings such as epoxy paint, or hot dipped galvanized steel)?
- 5. Are there any protrusions or rough spots in the floor level or wall space that could interfere with the installation or the operation?
- 6. Are the floors level?
- 7. Can the equipment pass through all openings, doorways, hallways, and shaftway openings?
- 8. Is there other non-PFlow Industries, Inc. equipment to be integrated with the PFlow Industries, Inc. VRC components?
- 9. Is a job specific bracing drawing required?
- 10. Is the work site union or non-union?
- 11. Is the customer's forklift available for use?
- 12. Do the weight and size of the Vertical Reciprocating Conveyor (VRC) components exceed the capability of the on-site equipment to handle and lift the VRC components? If the weight of the load is in question, contact the PFlow Industries, Inc. Customer Support Department.
- 13. Is there a pick-point capable of lifting the necessary lift components? Contact the PFlow Industries, Inc. Customer Support Department with any questions or concerns at any time throughout the installation of this equipment.


Section 9 | Frequently Asked Questions








Sequence of Installation

The next few pages are only an example of the sequence of installation for an open mezzanine application. Refer to the detailed instructions for each sequence included in the installation manual.

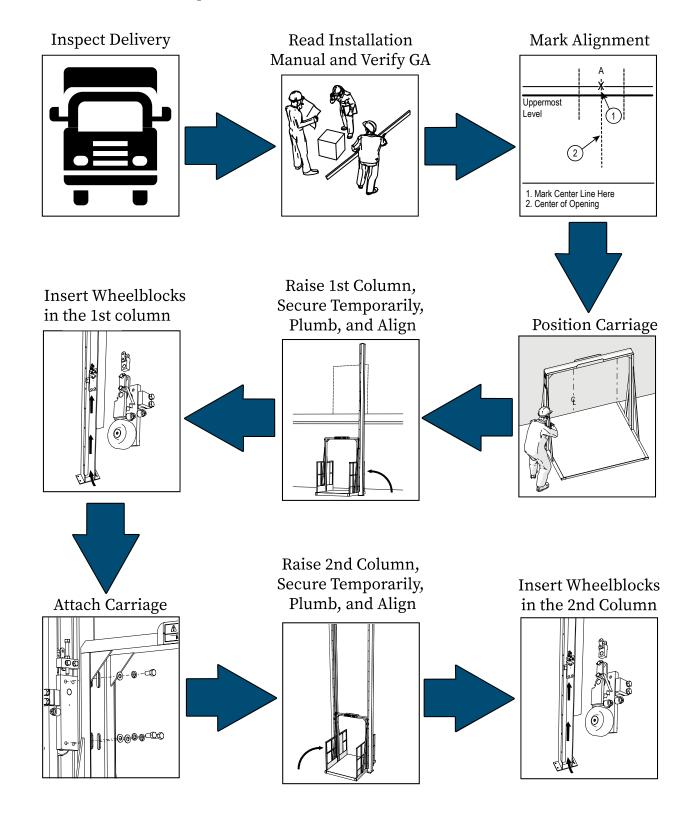

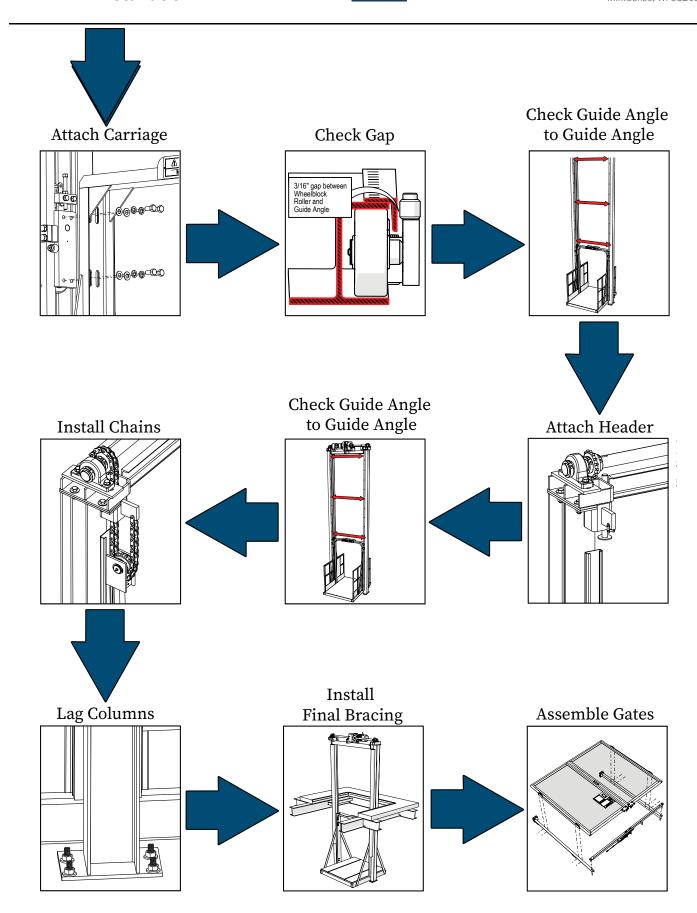

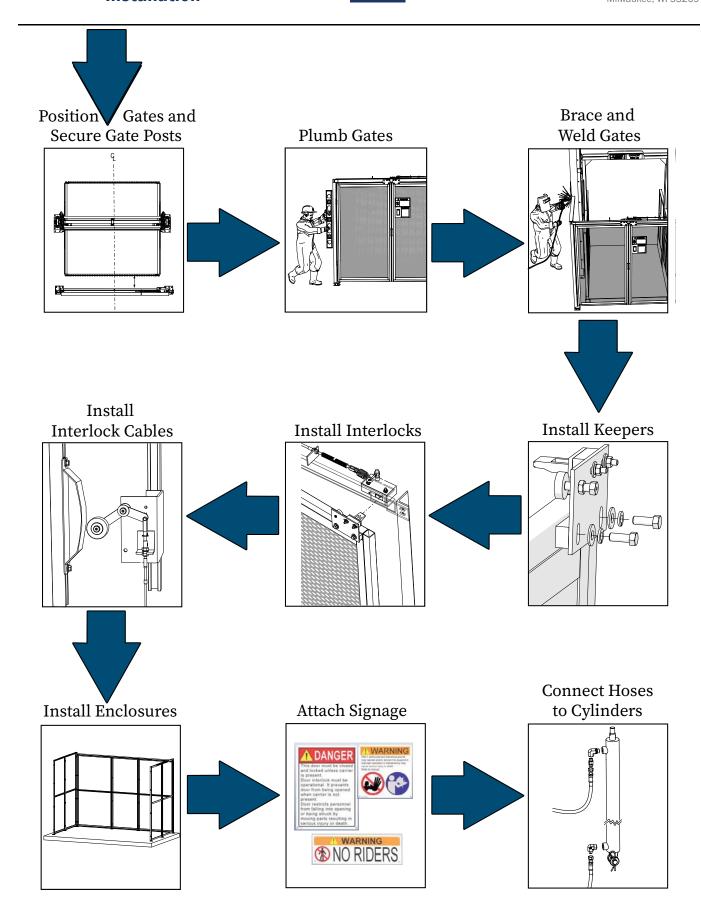

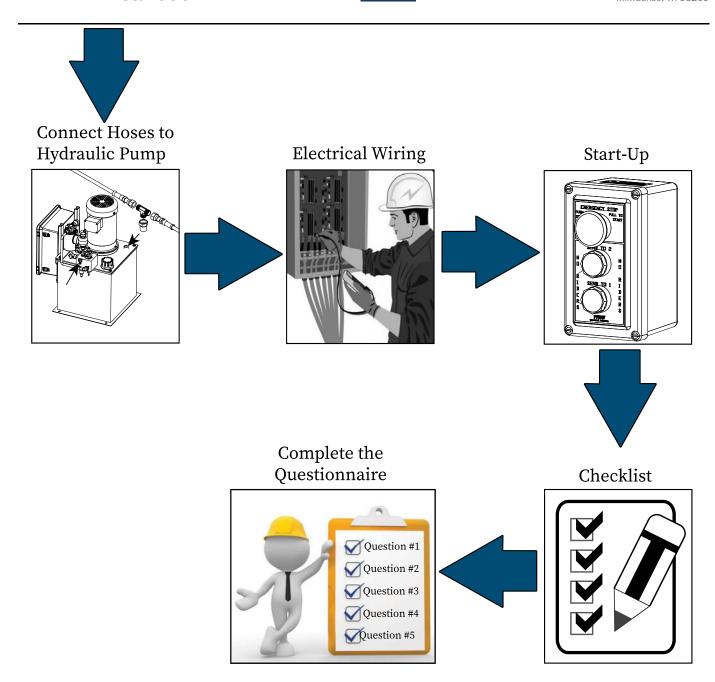

Before You Begin

Read this entire manual. Before starting the installation, verify the job site dimensions and the dimensions of the delivered materials against the PFlow Industries, Inc. General Arrangement (GA) drawing. If the site conditions or the delivered materials do not match the GA drawing, please consult the PFlow Industries, Inc. Customer Support Department.

ADANGER

Falling column hazard! The installation of this equipment requires a qualified installer with extensive knowledge and experience on how to rig, erect, and support structural steel.

NOTICE

A qualified person is defined as a person who, by possession of a recognized degree or certificate of professional standing, or by extensive knowledge, training, and experience, has successfully demonstrated his/her ability to solve problems relating to the subject matter and work.

Verify Job Site Dimensions and Carriage Orientation The Vertical Reciprocating Conveyor (VRC) was built using dimensions supplied to PFlow Industries, Inc. as listed on the General Arrangement drawing (e.g., floor-to-floor distance, pit depth, upper level opening, etc.).


These instructions are representative of an open mezzanine installation in which the carriage is placed in position before the columns are placed in position.




- 1. Verify that the column installation (e.g., no spliced columns, no restricted shaftway, etc.) allows the carriage to be placed before the columns are installed.
- 2. Mark the center line position of the opening at the uppermost level. See Figure 11-2.
- 3. To allow clearance for carriage movement, drop a plumb line from the uppermost level on the center line of the opening (Point A). The plumb line must be 1" (25mm) beyond the furthest protrusion. See Figure 11-3.
- 4. Clearly mark the tip of the plumb bob on the first floor. Point B is the center point of the effective carriage deck at the lower level. See Figure 11-4.

NOTICE


All protrusions from the floor, wall, or other areas must be removed. Plumb lines must be positioned 1" (25mm) beyond the furthest protrusion or the carriage will not move beyond the protrusion after installation. The floor may need to be extended to get the proper distance from the floor to the carriage.

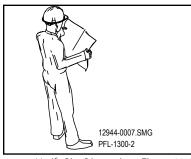


Verify Site Dimensions Figure 11-1

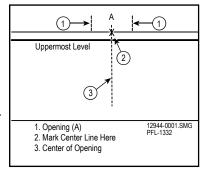

Initial Layout Figure 11-2

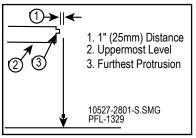

Floor-to-Floor Alignment Figure 11-3

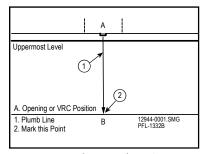

Mark Lower Floor Figure 11-4


Mark Alignment (continued)

- 5. Drop two plumb lines from the uppermost level roughly 2' (1219mm) on each side of the center line. The plumb line must be 1" (25mm) beyond the furthest protrusion. See Figure 11-5.
- 6. Locate the three marks on the first floor. Snap a chalk line between C and D. See Figure 11-6.


NOTICE Setting the carriage on 4" x 4" (102mm x 102mm) blocks approximately 6" (152mm) long will allow the chains and chain tensioner to be attached and leveled without waiting for power.

Position the Carriage


- 1. Align the edge of the carriage on the snap line.
- 2. Align the center of the effective carriage deck to the center line floor marks. See Figure 11-6 and Figure 11-7.
- 3. Level the carriage deck, shimming the underside if necessary.
- 4. Temporarily secure the carriage from moving by welding the carriage to the building structure, welding temporary anchors, or welding side tabs.

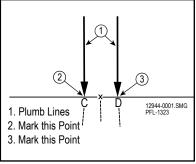

Align Floor-to-Floor Figure 11-5

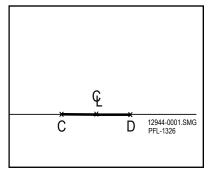

Align Lower Floor Figure 11-6

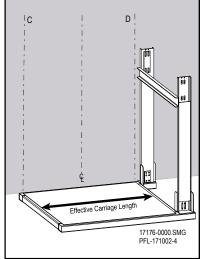

Place Carriage Figure 11-7

Before You Begin

Read this entire manual.

Before starting the installation, verify the job site dimensions and the dimensions of the delivered materials against the PFlow Industries, Inc. General Arrangement (GA) drawing. If the site conditions or the delivered materials do not match the GA drawing, please consult the PFlow Industries, Inc. Customer Support Department.

Before assembling any VRC components, review Section 13 for approved bracing guidelines.

▲ DANGER

Falling column hazard! The installation of this equipment requires a qualified installer with extensive knowledge and experience on how to rig, erect, and support structural steel.

NOTICE

A qualified person is defined as a person who, by possession of a recognized degree or certificate of professional standing, or by extensive knowledge, training, and experience, has successfully demonstrated his/her ability to solve problems relating to the subject matter and work.



Verify Dimensions Figure 12-1

Purpose

The Vertical Reciprocating Conveyor (VRC) is designed for the movement of materials only, up to its rated capacity, from one level to the next.

This section describes the installation of wheelblocks, columns, carriage, header assembly, and lift chains.

Refer to the PFlow Industries, Inc. General


Arrangement (GA) drawing to confirm the

correct orientation of each guide column

and guide angle to guide angle dimension.

Contact the PFlow Industries, Inc. Customer

Support Department immediately concerning

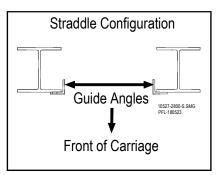

Verify Orientation Figure 12-2


Confirm the Orientation of Each Column

Each guide column must be correctly installed. There is only one correct orientation.

any discrepancies. See Figure 12-1.

Straddle Configuration Column Guidelines

The guide column face (flange) is positioned with the guide angle on the inside of the VRC. See Figure 12-2 and Figure 12-3.

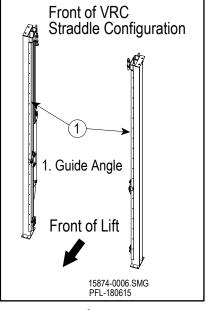


Verify Orientation Figure 12-3

Spliced Column Guidelines

This VRC may have spliced columns. These instructions are for standard 6" (152mm) wide flange columns. For other types of flange columns, see job specific drawings at the end of the installation manual.

If the spliced pieces of the columns are not assembled properly, the header assembly will not be level at the top of the columns.

Match marks are added to the spliced columns to indicate the sequence in which the columns are to be reassembled. If there is any confusion regarding the match marks or location of the columns, please contact PFlow Industries, Inc. for clarification. See Figure 12-4 and Figure 12-5.

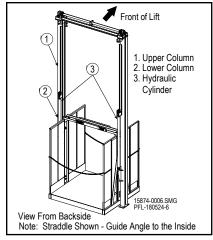

Columns Match Marked Figure 12-4

 
NOTICE

If there are more than two spliced pieces per column, see Figure 12-5 to determine placement of the spliced pieces.

NOTE Assembly is usually done vertically. It may be possible to fully assemble and weld the columns on the ground. However, it may not be possible to erect the full length spliced column.

DANGER


Falling column hazard! Properly support and temporarily brace the columns during spliced column assembly. The alignment bolts are used only to align the sections of the columns prior to welding. The alignment bolts are not strong enough to support the columns.



- 2. Remove the alignment bolts, lock washers, and nuts from the alignment tube.
- 3. Insert the alignment bolt into the two (2) alignment tubes. See Figure 12-6.
- 4. Add a lock washer and nut to the alignment bolt and tighten.
- 5. If assembling the columns in the upright position, temporarily brace all sections of the column.
- 6. Continue to bolt the remaining spliced column pieces together.

Series 21 15874-0006.SMG PFI -180523-2

Columns Match Marked Figure 12-5

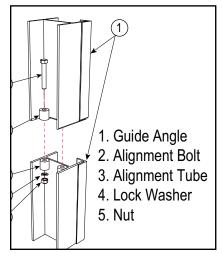

Assemble Matched Columns Figure 12-6





Assemble the

Spliced Column

Align the Spliced Column

Proper alignment is critical to the installation and operation of the VRC. The column is to be aligned from two directions and will need two (2) strings. See Figure 12-7.

- 1. Attach two (2) strings from the top to the bottom of the column, perpendicular to each other. Make sure both strings are taut.
- 2. Keep the same distance at all attachment points.
- 3. Measure between the string and the guide angle at multiple points along the length of the column.
- 4. Maintain an equal distance between the string and the guide angle down all column sections. Correct any discrepancies.

1. Clamps 2. Rod 3. String PFI-1383 4. Tape Measure

Spliced Column Alignment Figure 12-7

Tack Weld the Spliced Column


Welding must be completed according to the standards and guidelines of the latest edition of AWS D1.1.

Weld filler material must be a minimum of E60xx.

NOTICE

To avoid column twist, avoid excessive heat while welding. Weld in a manner to allow the heat to dissipate.


- 1. Tack weld the spliced column.
- 2. Do not weld the column flange surface located behind the guide angle. See Figure 12-8.

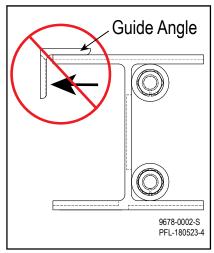

Welding Notes Figure 12-8

Spliced Column Finish Welding Details

- 1. Finish weld all splice joints per the welding details shown in Figure 12-9.
- 2. Grind the welded area flat on both surfaces of the guide angle to allow the wheelblock shoe and guide roller enough clearance for vertical carriage travel.
- 3. Grind all surface welds on the column flat and smooth where the wheelblock travels.
- 4. Remove any weld splatter from the inside of the guide angle surface.
- 5. Remove any weld splatter from the inside of the column surfaces.
- 6. Clean and paint all welded areas.

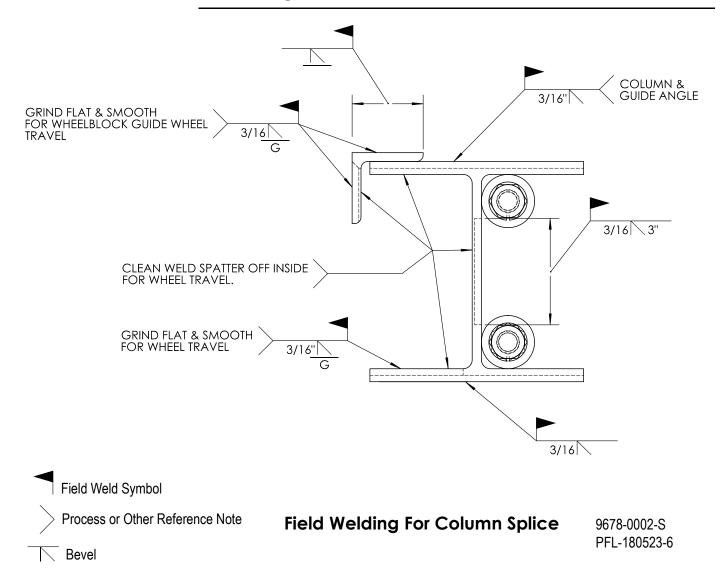

Welding Notes Figure 12-9




Raise and Secure the Column

ADANGER

Falling column hazard! Properly support the columns during installation. Do not assume that the bolted connection on the carriage and wheelblocks will prevent the columns from falling.

- 1. Prepare to raise the first column into position.
- 2. Review the weight of the column and the header assembly to confirm that the pick point will withstand the weight.
- 3. Use a suitable hoisting system that complies with local regulations.
- 4. Put a sling around the column using proper rigging techniques and attach the lifting device.
- 5. Carefully and slowly lift the column to an upright position.
- 6. Move the column closer to the carriage about 6" (152mm) away and secure the column. See Figure 12-10.
- 7. Make sure the column is secure and cannot fall.

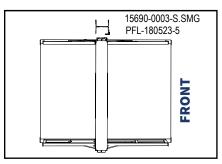

Sliding Column Figure 12-10



Prepare the Upper Wheelblock


WARNING




Crush hazard! The safety cam on the wheelblock is spring-tensioned and can crush fingers if it unexpectedly rotates. Keep hands and fingers away from the cam area.

- 1. Remove the six (6) hex head bolts from the upper wheelblocks and the outer guide roller. See Figure 12-11.
- 2. Remove the wheelblock shoe. See Figure 12-12.
- 3. Use an allen wrench to remove the outer guide roller. See Figure 12-12.
- 4. Carefully rotate the spring tensioned safety cam vertically. See Figure 12-12.
- 5. Insert the 5/8"-11 x 1.5" setscrew (provided) from the back side of the wheelblock into the tapped hole in the base. Tighten the setscrew against the safety cam behind the pin to lock the safety cam vertically in place. See Figure 12-13 and Figure 12-14.



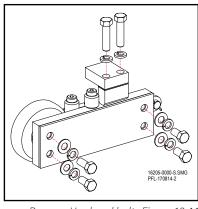

Remove Hex head bolts Figure 12-11

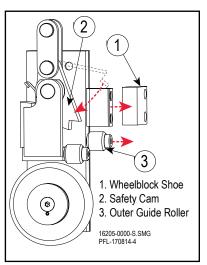



Rotate the Safety Cam Figure 12-12



WARNING

Carriage drop hazard! Before operating the VRC, replace the setscrew in the safety cam with the previously removed hex head screw and washer. Otherwise the safety cam will not function.

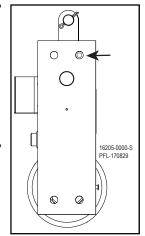


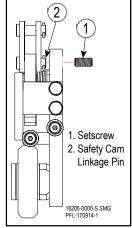


Insert Setscrew Figure 12-13 Insert Setscrew Figure 12-14

Insert the Wheelblocks and the Optional Carriage Tensioner

 
- 1. With the wheel facing the inside of the column, insert the upper wheelblock in the column through the notch in the guide angle at the base of the column. See Figure 12-15.
- 2. Slide the upper wheelblock up inside the column to about the height of the slots in the carriage uprights. See Figure 12-16.
- 3. Temporarily secure the upper wheelblock to the column.
- 4. Reattach the wheelblock shoe and the outer guide roller. See Figure 12-17.
- 5. Insert the optional carriage tensioner if supplied. See Figure 12-18.
- 6. Remove the hex head bolts on the lower wheelblock.
- 7. With the wheel facing the inside of the column, insert the lower wheelblock. See Figure 12-19.




Insert Upper Wheelblock Figure 12-15

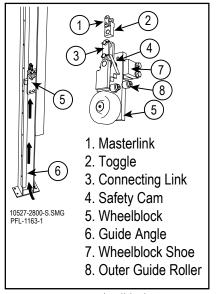


Insert Upper Wheelblock Figure 12-16

 

Reattach Shoe and Roller Figure 12-17

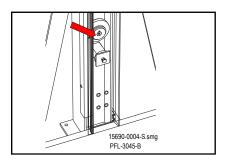

Insert Optional Carriage Tensioner Figure 12-18

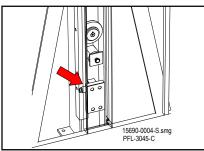


Insert Lower Wheelblock Figure 12-19

Attach the Upper Wheelblock

- 1. Install the jackscrew block assembly to the carriage upright above the upper wheelblock. See Figure 12-20.
- 2. Carefully slide the upright column closer to the carriage.
- 3. The upper wheelblock should be installed at the middle of the carriage upright adjusting slots. Insert three (3) of the hex head bolts through the slots in the carriage upright and into the upper wheelblock. Tighten the bolts. A minimum thread engagement of 5/8" (16mm) is required. Leave the setscrew in place at this time. See Figure 12-20 and Figure 12-21.

Attach the Lower Wheelblock

- 1. Insert the four (4) hex head bolts through the holes in the carriage upright and into the lower wheelblock. Tighten the hex head bolts. See Figure 12-22.
- 2. Make certain that the column is properly secured to avoid toppling before installing the next column.

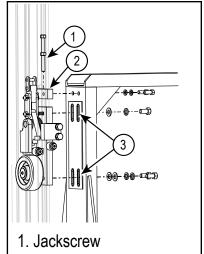


- 2. Jackscrew Block Assembly
- 3. Slots


15690-0004-S.SMG PFL-180523-7

Upper Wheelblock Mounting Figure 12-20

NOTE Further adjustment is necessary to complete alignment.

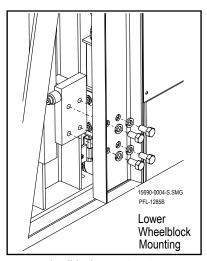

Lower Wheelblock Mounting Figure 12-22

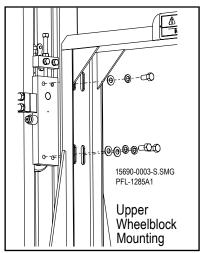

Upper Wheelblock Mounting Figure 12-21



Raise and Secure the 2nd Column

▲ DANGER

Falling column hazard! Properly support the columns during installation. Do not assume that the bolted connection on the carriage and wheelblocks will prevent the columns from falling.

Raise and secure the 2nd column, repeating the same procedures outlined on Section 12, page 5 through page 8.

- Insert the Wheelblocks and Optional Carriage Tensioner
- Attach the Upper Wheelblock
- Attach the Lower Wheelblock


Verify the Guide Angle to Guide Angle Alignment

Refer to the PFlow Industries, Inc. General Arrangement (GA) drawing to confirm the guide angle to guide angle dimension. Contact the PFlow Industries, Inc. Customer Support Department immediately concerning any discrepancies.


NOTICE

Column alignment is *critical* for proper VRC operation. Alignment between the column guide angles must be verified during and after column installation.

- 1. Measure the distance between guide angles. See Figure 12-23.
- 2. Verify the distance at multiple locations along the columns. See Figure 12-24.
- 3. Maintain the same guide angle to guide angle dimension from the top to the bottom of the VRC columns (+/- 1/16"). See Figure 12-24.

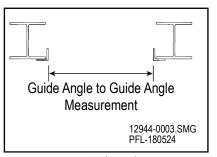

Guide Angle Measurement Figure 12-23

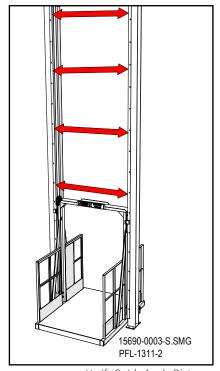

Verify Guide Angle Distance Figure 12-24

Align the Wheelblocks to the **Guide Angle**

Align the outside wheelblock guide roller to the column guide angle to maintain a 3/16" (5mm) (+/- 1/16") [2mm] gap on both sides of the column guide angle. If the gap is too large or too small, the carriage will bind on the guide angles. Repeat for all four (4) wheelblocks. See Figure 12-25.


HINT

To aide in maintaining a guide angle to guide angle measurement during the column alignment, tape a 3/16" (5mm) shim to each column, on the outside of the column guide angle. Be sure to remove the shims before lowering or lifting the carriage.




- 1. Make sure both columns are plumb in both directions. See Figure 12-26.
- 2. Make sure the inside of the wheelblock shoe and the outside of the guide angle are parallel to each other.


NOTICE Column twist must be avoided. See Figure 12-27. If the gap between the wheelblock shoe and the face of the guide angle changes from left to right of the shoe block, the columns may need to be adjusted to get an even gap.

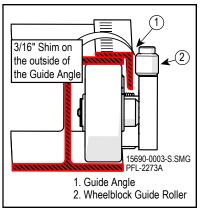

Verify Gap Dimension Figure 12-25

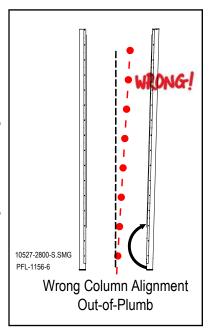

Column Alignment Out-of-Plumb Figure 12-26

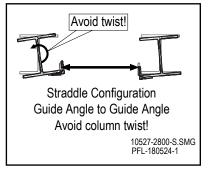

Avoid Twist Figure 12-27




Install the Header Assembly

ACAUTION

To prevent personal injury or damaging the header assembly, attach rigging only to the header assembly weldment when lifting the header assembly. Do not attach rigging to any header assembly components (e.g., shaft, pillow blocks, etc.).

- 1. Verify that the columns are firmly secured in place.
- 2. Review the weight of the header assembly to confirm that the pick point will withstand the weight of the header assembly.
- 3. Use a suitable lifting system that complies with local regulations.
- 4. Lift the header assembly into position and place on the mounting pads at the top of each column. See Figure 12-28.
- 5. Verify that the assembly is level. Shim if necessary.
- 6. Install the hex head bolts, washers, and lock washers as shown in Figure 12-28. Snug the hex head bolts down to allow for final adjustments.

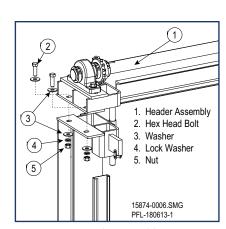


Header Assembly Figure 12-28

NOTE Do not weld at this time.

Review the Columns

Be sure to plumb and correct column twist one column at a time. See Figure 12-29.

- 1. Plumb the columns on each side.
- 2. Recheck the guide angle to guide angle dimension at three (3) or more locations along the columns. Make sure there is no column twist.
- 3. Review the Bracing Instructions in Section 13 of this installation manual.

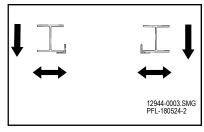


Review Columns for Plumb Figure 12-29


NOTICE

Bracing must resist all dynamic operational loads. The General Arrangement (GA) drawing states the static lateral load that the bracing must support. Each column requires bracing in both front-toback and side-to-side directions.


- 4. A job specific bracing drawing may be provided. Verify drawing details prior to beginning field bracing work.
- 5. Tack weld the upper floor-to-column braces to the appropriate anchor point of the floor or mezzanine. See Figure 12-30.
- 6. Recheck the guide angle to guide angle dimension and plumb.
- 7. Verify the proper floor anchor size and type for the job site. Special conditions (e.g., seismic site location) require that proper anchoring and bracing methods are used.
- 8. When the columns are plumb, lag the column base plates to the floor according to local or state codes especially in seismic zones. PFlow Industries, Inc. recommends 1/2" x 4" (13mm x 102mm) long wedge style anchors. See Figure 12-31.
- 9. Recheck the guide angle to guide angle dimension and verify that the gap from the column to the outside wheelblock guide roller is 3/16" (5mm).
- 10. Fully field weld the column braces to the face of the upper floor or mezzanine.
- 11. Add side bracing and fully weld.
- 12. Recheck the columns guide angle to guide angle dimension and plumb.
- 13. Fully tighten the hex head bolts on the header assembly. See Figure 12-32.

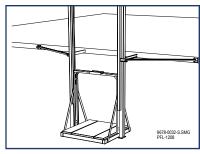

Tack Weld Bracing Figure 12-30

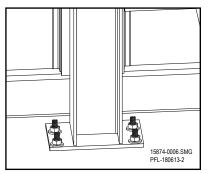

Lag the Column Base Plates Figure 12-31

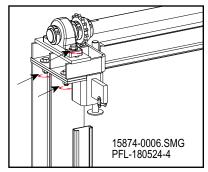

Tighten Hex Head Bolts Figure 12-32

NOTE Do not weld the header assembly to the column at this time.



<u>^</u> WARNING



Entanglement hazard! Remove gloves, secure long hair, wear snug-fitting clothing, and avoid wearing jewelry while working with chains.




Crush hazard! Keep hands outside and above the chain. If the lift chain does not reach the wheelblock, carefully work the lift chain around the sprocket until the lift chain reaches the wheelblock. Lift the chain from the sides. If the chain drops unaided, the weight of the chain will crush fingers. Do not allow the chain to come off the sprocket.

Install the **Lift Chains**

NOTE The lift chain is usually packaged in 10' (3048mm) lengths. Depending on the required overall chain length, there may be two (2) smaller sections, one for each column. Make sure the lift chain is divided into two (2) equal lengths.

- 1. Remove any plugs from the hydraulic cylinder ports.
- 2. Extend the hydraulic cylinder rod up towards the header assembly. See Figure 12-33. The use of a come-along is recommended.
- 3. Clamp the extended hydraulic cylinder sprocket housing into place just below the cylinder sprocket to prevent the retraction of the cylinder rod.
- 4. Assemble the lift chain into two (2) equal lengths.
- 5. Place chain over the header assembly sprocket just above the chain tube block. Make sure the retaining clip side of the master link faces the carriage for easy access. See Figure 12-33.
- 6. Clamp and secure both sides of the lift chain to the sprocket to prevent the lift chain from falling down the column.

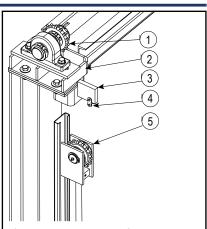

- 1. Header Assembly Sprocket
- 2. Chain Tube Block
- 3. End Block
- 4. Master Link
- 5. Extended Cylinder with Sprocket


15874-0006.SMG PFL-180525

> Extend the Hydraulic Cylinder Figure 12-33

Install the Lift Chains (continued)

- 7. Feed the short end of the lift chain down the chain tube block. Make sure the chain goes down without any knots or kinks.
- 8. Work the lift chain under the extended cylinder sprocket and up to attach the lift chain to the pre-attached master link on the column. See Figure 12-34.
- 9. Feed the longer length of lift chain down to the wheelblock. Make sure the chain goes down the column without any knots or kinks.
- 10. Attach the longer length of lift chain to the wheelblock. See Figure 12-35.

NOTE It may be necessary to slide the header sprocket to align the chain inside the chain tube block. If necessary, loosen the setscrews on each side of the sprocket and split collars. Move the sprocket to center the chain inside the chain tube block. Apply Loctite® Blue 242® to all the sprocket and split collar setscrews and torque per the table:

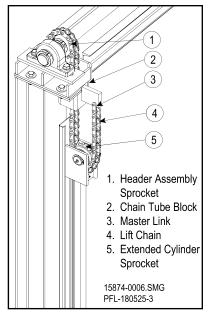


Drop the Lift Chain Down the Chain Tube Block Figure 12-34

Setscrew Diameter	5/16"	3/8"	1/2"	5/8"	3/4"
Torque lb-ft (N-m)	13 (18)	22 (30)	51 (69)	110 (149)	179 (243)

11. Remove the clamps on the lift chain near the header sprocket.

Install the lift chain for the other column using steps 1-11.

After the chains for both columns have been installed, remove the clamps below the cylinder sprocket.

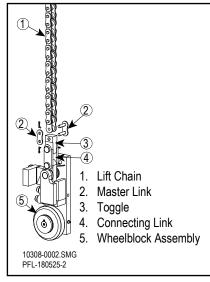


Attach the Lift Chain to the Wheelblock Figure 12-35

Adjust the Length of the Lift Chains

- 1. Adjust the length of lift chain in each column to be the same length by working the lift chain around the sprockets.
- 2. If a setscrew was used to temporarily secure the safety cam, remove the setscrew, replace with the wheelblock bolt, and tighten the wheelblock bolt.

Apply Loctite® and Tighten

1. Apply Loctite® Blue 242® to the header sprocket setscrews (2) and cylinder sprocket setscrews. See Figure 12-36, Item 2.

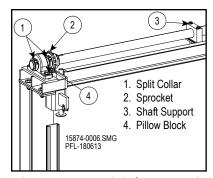

Tighten Setscrews and Shaft Support Bolts Figure 12-36

2. Tighten the sprocket setscrews to a defined torque setting per the list below:

- 1	Setscrew Diameter	5/16"	3/8"	1/2"	5/8"	3/4"
	Torque lb-ft (N-m)	13 (18)	22 (30)	51 (69)	110 (149)	179 (243)

- 3. Apply Loctite® Blue 242® to all split collar setscrews and tighten the screws to a defined torque setting of 28 lb-ft (38 N-m). See Figure 12-36, Item 1.
- 4. Fully tighten and torque the screws for the pillow block bearing See Figure 12-36, Item 4.
- 5. Tighten the shaft support bolts.

Section 12 | Column Setup





www.pflow.com

Before You Begin

Read this entire manual. Verify the job site dimensions against the PFlow Industries, Inc. General Arrangement (GA) drawing before starting the installation. If the site conditions do not match the GA drawing, please consult the PFlow Industries, Inc. Customer Support Department.



ADANGER

Falling column hazard! The installation of this equipment requires a qualified installer with extensive knowledge and experience on how to rig, erect, and support structural steel. Be sure to properly support the columns, posts, and panels during installation. The carriage and wheelblocks cannot prevent the columns from falling. Do not depend on the base plates or feet to prevent the columns, posts, and panels from falling.

NOTICE

A qualified person is defined as a person who, by possession of a recognized degree or certificate of professional standing, or by extensive knowledge, training, and experience, has successfully demonstrated his/her ability to solve problems relating to the subject matter and work.

ACAUTION



Lifting hazard! Components and accessories may be heavy. Use the appropriate lifting apparatus or get help when moving or lifting.

Required Anchoring and Bracing Guidelines

Anchoring and bracing of the Vertical Reciprocating Conveyor (VRC) is *required*. Illustrations in this section are to be used for reference only. Job site conditions may require a different alternative to those PFlow Industries, Inc. suggests in this document. A job specific bracing drawing may be provided. Verify drawing details prior to beginning any field bracing work. Before any final field welding is done, verify that the VRC columns and drivebase are aligned correctly.

All field welding must conform to the latest edition of AWS D1.1. The weld filler material is to be a minimum of E60xx. Unless indicated otherwise, all welds are a minimum of 3/16" continuous fillet.

- Fully weld horizontal floor braces.
- Fully weld support bracing at upper levels (unless shown otherwise).
- Fully weld all VRC connections and drive base mounting angles.




Review GA Drawing Figure 13-1

Side to Side and Front to Back Bracing

Side to side and front to back bracing of the Vertical Reciprocating Conveyor (VRC) is required. Bracing of the VRC and enclosures is the responsibility of the installer.

It is the customer's responsibility to make sure that the job site conditions have a structure with enough strength to be used for bracing in order to withstand the forces of weight and gravity.

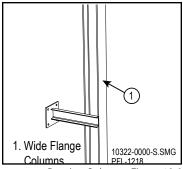

Bracing Columns Figure 13-2

NOTE

If PFlow Industries, Inc. prepared seismic bracing materials, the bracing requirements and the General Arrangement (GA) drawing are provided in the shipping packet.

Bracing Supplies

Typically, for a two-level VRC, PFlow Industries, Inc. supplies:

- (2) 10' (3048mm) lengths of 4" (102mm) channel or
 (2) 10' (3048mm) lengths of wall tube
 2" x 4" x 1/4" (51mm x 102mm x 6mm)
- (2) 10' (3048mm) lengths of angle per supplied gate 1-1/2" x 1-1/2" x 1/8" (38mm x 38mm x 3mm)
- (2) to (4) mounting plates


Each additional level is supplied with the following:

- (1) 10' (3048mm) length of channel or
 (1) 10' (3048mm) length of wall tube
 2" x 4" x 1/4" (51mm x 102mm x 6mm)
- (1) 10' (3048mm) length of angle per supplied gate 1-1/2" x 1-1/2" x 1/8" (38mm x 38mm x 3mm)
- (2) mounting plates

NOTICE

PFlow Industries, Inc. does not supply anchor bolts nor guarantee that the above material is sufficient for the application. It is the installer's responsibility to verify the information included in the shipping packet prior to commencing work.

Anchoring Guidelines

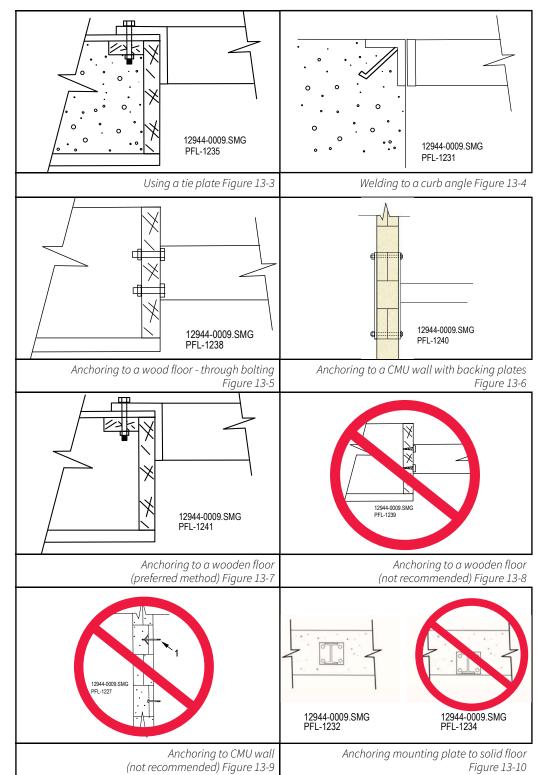


Bracing Guidelines



The following guidelines illustrate acceptable methods of attaching bracing to a building.


▲ DANGER

Falling column hazard! To avoid serious personal injury or death, do not lift the carriage or load the VRC until the VRC bracing is adequately sized and welded.

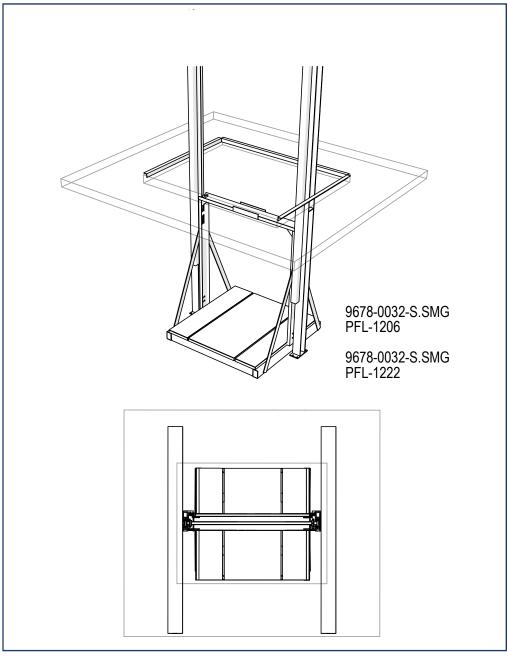


Through a Floor Figure 13-11

Bracing Guidelines

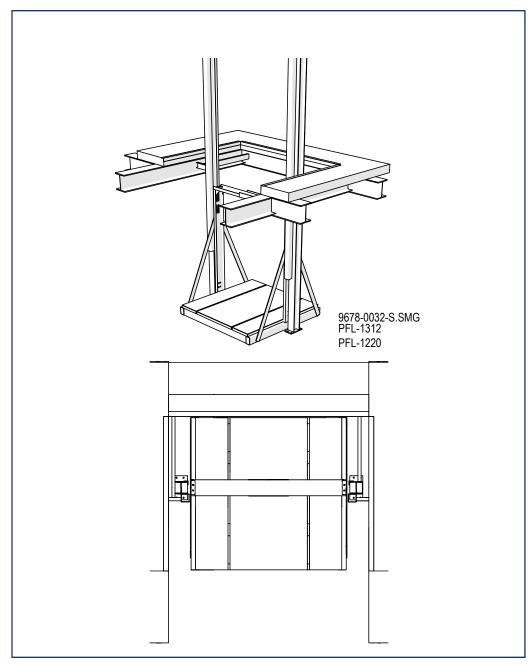


Notch Mezzanine Figure 13-12

Bracing Guidelines

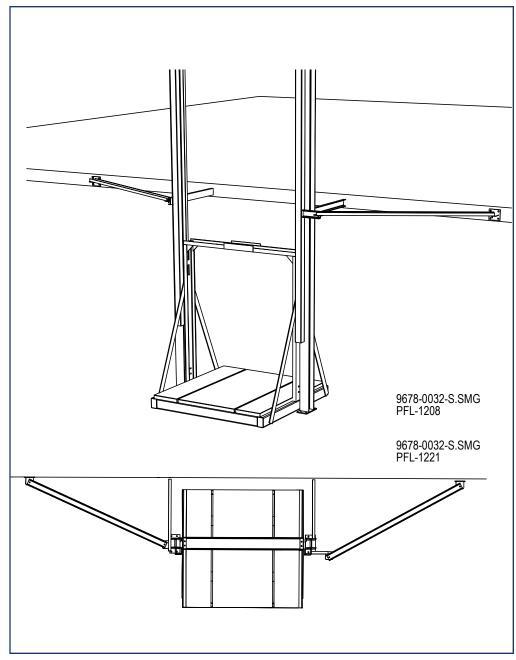

Open Mezzanine Figure 13-13

Bracing Guidelines

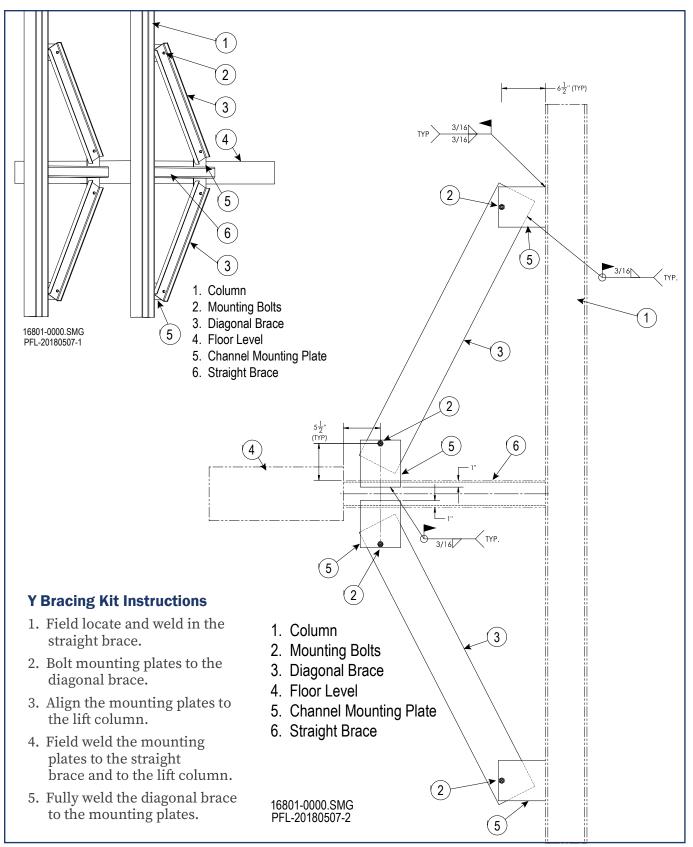

Section 13 | Bracing




www.pflow.com P 414 352 9000 F 414 352 9002 6720 N. Teutonia Ave. Milwaukee, WI 53209




Adjust the Optional Carriage Tensioner

The optional carriage tensioner reduces carriage rock and is typically a green wheel. The optional carriage tensioner must be installed before the lower wheelblock is in place. Adjustment is done after all final bracing is complete.


- 1. Align the wheel against the guide column flange. See Figure 15-1.
- 2. Adjust the carriage tensioner to the correct amount of tension by placing a wrench on the square portion of the tensioner body and a second wrench on the mounting bolt. See Figure 15-2.
- 3. Apply pressure to the tensioner body in the appropriate direction until the wheel is properly tensioned. The proper tension is between 20° and 30°.
- 4. Hold the tensioner body in position and tighten the mounting bolt to the recommended securing torque of 63 ft/lb. See Figure 15-3.
- 5. After the carriage has run up and down, visually inspect the carriage tensioner for proper alignment.

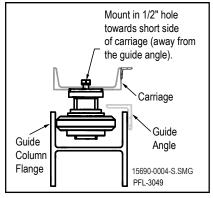

Carriage Tensioner Alignment Figure 15-1

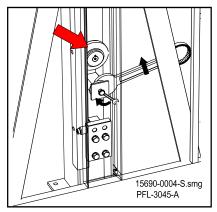

Adjust Carriage Tensioner Figure 15-2

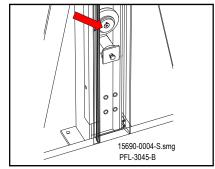

Tighten Mounting Bolt Figure 15-3

Section 15 | Optional Carriage Tensioner



www.pflow.com P 414 352 9000 F 414 352 9002 6720 N. Teutonia Ave. Milwaukee, WI 53209



Before You Begin

Read this entire manual.

Before starting the installation, verify the job site dimensions and the dimensions of the delivered materials against the PFlow Industries, Inc. General Arrangement (GA) drawing. Review and verify the enclosure positions and attachment fit-up to the gate post enclosure angle. If the site conditions do not match the GA drawing, please consult the PFlow Industries, Inc. Customer Support Department.



ADANGER

Falling gate hazard! The installation of this equipment requires a qualified installer with extensive knowledge and experience on how to rig and erect structural steel. Make sure to properly support, tie off, or temporarily brace the gate posts, gate panels, and gate assembly during installation. Do not depend on the gate post feet to support the gate posts while the gate is being positioned or assembled. Final bracing of the gate assembly must be to the Vertical Reciprocating Conveyor (VRC) or building structure. The use of structural angle is recommended.



Falling Hazard! The gate panel safety latch may not be operational while the gate is being installed. If you must leave a gate or gate panel unattended, put up barriers and signs warning personnel to stay clear.

ACAUTION



Lifting hazard! Components and accessories are heavy. To prevent serious personal injury, use the appropriate lifting apparatus, tie offs, or help when moving, lifting or assembling the components or accessories.

NOTICE

A qualified person is defined as a person who, by possession of a recognized degree or certificate of professional standing, or by extensive knowledge, training, and experience, has successfully demonstrated his/her ability to solve problems relating to the subject matter and work.


Identify Components

Gate components, posts, panels, and header assembly have color coded tags. Each gate tag is a different color.

Level	Tag Color
1st (bottom)	Green
2nd	Yellow
3rd	Red
4th	Blue
Other	Cream


The preferred method of installing a gate is to pre-assemble the full gate assembly on the floor, secure the pieces, and then stand it up. If for some reason pre-assembly is not possible, use these instructions as a general guide for the assembling, positioning, and securing of the gates.

Assemble the Sliding Gate

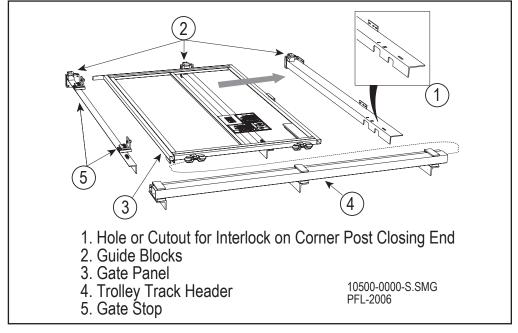

- 1. Lay the three (3) gate posts on the floor parallel to each other.
- 2. Position the gate post with the hole or cutout for the interlock on the closing end.
- 3. Position the post with two (2) guide block mounting holes near the base plate in the center. See Figure 16-1.
- 4. Position the third post (with gate stops) on the opening end.
- 5. Bolt the trolley track header to the gate posts.
- 6. Place the gate panel face down towards the ground and slide the gate panel into the trolley track header.
- 7. Bolt the guide block to the middle post. See Figure 16-2.
- 8. Slide the gate to its closed position.
- 9. Add the remaining guide blocks.

Sliding Gate Layout Figure 16-1

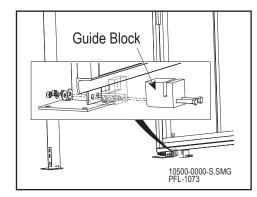

Bolt Guide Block Figure 16-2

Assemble the Sliding Gate (continued)

- 10. Locate and mark the center of the gate panel on the gate panel with a pencil. See Figure 16-3.
- 11. Measure the outside edge to the outside edge of the carriage and mark the center line with a pencil. See Figure 16-4.
- 12. Position a carpenter square on the edge of the carriage to extend the center line onto the floor 10" (254mm) away from the carriage. See Figure 16-4.
- 13. Mark a chalk line on the floor to ensure the center of the gate is on the center line of the carriage. See Figure 16-4.




NOTE The ideal position of the gate panel is a maximum of 6" (152mm) from the inside of the gate panel to the front edge of the carriage. Local codes may have specific requirements concerning this distance.


> 14. When the measurement from the gate panel to the carriage has been determined, snap a chalk line to identify the position of the gate panel parallel to the carriage. See Figure 16-5.

Install the Gate Post Extensions


Gate post extensions (if supplied) are to be bolted to the bottom of the gate posts before the gate post is raised. Refer to Section 20 for instructions.

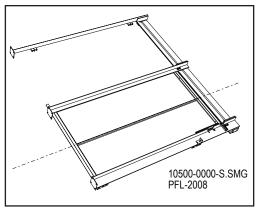

Mark Center Line of Sliding Gate Layout Figure 16-3

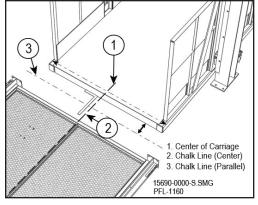

Establish Center Line Figure 16-4

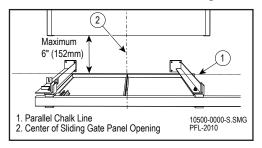

Alignment Figure 16-5



Raise and Secure the Sliding Gate

Anchor the Gate Post Base Plates

Plumb and Square the Gate

Install Support Braces

Verify Gate Operation

ADANGER

Falling gate hazard! Be sure to properly support, tie off, or temporarily brace the gate posts, gate panels, and gate assembly during installation. Do not depend on the gate post feet to support the gate posts while the gate is being positioned or assembled. Final bracing of the gate assembly must be to the Vertical Reciprocating Conveyor (VRC) or building structure. The use of structural angle is recommended.

- 1. Raise and secure the gate assembly. The track and gate are to be facing away from the carriage.
- 2. Align the center of the closed gate to the center of the carriage. See Figure 16-6.
- 3. Align the inside of the gate panel on the parallel chalk line. See Figure 16-5.
- 4. Drill and anchor the gate post base plates to the floor with 3/8" anchors, 3-1/2" (89mm) long.


Center Line 10500-0000-S SMG PFL-2009

Align the Raised Gate Assembly Figure 16-6


ADANGER

Falling gate hazard! The anchor hole depth should always be deeper than the length of the anchor bolt. The recommended wedge anchor size is 3/8" diameter by 3-1/2" (89mm) long.

- 1. Plumb and square the gate posts using a plumb bob or a level that is 4' (1219mm) or longer. See Figure 16-7.
- 2. Measure from the gate post to the Vertical Reciprocating Conveyor (VRC) column.
- 3. Cut two (2) 1-1/2" x 1-1/2" (38mm x 38mm) steel angle support braces and weld to each gate post and to the VRC columns or wall. See Figure 16-8.
- 4. Tighten all bolts.
- 5. Verify that the gate slides easily from side to side.
- 6. Confirm that the gate is plumb and square.
- 7. Weld the trolley track header to the gate posts.
- 8. Make sure the gate opens and closes properly. Adjust the gate panel as necessary. Additional bracing may be necessary.

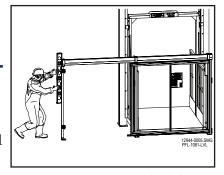

Plumb the Gate Figure 16-7

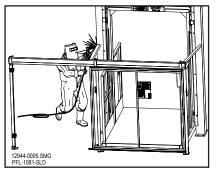


Weld Support Braces Figure 16-8

Install the Gate Interlock

Verify the Gate
Interlock Operation

Install the gate panel interlock and interlock keeper assembly. See Figure 16-9. Refer to the interlock installation section in this manual.


- 1. Verify that the gate panel slides smoothly.
- 2. Verify that the gate door opens when the carriage is present and does not open when the carriage is not present.
- 3. Verify that the gate panel remains locked when the carriage leaves the floor level.

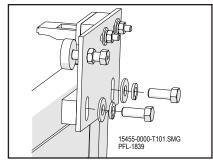

Install Interlock Keeper Assembly Figure 16-9


Adjust the Interlock Keeper Assembly Magnet

- 1. With the VRC carriage on the same level as the gate, make sure that the interlock keeper assembly magnet holds the panel closed until the operator pulls open the panel. The magnet requires field adjustment to fine tune the panel "held closed" feature.
- 2. Adjust the panel position by backing off the magnet locking nut. See Figure 16-10.
- 3. Rotate the magnet hex head bolt to position the panel.
- 4. Secure the magnet position by tightening the magnet locking nut.

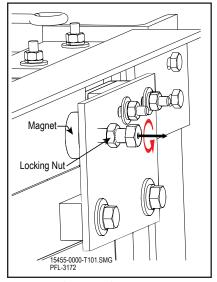


Adjust Panel Position Figure 16-10

Assemble the Bi-Parting Swing Gate

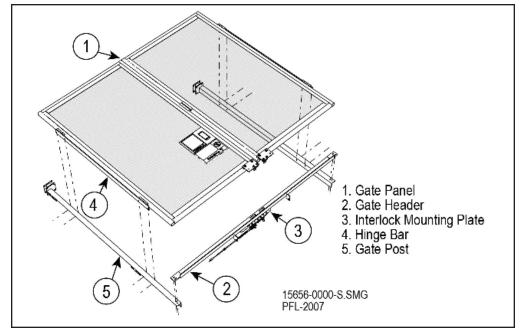

- 1. Lay the two (2) gate posts on the floor parallel to each other. See Figure 16-11.
- 2. Place the gate header at the top of the gate posts and bolt the gate header to each gate post. See Figure 16-12 for correct orientation.
- 3. Place the gate panels face up and position between the parallel gate posts and align with the hinge bars.
- 4. Bolt each hinge bar to its respective gate post. See Figure 16-12.

Bi-Parting Swing Gate Layout Figure 16-11

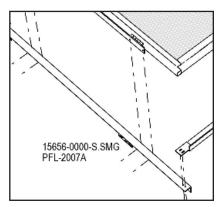

Bi-Parting Swing Gate Layout Figure 16-12

Assemble the Bi-Parting Swing Gate (continued)


- 5. Locate and mark the center of the gate assembly on the gate assembly with a pencil (where the gate panels meet in the center.) See Figure 16-13.
- 6. Measure the outside edge to the outside edge of the carriage to locate the center line. Mark the center line with a pencil on the top of the carriage deck. See Figure 16-13.
- 7. Position a carpenter square on the edge of the carriage to extend the center line onto the floor 10" (254mm) away from the carriage. See Figure 16-13.
- 8. Mark a chalk line on the floor to ensure the center of the gate assembly is on the center line of the carriage. See Figure 16-13.

NOTE The ideal position of the gate panel is a maximum of 6" (152mm) from the inside of the gate panel to the front edge of the carriage. Local codes may have specific requirements concerning this distance.


> 9. When the measurement from the gate panel to the carriage has been determined, snap a chalk line to identify the position of the gate panel parallel to the carriage. See Figure 16-13.

Install the Gate Post Extensions

Gate post extensions (if supplied) are to be bolted to the bottom of the gate posts before the gate post is raised. Refer to Section 20 for instructions.

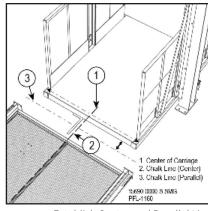

Establish Center and Parallel Line Figure 16-13

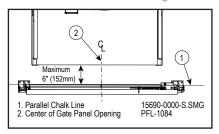

Alignment Figure 16-14



Raise and Secure the Gate Assembly

Anchor the Gate Post Base Plates

Plumb and Square the Gate


Install Support Braces

Verify the Gate Panel Swing

ADANGER

Falling gate hazard! Be sure to properly support, tie off, or temporarily brace the gate posts, gate panels, and gate assembly during installation. Do not depend on the gate post feet to support the gate posts while the gate is being positioned or assembled. Final bracing of the gate assembly must be to the Vertical Reciprocating Conveyor (VRC) or building structure. The use of structural angle is recommended.

- 1. Raise and secure the gate assembly.
- 2. Align the center of the closed gate to the center of the carriage. See Figure 16-14 on the previous page.
- 3. Align the backside of the gate panels on the parallel chalk line. See Figure 16-14 on the previous page.
- 4. Drill and anchor the gate post base plates to the floor with 3/8" anchors, 3-1/2" (89mm) long.

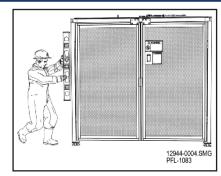


Plumb the Gate Figure 16-15


A DANGER

Falling gate hazard! The anchor hole depth should always be deeper than the length of the anchor bolt. The recommended wedge anchor size is 3/8" diameter by 3-1/2" (89mm) long.

- 1. Plumb and square the gate posts using a plumb bob or a level that is 4' (1219mm) or longer. See Figure 16-15.
- 2. Measure from the gate post to the Vertical Reciprocating Conveyor (VRC) column.
- 3. Cut two (2) 1-1/2" x 1-1/2" (38mm x 38mm) steel angle support braces and weld to each gate post and to the VRC columns or wall. See Figure 16-16.
- 4. Tighten all bolts.
- 5. Verify the gate panel swing for proper site operational clearance.
- 6. Confirm that the gate is plumb and square.
- 7. Weld the gate header to the gate posts. See Figure 16-17.

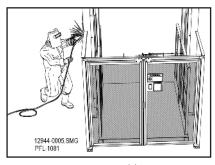

Weld Support Braces Figure 16-16

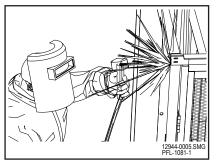


Weld Gate Header to Gate Posts Figure 16-17

Install the Gate Interlock

Install the gate panel interlock and interlock keeper assembly. See Figure 16-18. Refer to the interlock installation section in this manual.

Verify the Gate Interlock Operation


- 1. Verify that the gate panel swings smoothly.
- 2. Verify that the gate door opens when the carriage is present and does not open when the carriage is not present.
- 3. Verify that the gate panel remains locked when the carriage leaves the floor level.

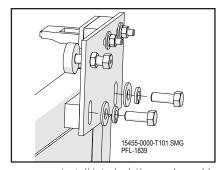

Install Interlock Keeper Assembly Figure 16-18


Adjust the Interlock Keeper Assembly Magnet

- 1. With the VRC carriage on the same level as the gate, make sure that the interlock keeper assembly magnet holds the panel closed until the operator pulls open the panel. The magnet requires field adjustment to fine tune the panel "held closed" feature.
- 2. Adjust the panel position by backing off the magnet locking nut. See Figure 16-19.
- 3. Rotate the magnet hex head bolt to position the panel.
- 4. Secure the magnet position by tightening the magnet locking nut.

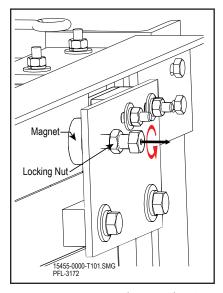


Adjust Panel Position Figure 16-19

Assemble the Swing Gate

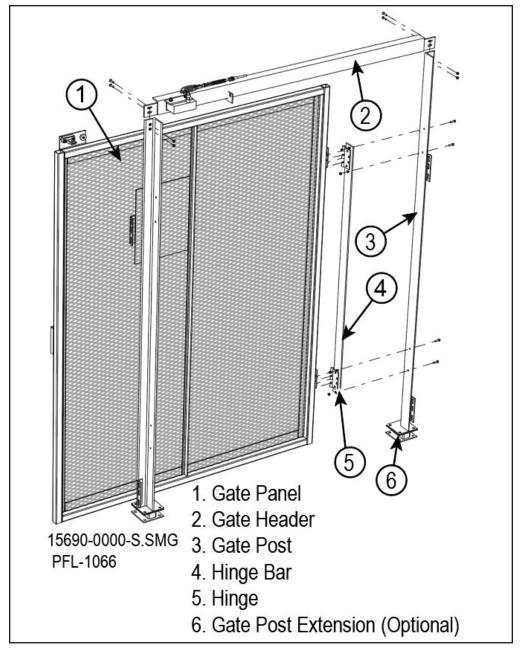

- 1. Lay the gate posts on the floor parallel to each other. See Figure 16-20.
- 2. Place the gate header at the top of the gate posts and bolt in position with the hardware provided. See Figure 16-21.
- 3. Position the back side of the gate panel between the parallel gate posts and align with the hinge bars.

Swing Gate Layout Figure 16-20

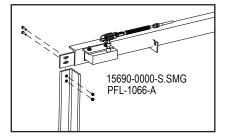

Place Gate Header Figure 16-21

Assemble the Swing Gate (continued)

- 4. Bolt the gate post to the gate panel hinge bar. See Figure 16-22.
- 5. Locate and mark the center of the gate panel on the gate panel with a pencil. See Figure 16-23.
- 6. Measure the outside edge to the outside edge of the carriage to locate the center line. Mark the center line with a pencil on the top of the carriage deck. See Figure 16-23.
- 7. Position a carpenter square on the edge of the carriage to extend the center line onto the floor a distance of 10" (254mm) away from the carriage. See Figure 16-23.
- 8. Mark a chalk line on the floor to ensure the center of the panel is on the center line of the carriage. See Figure 16-23.




NOTE The ideal position of the gate panel is a maximum of 6" (152mm) from the inside of the gate panel to the front edge of the carriage. Local codes may have specific requirements concerning this distance.


> 9. When the measurement from the back side of the gate panel to the carriage has been determined, snap a chalk line to identify the position of the gate panel parallel to the carriage. See Figure 16-23.

Install the Gate Post Extensions


Gate post extensions (if supplied) are to be bolted to the bottom of the gate posts before the gate post is raised. Refer to Section 20 for instructions.

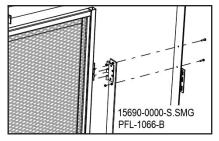

Bolt Gate Post to Hinge Panel Figure 16-22

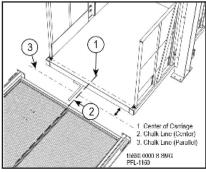

Establish Center and Parallel Line Figure 16-23

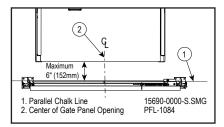

Alignment Figure 16-24



Raise and Secure the Swing Gate Assembly

Anchor the Gate Post Base Plates

Plumb and Square the Gate


Install Support Braces

Verify the Gate Panel Swing

ADANGER

Falling gate hazard! Be sure to properly support, tie off, or temporarily brace the gate posts, gate panels, and gate assembly during installation. Do not depend on the gate post feet to support the gate posts while the gate is being positioned or assembled. Final bracing of the gate assembly must be to the Vertical Reciprocating Conveyor (VRC) or building structure. The use of structural angle is recommended.

- 1. Raise and secure the gate assembly.
- 2. Align the center of the gate to the center of the carriage. See Figure 16-24.
- 3. Align the back side of the gate panel on the parallel chalk line. See Figure 16-24.
- 4. Drill and anchor the gate post base plates to the floor with 3/8" anchors, 3-1/2" (89mm) long.

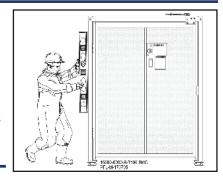


Plumb the Gate Figure 16-25


ADANGER

Falling gate hazard! The anchor hole depth should always be deeper than the length of the anchor bolt. The recommended wedge anchor size is 3/8" diameter by 3-1/2" (89mm) long.

- 1. Plumb and square the gate posts using a plumb bob or a level that is 4' (1219mm) or longer. See Figure 16-25.
- 2. Measure from the gate post to the Vertical Reciprocating Conveyor (VRC) column.
- 3. Cut two (2) 1-1/2" x 1-1/2" (38mm x 38mm) steel angle support braces and weld to each gate post and to the VRC columns or wall. See Figure 16-26.
- 4. Tighten all bolts.
- 5. Verify the gate panel swing for proper operation and site operational clearance.
- 6. Confirm that the gate is plumb and square.
- 7. Weld the gate header to the gate posts. See Figure 16-27.

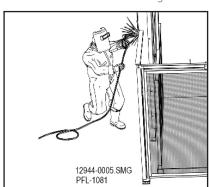

Weld Support Braces Figure 16-26

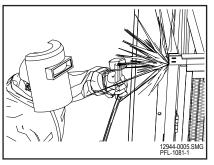

Weld Gate Header to Gate Posts Figure 16-27

Install the Gate Interlock


Install the gate panel interlock and interlock keeper assembly. See Figure 16-28. Refer to the interlock installation section in this manual.

Verify the Gate Interlock Operation


- 1. Verify that the gate panel swings smoothly.
- 2. Verify that the gate door opens when the carriage is present and does not open when the carriage is not present.
- 3. Verify that the gate panel remains locked when the carriage leaves the floor level.



- 1. With the VRC carriage on the same level as the gate, make sure that the interlock keeper assembly magnet holds the panel closed until the operator pulls open the panel. The magnet requires field adjustment to fine tune the panel "held closed" feature.
- 2. Adjust the panel position by backing off the magnet locking nut. See Figure 16-29.
- 3. Rotate the magnet hex head bolt to position the panel.
- 4. Secure the magnet position by tightening the magnet locking nut.

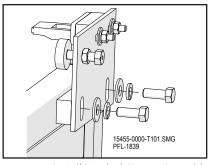

Install Interlock Keeper Assembly Figure 16-28

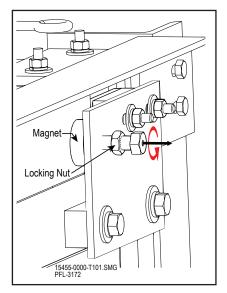

Adjust Panel Position Figure 16-29

Establish Placement


NOTE It is often possible to assemble the gate on the ground. However, it may not be possible to erect the fully assembled gate.

> Horizontal assembly and vertical assembly methods are included in this manual. Both methods require additional support and temporary bracing during assembly.


- 1. Measure the outside edge to the outside edge of the carriage to locate the center line. Mark the center line with a pencil on the top of the carriage deck. See Figure 16-30.
- 2. Position a carpenter square on the edge of the carriage to extend the center line onto the floor a distance of 10" (254mm) away from the carriage. See Figure 16-30.
- 3. Mark a chalk line on the floor to ensure the center of the gate is on the center line of the carriage. See Figure 16-30.

NOTE The ideal position of the gate panel is a maximum of 6" (152mm) from the inside of the gate panel to the front edge of the carriage. Local codes may have specific requirements concerning this distance.


- 4. When the measurement from the back side of the gate panel to the carriage has been determined, snap a chalk line to identify the position of the gate panel parallel to the carriage. See Figure 16-30.
- 5. Reference the PFlow Industries, Inc. General Arrangement (GA) drawing to determine the overall gate width.
- 6. Measure the overall gate width and mark the final position for the gate posts. See Figure 16-31.

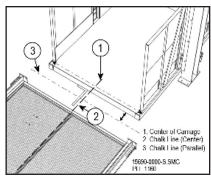

Establish Center Line Figure 16-30

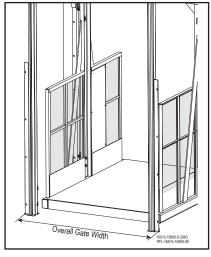

Establish Gate Width Figure 16-31

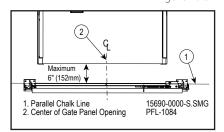


Alignment Figure 16-32

Prepare the Chains in the Gate Posts


For shipping purposes, the single vertical acting gate panel counterweight is secured with a shipping screw located toward the bottom of the gate post assembly.

To prevent the chain from falling down into the gate post:


- 1. Remove shipping screw located toward the bottom of the gate post assembly. See Figure 16-33.
- 2. Pull the counterweight chain forward until the counterweight is moved forward about 2' (610mm).
- 3. Make sure the counterweight is above the shipping screw and replace the shipping screw. See Figure 16-34.
- 4. Tie one end of a string to the counterweight chain about 3 links back.
- 5. Tie the other end of the string to the base plate of the gate post assembly.
- 6. Carefully handle the gate post assembly to keep the counterweight inside the gate post tube. Keep the counterweight above the shipping screw until the gate post is stood upright.

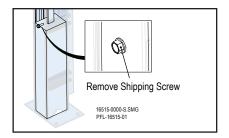

Post Assembly Counterweight Figure 16-33

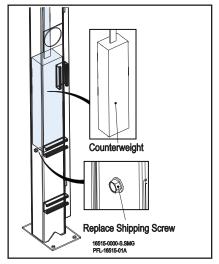

Post Assembly Counterweight Figure 16-34

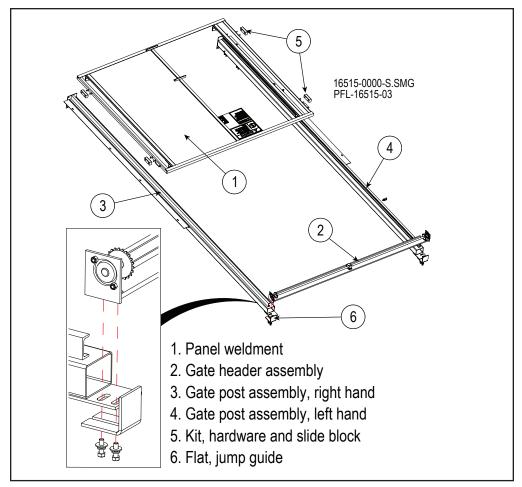


Begin Horizontal Assembly

- 1. Lay the gate in the proper position to allow for safe handling and efficient fit-up to the VRC. See Figure 16-35.
- 2. Lay each gate post (left side and right side) with the panel guide channel facing up, and the channel open towards the middle.

Install the Header

- 1. Position the gate header with the sprockets facing up and ends flush.
- 2. Position the chain jump guides to leave space for the chain. See Figure 16-36.
- 3. Bolt the chain jump guides and header to the post using four (4) 3/8-16 x 1-1/4" long bolts with lock washers and flat washers (weld-nut on header angle).
- 4. Align the gate header, making sure the posts are square, and snug the attachment hardware.

Single VA Gate Layout Figure 16-35

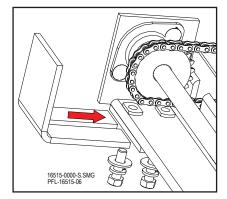

Position Chain Jump Guides Figure 16-36



WARNING



Entanglement hazard! Remove gloves, secure long hair, wear snugfitting clothing, and avoid wearing jewelry while working with chains.




Crush hazard! Keep hands outside and above the chain. If the lift chain does not reach the wheelblock, carefully work the lift chain around the sprocket until it does reach the wheelblock. Lift the chain from the sides. If the chain drops unaided, the weight of the chain will crush fingers. Do not allow the chain to come off the sprocket.

Header falling hazard! Loosen but do not remove the bolts when adjusting the chain jump guide or the headers. Once assembled, the header can fall if the bolts are completely removed.


NOTE The chains must be equal in length on both sides of the sprocket to align the position of the counterweight. If the chains are not equal, work the chain on the front side of the sprockets.

Install the Chains

- 1. Make sure to eliminate any chain twist. The chain should be straight between the counterweight tab and the sprocket.
- 2. Remove the #2050 master links from the end of the #35 chain on each post.
- 3. Place the center link on top of the sprocket. See Figure 16-37.
- 4. Thread the chain over the sprocket on the header.
- 5. Pull the chain tight over the sprocket to remove the slack in the chain without moving the counterweight.
- 6. Re-attach the #2050 master links to the #35 chain and remove the string.
- 7. Verify that the chains on each end of the gate are equal in length from the sprocket to the panel.
- 8. Loosen the header/post hardware to allow the chain jump guide to slide down into position. Do not loosen the hardware to the point that the header falls off. See Figure 16-38.
- 9. Set the space between the chain jump guides approximately +/- 1/8" (3mm) from the top of the chain.
- 10. Securely attach the chain jump guide.

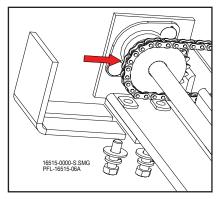

Position Center of Chain Figure 16-37

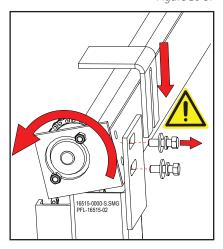


Attach Chain Jump Guides Figure 16-38

Assemble the Gate Panel


2. III ga 16

Attach the Gate Panel to the Gate Chains


- 1. Place the gate panel face up between the guide tracks on the gate posts.
- 2. Insert the guide blocks and attach to the gate panel and guide track. See Figure 16-39 and Figure 16-40.
- 3. Attach the panel bumper to the bottom of the panel. See Figure 16-41.
- 1. Slide the gate panel toward the header. It should move without binding on the guide tracks.
- 2. Connect the #2050 master link to the gate panel. See Figure 16-42 and Figure 16-43.
- 3. Verify that the chain length is equal on each side.
- 4. Slide the gate panel to the bottom of the gate posts.

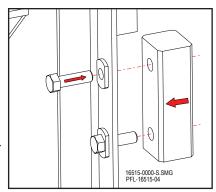

Attach Guide Blocks to Gate Panel Figure 16-39

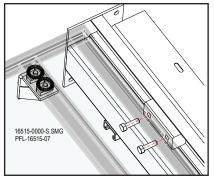


Attach Guide Blocks to Guide Track Figure 16-40

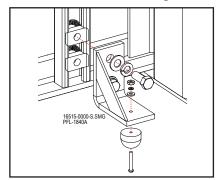

Attach Panel Bumper Figure 16-41



Connect Master Link Figure 16-42

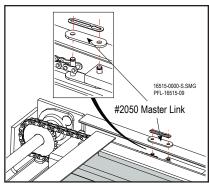

Connect Master Link Figure 16-43

Raise and Secure the Gate



1. Place a strap around the gate posts to secure and maintain the assembly in place. See Figure 16-44.


ADANGER

Falling gate hazard! Do not lift the VA gate assembly by the header shaft or by a single strap at the center of the header.

- 2. Place two (2) straps around the header, one near each gate post. Avoid the brackets at the top of each post. See Figure 16-44.
- 3. To avoid sudden panel and counterweight movement, slowly raise and secure the gate assembly into place.
- 4. Tie off or continue to support the gate assembly to prevent tipping or accidental movement.
- 1. Align the center of the gate to the center of the carriage with the front side of the gate panel facing out.
- 2. Align the back side of the gate panel on the parallel chalk line.
- 3. Drill and anchor the gate post base plates to the floor with 3/8" anchors, 3-1/2" (89mm) long.

ADANGER

Falling gate hazard! The anchor hole depth should always be deeper than the length of the anchor bolt. The recommended wedge anchor size is 3/8" diameter by 3-1/2" (89mm) long.

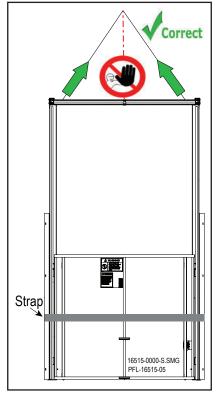

Secure and Lift Gate Assembly Figure 16-44

Align the Gate

Anchor the Gate


Post Base Plates

Assembly


Plumb and Square the Gate

Install Support Braces


- 1. Plumb and square the gate posts using a plumb bob or a level that is 4' (1219mm) or longer. See Figure 16-45.
- 2. Measure from the gate post to the Vertical Reciprocating Conveyor (VRC) column.
- 1. Cut two (2) 1-1/2" x 1-1/2" (38mm x 38mm) steel angle support braces and weld to each gate post and to the VRC columns or wall. See Figure 16-46.
- 2. Tighten all bolts.
- 3. Confirm that the gate is plumb and square.
- 4. Weld the gate header to the gate posts. See Figure 16-47.
- 5. Remove all straps on the gate.
- 6. Slowly slide the panel down until the chains are tight and the counterweights are off the shipping screws.
- 7. Remove the counterweight shipping screw.

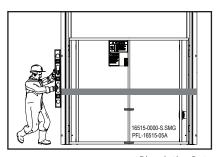

Plumb the Gate Figure 16-45

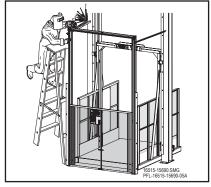

Weld Support Braces Figure 16-46

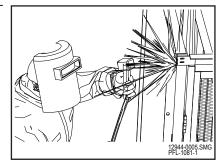

Weld Gate Header to Gate Posts Figure 16-47




WARNING

The gate panel must float freely within the guide track or the panel interlock will not operate safely. Make sure the gate is fit properly.

Guide block fit up is important for the gate panel to operate properly and safely. This over-rides any other horizontal alignment dimensions.

- 1. Snug the gate panel and slide the blocks on one side of the channel guides.
- 2. Set a +/- 1/8" (3mm) gap between the opposite side guide block and the gate panel. Align the gate post or trim the guide blocks if necessary. The guide block must stay trapped in the guide track. See Figure 16-48.

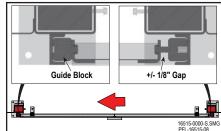

Guide Block Gap Figure 16-48

- 3. Make sure the gate header is level horizontally and that the gate posts are plumb and square in both directions. Shim and / or adjust as necessary.
- 4. Verify that the panel travels up and down evenly and is not binding on the guide tracks.
- 5. Adjust the bumpers as necessary.
- 6. Adjust the post spacing or panel slide blocks as necessary.
- 7. Secure and brace the gate posts to the enclosure panels, the building structure, or the VRC columns as required.
- 8. Verify that the gate panel moves freely during travel from the top to the bottom of the posts.
- 9. Verify that the gate panel clears the fully open height. If the counterweight bottoms out in the gate post before the gate panel is fully open, remove chain links to shorten the chain length.
- 10. Lift the gate panel approximately 2' (610mm) off the floor to verify that the gate panel is properly counterbalanced with panel accessories (e.g., cams, interlock flats) on the panel. The gate panel should remain in this position.
 - If the gate continues to rise, add steel bar stock to the inside bottom center of the gate panel frame.
 - If the gate drops, contact PFlow Industries, Inc. Customer Support Department for instructions.
- 11. Verify that the counterweight is not hitting the post base plate.

Section 16 | Gate Installation Single Vertical Acting (SVA) Gate -Horizontal Assembly



www.pflow.com P 414 352 9000 F 414 352 9002 6720 N. Teutonia Ave. Milwaukee, WI 53209

Install the Gate Panel Interlock

Install the gate panel interlock. Refer to the interlock installation section in the installation manual.

Verify the Gate Operation

- 1. Verify that the gate panel runs smoothly.
- 2. Verify that the gate panel opens when the carriage is present and does not open when the carriage is not present.
- 3. Verify that the gate panel remains locked when the carriage leaves the floor level.

Establish Placement

Make sure the placement of the gate has been established. Follow instructions beginning in Section 16, page 14.

Prepare the Chains in the Gate Posts

Make sure the chains and counterweights are prepared before raising the gate posts. Follow instructions beginning in Section 16, page 15.



Raise and Secure the Gate Posts

ACAUTION



Lifting hazard! Components and accessories are heavy.

To prevent serious personal injury, use the appropriate lifting apparatus, tie offs, or help when moving, lifting or assembling the components or accessories.

1. Raise, position, and secure one gate post with the back face of the gate post on the parallel chalk line. Make sure the channel on the gate post is facing out and the opening of the channel is facing in. See Figure 16-49.

1. Gate Channel 16450-1000 PFL-180216-8

Channel Position Figure 16-49

ADANGER

Falling gate hazard! The anchor hole depth should always be deeper than the length of the anchor bolt. The recommended wedge anchor size is 3/8" diameter by 3-1/2" (89mm) long.

- 2. Drill and anchor the gate post base plate to the floor with 3/8" anchors, 3-1/2" (89mm) long.
- 3. Temporarily brace the gate post to the Vertical Reciprocating Conveyor (VRC) column or wall. See Figure 16-50.
- 4. Raise, position, and secure the other gate post with the back face of the gate post on the parallel chalk line. Make sure the channel on the gate post is facing out and the opening of the channel is facing in.
- 5. Temporarily brace the second gate post to the VRC column or wall. See Figure 16-50. **Do not anchor this post at this time.**



Temporarily Brace Gate Post Figure 16-50



WARNING



Entanglement hazard! Remove gloves, secure long hair, wear snugfitting clothing, and avoid wearing jewelry while working with chains.



Crush hazard! Keep hands outside and above the chain. If the lift chain does not reach the wheelblock, carefully work the lift chain around the sprocket until it does reach the wheelblock. Lift the chain from the sides. If the chain drops unaided, the weight of the chain will crush fingers. Do not allow the chain to come off the sprocket.

Header falling hazard! Loosen but do not remove the bolts when adjusting the chain jump guide or the headers. Once assembled, the header can fall if the bolts are completely removed.


Install the Header

- 1. Position the gate header with the sprockets facing out and with the ends flush. See Figure 16-51.
- 2. Position the chain jump guides to leave space for the chain. See Figure 16-52.
- 3. Bolt the chain jump guides and gate header to the gate post using four (4) 3/8-16 x 1-1/4" long bolts with lock and flat washers (weld-nut on header angle).
- 4. Align the gate header, making sure the gate posts are square, and snug the attachment hardware.


Install the **Chains**

NOTE The chains must be equal in length on both sides of the sprocket to align the position of the counterweight. If the chains are not equal, work the chain on the front side of the sprockets.

- 1. Make sure to eliminate any chain twist. The chain should be straight between the counterweight tab and the sprocket.
- 2. Remove the #2050 master links from the end of the #35 chain on each post.
- 3. Place the center link on top of the sprocket.

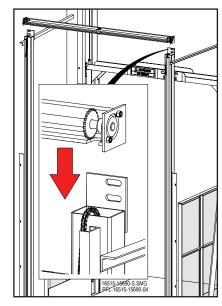

Position Chain Jump Guides Figure 16-51

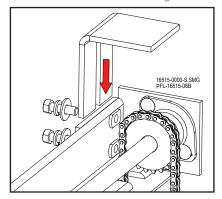


Position Chain Jump Guides Figure 16-52


Install the Chains (continued)

Assemble the Gate Panel


- 4. Thread the chain over the sprockets on the header. See Figure 16-53.
- 5. Pull the chain tight over the sprocket to remove the slack in the chain without moving the counterweight.
- 6. Re-attach the #2050 master links to the #35 chain and remove the strings.
- 7. Verify that the chains on each end of the gate are equal in length from the sprocket to the panel.
- 8. Loosen the header/post hardware to allow the chain jump guide to slide down into position. Do not loosen the hardware to the point that the header falls off. See Figure 16-54.
- 9. Set the space between the chain jump guides approximately +/- 1/8" (3mm) from the top of the chain.
- 10. Securely attach the chain jump guide.
- 11. Remove the counterweight shipping screw.
- 12. Carefully pull the chain up to move the counterweight above the shipping screw.
- 13. Re-install the counterweight shipping screw.
- 1. Place the gate panel between the guide tracks on the gate posts.
- 2. Insert the guide blocks and attach to the gate panel and guide track. See Figure 16-55 and Figure 16-56.
- 3. Attach the panel bumper at the bottom of the panel. See Figure 16-57.

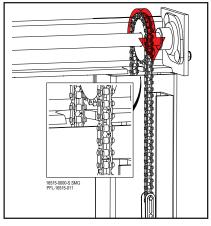


Thread Chain Over the Sprockets Figure 16-53

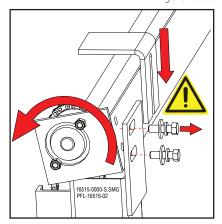


Attach Chain Jump Guides Figure 16-54

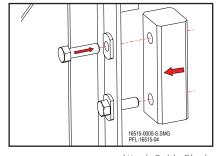

Attach Guide Blocks Figure 16-55

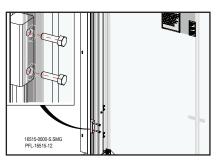

Attach Guide Blocks Figure 16-56

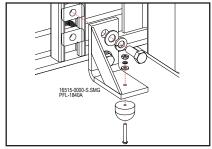

Attach Panel Bumper Figure 16-57

Attach the Gate Panel to the **Gate Chains**


1. Use an appropriate lifting device to carefully slide the gate panel up towards the gate header. See Figure 16-58.

NOTE The gate panel should move up without binding on the guide tracks.

- 2. Continue to support the gate panel and attach the gate panel to the chains.
- 3. Connect the #2050 master links to the gate panel and remove the string.
- 4. Verify the chain length is equal on each side.




- 1. Measure from the gate post to the Vertical Reciprocating Conveyor (VRC) column.
- 2. Cut two (2) 1-1/2" x 1-1/2" (38mm x 38mm) steel angle support braces and weld to each gate post and to the VRC columns or wall. See Figure 16-59.
- 3. Confirm that the gate is plumb and square.
- 4. Tighten all bolts.
- 5. Weld the gate header to the gate posts. See Figure 16-60.
- 6. Slowly slide the panel down until the chains are tight and the counterweights are off the shipping screws.
- 7. Remove the counterweight shipping screw.

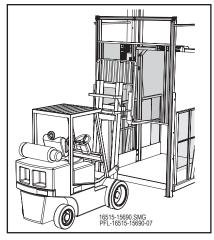

Lift Gate Panel Figure 16-58



Weld Support Braces Figure 16-59

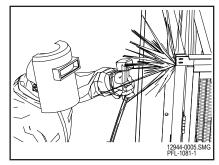

Weld Gate Header to Gate Posts Figure 16-60




Adjust the Gate Panel

MARNING

The gate panel must float freely within the guide track or the panel interlock will not operate safely. Make sure the gate is fit properly.

Guide block fit up is important for the gate panel to operate properly and safely. This over-rides any other horizontal alignment dimensions.

- 1. Snug the gate panel and slide the blocks on one side of the channel guides.
- 2. Set a +/- 1/8" (3mm) gap between the opposite side guide block and the gate panel. Align the gate post or trim the guide blocks if necessary. The guide block must stay trapped in the guide track. See Figure 16-61.

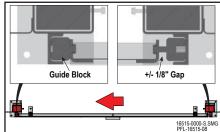

Guide Block Gap Figure 16-61

- 3. Make sure the gate header is level horizontally and that the gate posts are plumb and square in both directions. Shim and / or adjust as necessary.
- 4. Verify that the panel travels up and down evenly and is not binding on the guide tracks.
- 5. Adjust the bumpers as necessary.
- 6. Adjust the post spacing or panel slide blocks as necessary.
- 7. Secure and brace the gate posts to the building structure or the VRC columns as required.
- 8. Verify that the gate panel moves freely during travel from the top to the bottom of the posts.
- 9. Verify that the gate panel clears the fully open height. If the counterweight bottoms out in the gate post before the gate panel is fully open, remove chain links to shorten the chain length.
- 10. Lift the gate panel approximately 2' (610mm) off the floor to verify that the gate panel is properly counterbalanced with panel accessories (e.g., cams, interlock flats) on the panel. The gate panel should remain in this position.
 - If the gate continues to rise, add steel bar stock to the inside bottom center of the gate panel frame.
 - If the gate drops, contact PFlow Industries, Inc. Customer Support Department for instructions.
- 11. Verify that the counterweight is not hitting the post base plate.

Section 16 | Gate Installation Single Vertical Acting (SVA) Gate -Vertical Assembly



www.pflow.com P 414 352 9000 F 414 352 9002 6720 N. Teutonia Ave. Milwaukee, WI 53209

Install the Gate Interlock

Install the gate panel interlock. Refer to the interlock installation section in the installation manual.

Verify the Gate Operation

- 1. Verify that the gate panel runs smoothly.
- 2. Verify that the gate door opens when the carriage is present and does not open when the carriage is not present.
- 3. Verify that the gate panel remains locked when the carriage leaves the floor level.


Establish Placement

NOTE It is often possible to assemble the gate on the ground. However, it may not be possible to erect the fully assembled gate.


> Horizontal assembly and vertical assembly methods are included in this manual. Both methods require additional support and temporary bracing during assembly.

- 1. Measure the outside edge to the outside edge of the carriage to locate the center line. Mark the center line with a pencil on the top of the carriage deck. See Figure 16-62 and Figure 16-63.
- 2. Position a carpenter square on the edge of the carriage to extend the center line onto the carriage deck.

NOTE The ideal position of the outside edge of the gate post is at the front edge of the carriage.

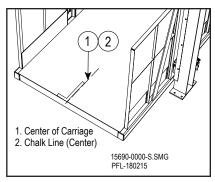

Establish Center Line Figure 16-62

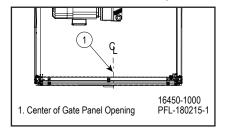

Alignment Figure 16-63

Prepare the Chains in the Gate Posts


For shipping purposes, the single vertical acting gate panel counterweight is secured with a shipping screw located toward the bottom of the gate post assembly.

To prevent the chain from falling down into the gate post:


- 1. Remove shipping screw located toward the bottom of the gate post assembly. See Figure 16-64.
- 2. Pull the counterweight chain forward until the counterweight is moved forward about 2' (610mm).
- 3. Make sure the counterweight is above the shipping screw and replace the shipping screw. See Figure 16-65.
- 4. Tie one end of a string to the counterweight chain about 3 links back.
- 5. Tie the other end of the string to the base plate of the gate post assembly.
- 6. Carefully handle the gate post assembly to keep the counterweight inside the gate post tube. Keep the counterweight above the shipping screw until the gate post is stood upright.



Post Assembly Counterweight Figure 16-64

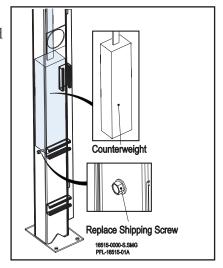

Post Assembly Counterweight Figure 16-65

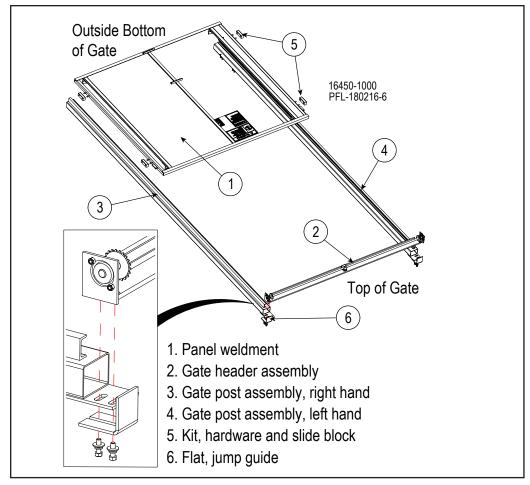


Begin Horizontal Assembly

- 1. Lay the gate in the proper position to allow for safe handling and efficient fit-up to the VRC. See Figure 16-66.
- 2. Lay each gate post (left side and right side) with the panel guide channel facing up, and the channel open towards the middle.

Install the Header

- 1. Position the gate header with the sprockets facing up and ends flush.
- 2. Position the chain jump guides to leave space for the chain. See Figure 16-67.
- 3. Bolt the chain jump guides and header to the post using four (4) 3/8-16 x 1-1/4" long bolts with lock and flat washers (weld-nut on header angle).
- 4. Align the gate header, making sure the posts are square, and snug the attachment hardware.

Single VA Gate Layout Figure 16-66

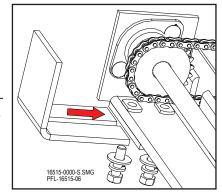

Position Chain Jump Guides Figure 16-67



WARNING



Entanglement hazard! Remove gloves, secure long hair, wear snugfitting clothing, and avoid wearing jewelry while working with chains.




Crush hazard! Keep hands outside and above the chain. If the lift chain does not reach the wheelblock, carefully work the lift chain around the sprocket until it does reach the wheelblock. Lift the chain from the sides. If the chain drops unaided, the weight of the chain will crush fingers. Do not allow the chain to come off the sprocket.

Header falling hazard! Loosen but do not remove the bolts when adjusting the chain jump guide or the headers. Once assembled, the header can fall if the bolts are completely removed.


Install the **Chains**

NOTE The chains must be equal in length on both sides of the sprocket to align the position of the counterweight. If the chains are not equal, work the chain on the front side of the sprockets.

- 1. Make sure to eliminate any chain twist. The chain should be straight between the counterweight tab and the sprocket.
- 2. Remove the #2050 master links from the end of the #35 chain on each post.
- 3. Place the center link on top of the sprocket. See Figure 16-68.
- 4. Thread the chain over the sprockets on the header.
- 5. Pull the chain tight over the sprocket to remove the slack in the chain without moving the counterweight.
- 6. Re-attach the #2050 master links to the #35 chain and remove the strings.
- 7. Verify that the chains on each end of the gate are equal in length from the sprocket to the panel.
- 8. Loosen the header/post hardware to allow the chain jump guide to slide down into position. Do not loosen the hardware to the point that the header falls off. See Figure 16-69.
- 9. Set the space between the chain jump guides approximately +/- 1/8" (3mm) from the top of the chain.
- 10. Securely attach the chain jump guides.

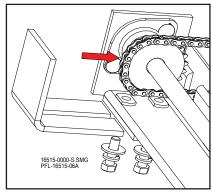

Position Center of Chain Figure 16-68

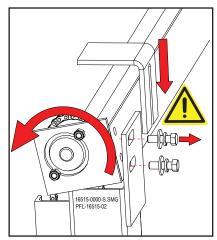


Attach Chain Jump Guides Figure 16-69


Assemble the Gate Panel

Attach the Gate Panel to the Gate Chains


- 1. Place the gate panel face up between the guide tracks on the gate posts.
- 2. Insert the guide blocks and attach to the gate panel and guide track. See Figure 16-70 and Figure 16-71.
- 1. Slide the gate panel toward the header. It should move without binding on the guide tracks.
- 2. Connect the #2050 master link to the gate panel. See Figure 16-72 and Figure 16-73.
- 3. Verify that the chain length is equal on each side.
- 4. Slide the gate panel to the bottom of the gate posts.

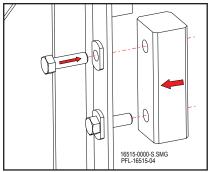

Attach Guide Blocks to the Gate Panel Figure 16-70

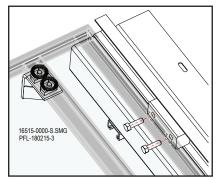

Attach Guide Blocks to the Guide Track Figure 16-71

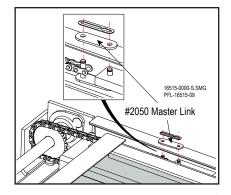

Connect Master Link Figure 16-72



Connect Master Link Figure 16-73

Raise and Secure the Gate




Align the Gate Assembly

ADANGER

Falling gate hazard! Do not lift the VA gate assembly by the header shaft or by a single strap at the center of the header.


- 1. Place a strap around the gate posts to secure and maintain the assembly in place. See Figure 16-74.
- 2. Place two (2) straps around the header, one near each gate post. Avoid the brackets at the top of each gate post. See Figure 16-74.
- 3. To avoid sudden panel and counterweight movement, slowly raise and secure the gate assembly into place.
- 4. Tie off or continue to support the gate assembly to prevent tipping or accidental movement.
- 1. Align the center of the gate to the center of the carriage with the front side of the gate panel facing out.
- 2. Position the gate posts at the front of the carriage.

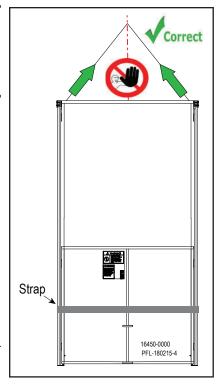



Secure and Lift Gate Assembly Figure 16-74

Plumb and Square the Gate

   
- 1. Plumb and square the gate posts using a plumb bob or a level that is 4' (1219mm) or longer. See Figure 16-75.
- 2. Snug the gate panel and slide the blocks on one side of the channel guides.
- 3. Set a +/- 1/8" (3mm) gap between the opposite side guide block and the gate panel. Align the gate post or trim the guide blocks if necessary. The guide block must stay trapped in the guide track. See Figure 16-76.
- 4. Make sure the gate header is level horizontally and that the gate posts are plumb and square in both directions. Shim and / or adjust as necessary.
- 5. Verify that the panel travels up and down evenly and is not binding on the guide tracks.









- 2. Cut two (2) 1-1/2" x 1-1/2" (38mm x 38mm) steel angle support braces and weld to each gate post and to the carriage upright.
- 3. Tighten all bolts.
- 4. Confirm that the gate is plumb and square.
- 5. Weld the gate header to the gate posts. See Figure 16-77.
- 6. Remove all straps on the gate.
- 7. Slowly slide the panel down until the chains are tight and the counterweights are off the shipping screws.
- 8. Remove the counterweight shipping screw.

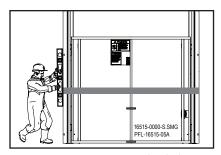

Plumb the Gate Figure 16-75

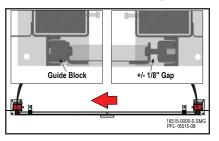

Guide Block Gap Figure 16-76

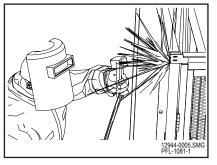

Weld Gate Header to Gate Posts Figure 16-77

Weld the


Braces

Gate Posts


Install Support

Attach the Bumpers

- 1. Attach the panel magnetic foot to the bottom of the panel. See Figure 16-78.
- 2. Attach the panel bumper brackets to the top of the gate panel. See Figure 16-79.

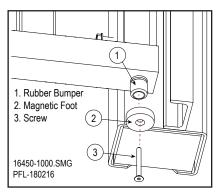



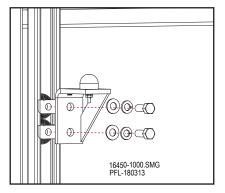

Attach Top Bumper Brackets Figure 16-79



MARNING

The gate panel must float freely within the guide track or the panel interlock will not operate safely. Make sure the gate is fit properly.

Guide block fit up is important for the gate panel to operate properly and safely. This over-rides any other horizontal alignment dimensions.

- 1. Verify that the gate panel travels up and down evenly from the top to the bottom of the posts and is not binding on the guide tracks.
- 2. Adjust the bumpers as necessary.
- 3. Verify that the gate panel clears the fully open height. If the counterweight bottoms out in the gate post before the gate panel is fully open, remove chain links to shorten the chain length.
- 4. Lift the gate panel approximately 2' (610mm) off the floor to verify that the gate panel is properly counterbalanced with panel accessories (e.g., cams, interlock flats) on the panel. The gate panel should remain in this position.
 - If the gate continues to rise, add steel bar stock to the inside bottom center of the gate panel frame.
 - If the gate drops, contact PFlow Industries, Inc. Customer Support Department for instructions.
- 5. Verify that the counterweight is not hitting the post base plate.

NOTE


The drop cord is supplied by PFlow Industries, Inc. The wires from the junction box on the carriage to the switch on the gate post is not supplied by PFlow Industries, Inc.

Install the Gate Limit Switch and Stationary Junction Boxes

- 1. Attach the gate limit switch and bracket to the unistrut mounted on the gate post. See Figure 16-80.
- 2. Mount the *carriage mounted junction box* on the outside of the carriage making sure there are no obstructions above the junction box.
- 3. On a two-level VRC, mount the **stationary junction box** on the same side of the VRC as the carriage mounted junction box. Mount the stationary junction box on the outside of the floor to beam bracing.
- 4. On a multiple level VRC, mount the **stationary junction box** on the same side of the VRC as the carriage mounted junction box. Mount the stationary junction box approximately 8' (2438mm) above the halfway point of the vertical travel of the VRC.



- 1. Verify that the gate panel opens when the carriage is present and does not open when the carriage is not present.
- 2. Verify that the gate panel remains locked when the carriage leaves the floor level.

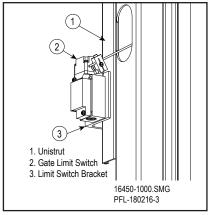

Attach Gate Limit Switch Figure 16-80

Establish Placement

Make sure the placement of the gate has been established. Follow instructions beginning in Section 16, page 29.

Prepare the Chains in the Gate Posts

Make sure the chains and counterweights are prepared before raising the gate posts. Follow instructions beginning in Section 16, page 30.



Raise and Secure

the Gate Posts


ACAUTION




Lifting hazard! Components and accessories are heavy.
To prevent serious personal injury, use the appropriate lifting apparatus, tie offs, or help when moving, lifting or assembling the components or accessories.

- 1. Raise, position, and secure one gate post on the carriage deck edge. Make sure the channel on the gate post is facing out and the opening of the channel is facing in. See Figure 16-81.
- 2. Temporarily brace the gate post to the Vertical Reciprocating Conveyor (VRC) carriage or the carriage column. See Figure 16-82.
- 3. Raise, position, and secure the other gate post on the carriage deck edge.

 Make sure the channel on the gate post is facing out and the opening of the channel is facing in.
- 4. Temporarily brace the second gate post to the VRC carriage or the carriage column.

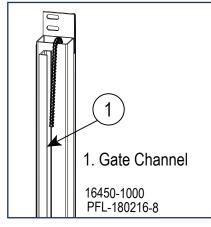

Channel Position Figure 16-81

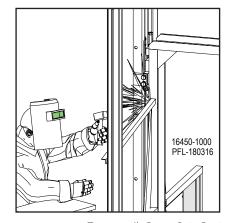

Temporarily Brace Gate Post Figure 16-82



WARNING



Entanglement hazard! Remove gloves, secure long hair, wear snugfitting clothing, and avoid wearing jewelry while working with chains.



Crush hazard! Keep hands outside and above the chain. If the lift chain does not reach the wheelblock, carefully work the lift chain around the sprocket until it does reach the wheelblock. Lift the chain from the sides. If the chain drops unaided, the weight of the chain will crush fingers. Do not allow the chain to come off the sprocket.

Header falling hazard! Loosen but do not remove the bolts when adjusting the chain jump guide or the headers. Once assembled, the header can fall if the bolts are completely removed.


Install the Header

- 1. Position the gate header with the sprockets facing out and with the ends flush. See Figure 16-83.
- 2. Position the chain jump guides to leave space for the chain. See Figure 16-84.
- 3. Bolt the chain jump guides and gate header to the gate post using four (4) 3/8-16 x 1-1/4" long bolts with lock and flat washers (weld-nut on header angle).
- 4. Align the gate header, making sure the gate posts are square, and snug the attachment hardware.


Install the Chains

NOTE The chains must be equal in length on both sides of the sprocket to align the position of the counterweight. If the chains are not equal, work the chain on the front side of the sprockets.

- 1. Make sure to eliminate any chain twist. The chain should be straight between the counterweight tab and the sprocket.
- 2. Remove the #2050 master links from the end of the #35 chain on each post.
- 3. Place the center link on top of the sprocket.

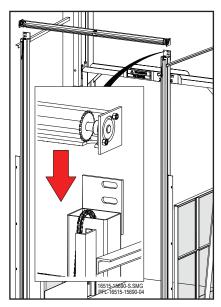


Position Chain Jump Guides Figure 16-83

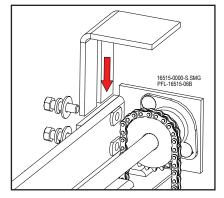


Position Chain Jump Guides Figure 16-84

Install the Chains (continued)

- 4. Thread the chain over the sprockets on the header. See Figure 16-85.
- 5. Pull the chain tight over the sprocket to remove the slack in the chain without moving the counterweight.
- 6. Re-attach the #2050 master links to the #35 chain and remove the strings.
- 7. Verify that the chains on each end of the gate are equal in length from the sprocket to the gate panel.
- 8. Loosen the header/post hardware to allow the chain jump guide to slide down into position. Do not loosen the hardware to the point that the header falls off. See Figure 16-86.
- 9. Set the space between the chain jump guides approximately +/- 1/8" (3mm) from the top of the chain.
- 10. Securely attach the chain jump guide.
- 11. Remove the counterweight shipping screw.
- 12. Carefully pull the chain up to move the counterweight above the shipping screw.
- 13. Replace the shipping screw.

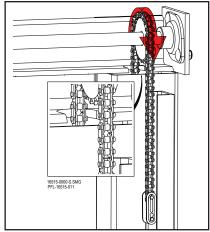

Thread Chain Over the Sprockets Figure 16-85

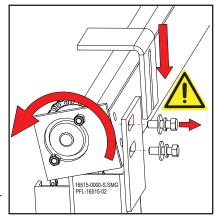

Attach Chain Jump Guides Figure 16-86

Assemble the Gate Panel


- 1. Place the gate panel face up between the guide tracks on the gate posts.
- 2. Insert the guide blocks and attach to the gate panel and guide track. See Figure 16-87 and Figure 16-88.

Attach the Gate Panel to the **Gate Chains**


1. Use an appropriate lifting device to carefully slide the gate panel up towards the gate header. See Figure 16-89.

NOTE The gate panel should move up without binding on the guide tracks.


- 2. Continue to support the gate panel and attach the gate panel to the chains.
- 3. Connect the #2050 master links to the gate panel and remove the string.
- 4. Verify the chain length is equal on each side.

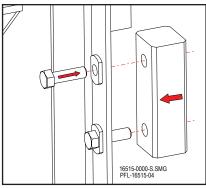

Attach Guide Blocks to Gate Panel Figure 16-87

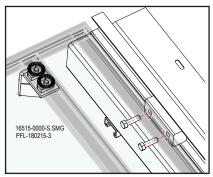


Attach Guide Blocks to Guide Track Figure 16-88

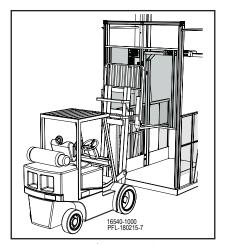


Lift Gate Panel Figure 16-89

Plumb and Square the Gate

  - 1. Plumb and square the gate posts using a plumb bob or a level that is 4' (1219mm) or longer. See Figure 16-90.
- 2. Snug the gate panel and slide the blocks on one side of the channel guides.
- 3. Set a +/- 1/8" (3mm) gap between the opposite side guide block and the gate panel. Align the gate post or trim the guide blocks if necessary. The guide block must stay trapped in the guide track. See Figure 16-91.
- 4. Make sure the gate header is level horizontally and that the gate posts are plumb and square in both directions. Shim and / or adjust as necessary.
- 5. Verify that the panel travels up and down evenly and is not binding on the guide tracks.









Weld the Gate Posts


- 1. Measure from the gate post to the carriage upright.
- 2. Cut two (2) 1-1/2" x 1-1/2" (38mm x 38mm) steel angle support braces and weld to each gate post and to the carriage uprights.
- 3. Remove the temporary bracing.
- 4. Tighten all bolts.
- 5. Confirm that the gate is plumb and square.
- 6. Weld the gate header to the gate posts. See Figure 16-92.
- 7. Slowly slide the panel down until the chains are tight and the counterweights are off the shipping screws.
- 8. Remove the counterweight shipping screw.

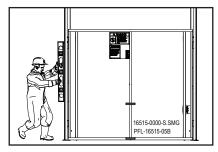

Plumb the Gate Figure 16-90

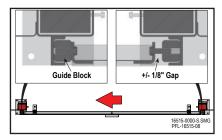


Guide Block Gap Figure 16-91

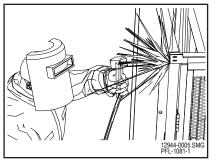


Weld Gate Header to Gate Posts Figure 16-92

Attach the Bumpers

- 1. Attach the panel magnetic foot to the bottom of the panel. See Figure 16-93.
- 2. Attach the panel bumper brackets to the top of the gate panel. See Figure 16-94.

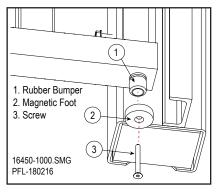



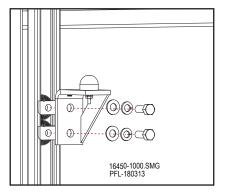

Attach Top Bumper Brackets Figure 16-94



MARNING

The gate panel must float freely within the guide track or the panel interlock will not operate safely. Make sure the gate is fit properly.

Guide block fit up is important for the gate panel to operate properly and safely. This over-rides any other horizontal alignment dimensions.

- 1. Verify that the gate panel travels up and down evenly from the top to the bottom of the posts and is not binding on the guide tracks.
- 2. Adjust the bumpers as necessary.
- 3. Verify that the gate panel clears the fully open height. If the counterweight bottoms out in the gate post before the gate panel is fully open, remove chain links to shorten the chain length.
- 4. Lift the gate panel approximately 2' (610mm) off the carriage deck to verify that the gate panel is properly counterbalanced with panel accessories (e.g., cams, interlock flats) on the panel. The gate panel should remain in this position.
 - If the gate continues to rise, add steel bar stock to the inside bottom center of the gate panel frame.
 - If the gate drops, contact PFlow Industries, Inc. Customer Support Department for instructions.
- 5. Verify that the counterweight is not hitting the post base plate.

NOTE


The drop cord is supplied by PFlow Industries, Inc. The wires from the junction box on the carriage to the switch on the gate post is not supplied by PFlow Industries, Inc.

Install the Gate Limit Switch and Stationary Junction Boxes

- 1. Attach the gate limit switch and bracket to the unistrut mounted on the gate post. See Figure 16-95.
- 2. Mount the *carriage mounted junction box* on the outside of the carriage making sure there are no obstructions above the junction box.
- 3. On a two-level VRC, mount the **stationary junction box** on the same side of the VRC as the carriage mounted junction box. Mount the stationary junction box on the outside of the floor to beam bracing.
- 4. On a multiple level VRC, mount the **stationary junction box** on the same side of the VRC as the carriage mounted junction box. Mount the stationary junction box approximately 8' (2,438 m) above the halfway point of the vertical travel of the VRC.

Verify the Gate Operation

- 1. Verify that the gate panel opens when the carriage is present and does not open when the carriage is not present.
- 2. Verify that the gate panel remains locked when the carriage leaves the floor level.

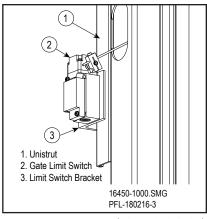

Attach Gate Limit Switch Figure 16-95

Before You Begin

Read this entire manual.

Before starting the installation, verify the job site dimensions and the dimensions of the delivered materials against the PFlow Industries, Inc. General Arrangement (GA) drawing. If the site conditions or the delivered materials do not match the GA drawing, please consult the PFlow Industries, Inc. Customer Support Department.



• Falling equipment hazard! The installation, maintenance, or servicing of this equipment requires qualified personnel with extensive knowledge and experience on how to rig, erect, and support structural steel.



• Lockout/tagout equipment before performing any adjustments or maintenance. If the equipment is not locked out, it could start unexpectedly and cause injury or damage. Make sure all personnel are aware of the potential for stored energy to be present even after the power has been locked out. Refer to ANSI Z244.1 and OSHA 29 CFR 1910.147 for minimum requirements for a lockout/tagout system. There may be additional national, state, or local requirements.




- Falling hazard! Close all gates before the carriage is moved. Never leave the lift unattended with the gates in the open position. Never close gates when a person is on the carriage or within the fenced area.
- Make sure the gate is, and remains, secured to prevent unsafe use of the gate. Always lock the gate panel closed if the gate area is unattended.

NOTICE


A qualified person is defined as a person who, by possession of a recognized degree or certificate of professional standing, or by extensive knowledge, training, and experience, has successfully demonstrated his/her ability to solve problems relating to the subject matter and work.


The Purpose of the Gate Cable Interlock

The electromechanical interlock is a safety device used to mechanically prevent the gate from opening. When the carriage is at that level and the gate is open, the VRC should not operate. Replacement components are only available as shown on the next few pages. Some configurations may vary by application. One of four (4) different manufacturer's components may be used for this installation. See Figure 17-1.

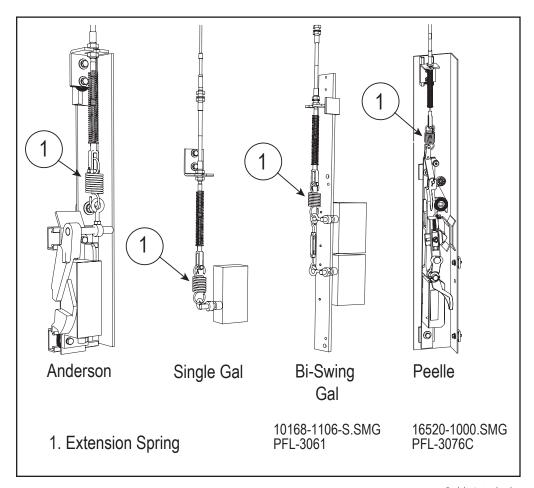

Cable Interlocks Figure 17-1

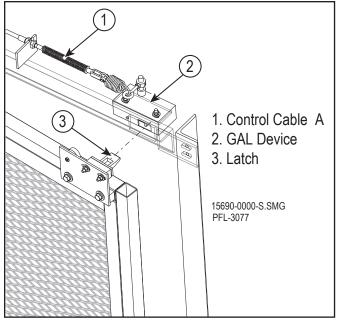

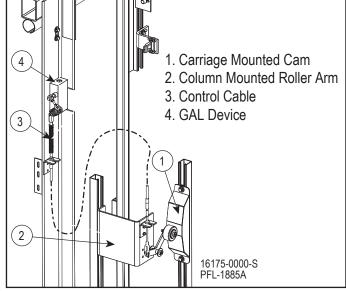

GAL Interlock on Single Panel Swing Gate Figure 17-2

GAL Interlock on Sliding Gate Figure 17-3

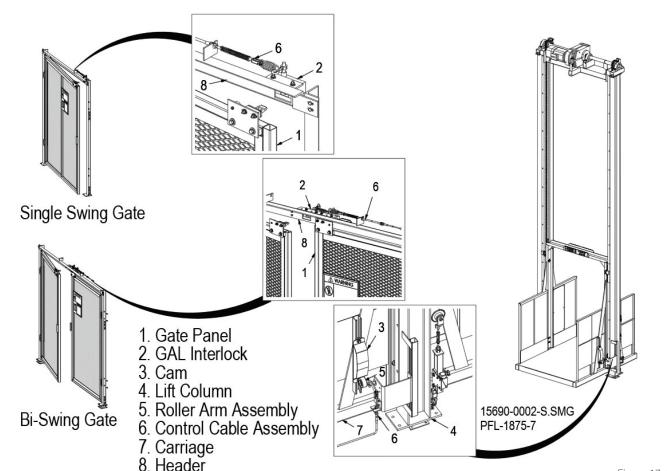


Figure 17-4

General Descriptions

The cable interlock consists of four (4) main items:

- Carriage Cam
- Column Mounted Roller Assembly
- Control Cable
- Gate Cable Interlock Assembly

Carriage Cam

The carriage cam is mounted on the carriage and positioned to activate the roller assembly. The roller must move freely on the inclined face of the carriage cam and allow the control cable to activate the interlock. See Figure 17-5.

Column Mounted Roller Assembly

The roller assembly is mounted on the VRC column. The roller assembly must be positioned to allow the roller to make contact with the carriage cam. See Figure 17-5.


Control Cable

The control cable is a utility cable with threaded stainless steel end rods. The cable has a maximum 2" (51mm) travel. When the control cable is pulled by the roller assembly as it moves along the carriage cam, the interlock locking arm opens. When the control cable is pushed by the roller assembly as it moves along the carriage cam, the interlock locking arm locks into position. See Figure 17-6.


Gate Cable Interlock Assembly

Section 17 | 4


The gate cable interlock assembly is attached to the gate post. The travel of the cable is adjusted to permit the interlock to release the gate latch.

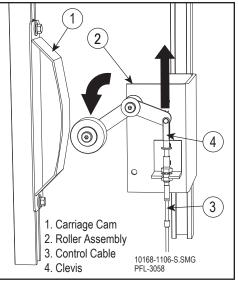

Roller Assembly Position Figure 17-5

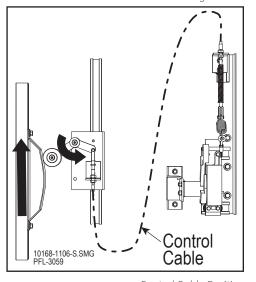


Control Cable Position Figure 17-6

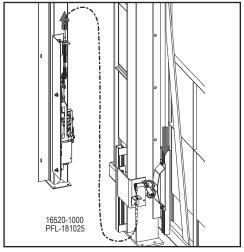

Peelle Interlock Figure 17-7

Peelle Terms

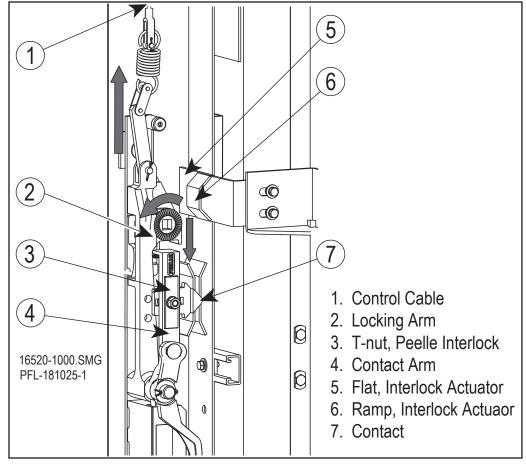


Peelle Interlock Open Position Figure 17-8

The Peelle interlock contact arm assembly and locking arm assembly operate and move independently from each other. See Figure 17-8.

The locking arm assembly captures the gate panel interlock actuator flat to mechanically lock the gate panel closed. See Figure 17-9.

The contact arm assembly is moved by the gate panel interlock actuator to open or close the interlock electrical contacts.

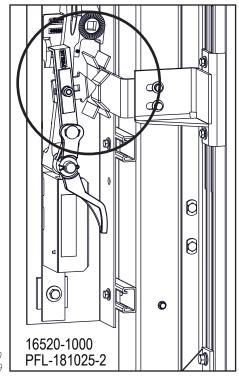

Peelle Interlock Closed Position Figure 17-9

ADANGER •


- Control cables are designed to be non-repairable. If the control cable is damaged or worn out, the interlock may not operate properly. These issues could prevent the interlock from engaging and allow the gate panel to stay open while the carriage is moving from one level to another.
- Protect the control cables from physical damage (e.g., kinking, vibration, sharp bends). Maintain a minimum bend radius of 12" (305mm). The control cable may not operate properly if the control cable is bent sharper than the 12" (305mm) radius. This could prevent the interlock from engaging and allow the gate panel to stay open while the carriage is moving from one level to another.

WARNING

- If the control cable is damaged or worn out, the interlock may not operate properly.
 - Protect the control cables from physical damage (e.g., kinking, vibration, sharp bends). Do not extend cable travel beyond 2" (51mm).
 - Route excess gate interlock cables as straight as possible and do not spool in coils tighter than 28" (711mm).
 - Protect the control cables from chemical damage (paint, solvents, oils, water or ice, dirt, other contaminants.)
 - Replace worn or damaged control cables. Do not attempt to lubricate or repair. Signs of wear include frayed ends, sudden decrease in usable travel, and moisture in the control cable.


Interlock Placement

When using 1-3/4" (44mm) width unistruts, the distance between the outside curve of the cam and the outside edge of the unistrut should be 5-1/2" (140mm) or a maximum of 6" (152mm). See Figure 17-1.

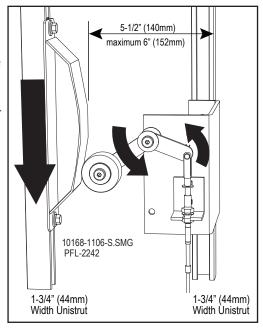


Interlock Position Figure 17-10

Straddle Placement

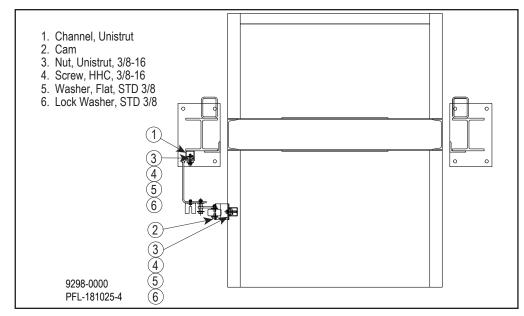

Straddle Placement Figure 17-11

Cantilever Placement

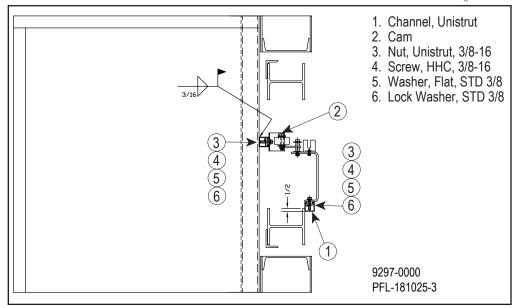


Cantilever Placement Figure 17-12

Adjust the Interlock Assembly


Adjust the Cam and Cable

The tension on the extension spring should be adjusted by positioning the cable on the angle bracket. The activation of the interlock is also adjusted by the position on the set collar. See Figure 17-13.


- 1. Adjust the carriage cam to allow + 3/4" cable travel [2" (51mm) maximum cable travel].
- 2. Make sure the roller wheel clears the edge of the cam.
- 3. Center the cable travel by positioning the cable in the bracket angle. See Figure 17-14.
- 4. The edge of the cam must not be past the center of the wheel toward the bracket. This could catch the wheel at the cam edge and break the cable clevis. See Figure 17-15.

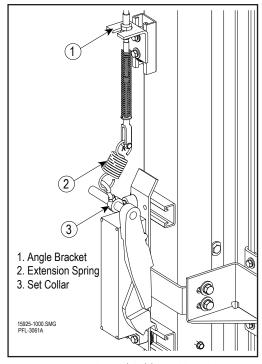

Control Cable Position Figure 17-13

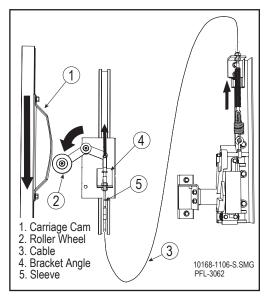



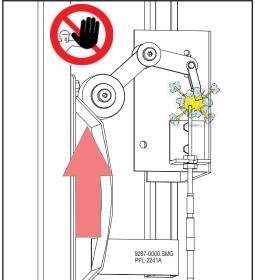


Watch Position of Roller Wheel (Anderson Shown) Figure 17-15



WARNING

Falling hazard! Proper engagement of the roller and cam is critical. Properly align the safety components to avoid causing the roller arm to push the cable into the sleeve, bend, break, and becoming inoperable.

 Before You Begin





△WARNING

Falling panel hazard! The installation of this equipment requires a qualified installer with extensive knowledge and experience on how to rig, erect, and support structural steel. Be sure to properly support, tie off, or temporarily brace the enclosure panels during installation. Do not depend on the enclosure panel feet to support the enclosure panel while the enclosure panel is being positioned or assembled. Final bracing of the enclosure panels must be to the Vertical Reciprocating Conveyor (VRC) or building structure and able to withstand a minimum of 200 pounds of force applied laterally. The use of structural angle is recommended.

CAUTION



Lifting hazard! Components and accessories are heavy. To prevent serious personal injury, use the appropriate lifting apparatus, tie offs, or help when moving, lifting or assembling the components or accessories.

Enclosure Panels


In accordance with ASME B20.1, Section I-3.9, PFlow Industries, Inc. supplies standard 8' (2,438 m) tall enclosure panels to be installed around the Vertical Reciprocating Conveyor (VRC) as required by site conditions. The enclosure panels are steel with 1-1/2" (38mm) angle frame and 16 gauge flattened expanded metal designed to reject a ball 2" (51mm) in diameter.


The PFlow Industries, Inc. GA drawing provides a "Plan View" for each level. Proper placement and appropriate size for layout and installation purposes is shown. See Figure 18-1.

Full Height Enclosures

Applications that require full height enclosures (FHE) will have an additional drawing in the shipping packet.

NOTE When stacking panels, as in full height applications or a transom above a gate, panels without legs are placed above the regular panels.

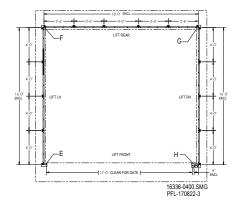

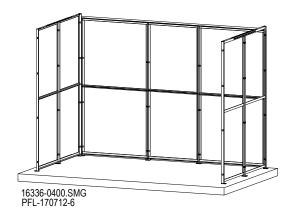

GA "Plan View" Sample Figure 18-1

Enclosure Sample Figure 18-2

Identify Components

Enclosure panels have color coded tags. Each tag is a different color.

Level	Tag Color
1st (bottom)	Green
2nd	Yellow
3rd	Red
4th	Blue
Other	Cream

Inventory Enclosure Panels

Before beginning the installation of the enclosure panels, take an inventory of the enclosure panels to make sure the correct number and sizes have been received.

The method of assembly of the enclosure panels will vary due to site conditions. See Figure 18-3 for the general sequence of events.


Assemble and Install **Enclosure Panels**

- 1. Bolt together two (2) enclosure panels. See Figure 18-4.
- 2. Bolt stiffener on top of the two (2) enclosure panels. See Figure 18-5.
- 3. Bolt corner angle to the enclosure panel for 90° corners. See Figure 18-6.


NOTICE Wall attachment kits are provided when a gate or panel meets an existing wall. See Figure 18-9.

- 4. Bolt filler panels (if applicable) to the enclosure panel to fill a gap of less than 6" (152mm). See Figure 18-7 on the next page.
- 5. Bolt attachment tabs to join the full height enclosure panels or stacked enclosure panels.
- 6. Drill and anchor the enclosure panel feet to the floor with 3/8" anchors, 3-1/2" (89mm) long. See Figure 18-4.


NOTICE The anchor hole depth should always be deeper than the length of the anchor bolt. The recommended wedge anchor size is 3/8" diameter by 3-1/2" (89mm) long.

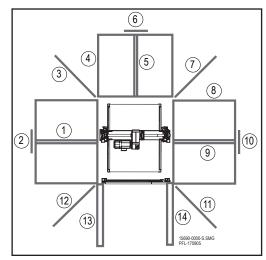


Enclosure Panel Sequence Figure 18-3

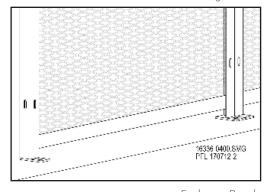


Enclosure Panels Figure 18-4

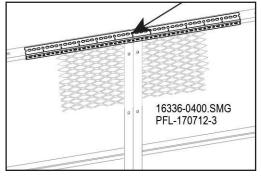


Enclosure Panel Stiffener Figure 18-5

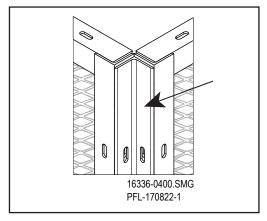

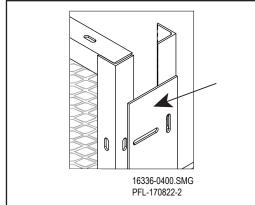


Corner Angle Figure 18-6

Filler Panel Figure 18-7

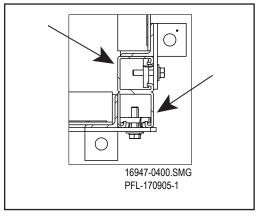



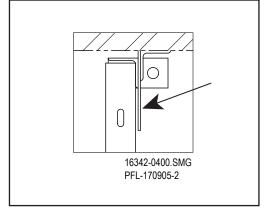

Wall Attachment Figure 18-9

NOTICE Enclosures must be braced to the Vertical Reciprocating Conveyor (VRC) or building structure and able to withstand a minimum of 200 lbf applied laterally in accordance with AMSE B20.1-Section I-3.9. The use of structural angle is recommended. Enclosure panels may need to be notched to permit bracing the VRC.

Section 18 | Enclosure Panels



www.pflow.com P 414 352 9000 F 414 352 9002 6720 N. Teutonia Ave. Milwaukee, WI 53209



Before You Begin

Read this entire manual.

Purpose

The PFlow Industries, Inc. Vertical Reciprocating Conveyor (VRC) is designed for the movement of materials only, up to the VRC's rated capacity, from one level to the next. Passengers are not allowed. The placement of capacity labels, and safety warnings are the installer's responsibility. Make sure the warning labels are placed on each gate and each push-button station.

PFlow Industries, Inc. supplies the appropriate signage in a manila envelope in the parts crate with the original shipment. Contact PFlow Industries, Inc. Customer Support Department for signage if another language is needed.



Section 19 | Signage Locations



www.pflow.com P 414 352 9000 F 414 352 9002 6720 N. Teutonia Ave. Milwaukee, WI 53209



Before You Begin

Install the Gate **Post Extensions**

Read this entire manual.

Gate post extensions may be required to gain additional gate post height and provide clearance between the bottom of the gate panel and the optional landing platform or ramp. If a landing platform or ramp is provided, the gate panel is positioned above the landing platform or ramp.

The gate post extension allows the gate panel to swing over the top of the landing platform or ramp. See Figure 20-1 and Figure 20-2.

- 1. Bolt the post extension pad to the bottom of the gate post base plates.
- 2. Follow the appropriate gate installation instructions.

Install the **Landing Platform**

- 1. Position the landing platform 1" (25mm) from the carriage and align with the carriage deck.
- 2. Make sure the anchoring tabs do not interfere with the gate posts.
- 3. Weld two (2) anchoring tabs onto both the right side and the left side of the landing platform. See Figure 20-3.
- 4. Anchor the landing platform to the floor.


NOTICE The anchor hole depth should always be deeper than the length of the anchor bolt. The recommended wedge anchor size is 3/8" diameter by 3-1/2" (89mm) long.

Install the Ramp


Ramps are typically provided for first floor levels where the floor is not at the same level as the carriage deck.

Allow additional clearance from the carriage to the ramp. Position the high end of the ramp 1" (25mm) from the edge of the carriage.


- 1. Weld two (2) anchoring tabs onto both the right side and the left side of the ramp. See Figure 20-4.
- 2. Anchor the ramp to the floor.

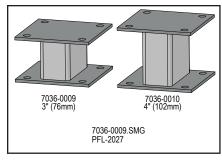


Post Extension Pads Figure 20-1

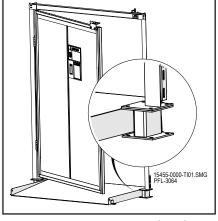

 Post Extension Pads and Ramp Figure 20-2



Landing Platform Anchor Tabs Figure 20-3

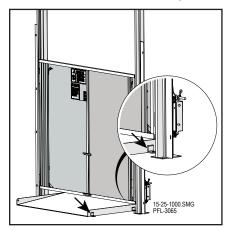

Ramp without Post Extension Pads Figure 20-4

Section 20 | Landing Platform or Ramp



www.pflow.com P 414 352 9000 F 414 352 9002 6720 N. Teutonia Ave. Milwaukee, WI 53209



Before You Begin

Read this entire manual.

Hydraulic Safety Precautions



WARNING



 Wear personal protective equipment, such as Nitrile gloves and safety glasses, whenever installing, servicing, or checking a hydraulic system.



- Hydraulic oil under pressure is extremely dangerous. Assume that all hydraulic hoses and components are pressurized. Relieve all hydraulic pressure before disconnecting any hydraulic fitting, line, or control component.
- Never try to stop or check for a hydraulic leak with any part of your body; use a piece of cardboard to check for hydraulic leaks.
- Small hydraulic hose leaks are extremely dangerous, and can inject hydraulic oil under the skin, even through gloves.
- Infection and gangrene are possible when hydraulic oil penetrates the skin. See a doctor immediately to prevent loss of limb or death.



• Ingesting hydraulic fluid is toxic and hazardous to people and wildlife. Symptoms may be skin irritation, weakness in the hands, intestinal bleeding, pneumonia, or death. Seek first aid immediately. Dispose of spilled fluids appropriately.



- Hydraulic fluid is flammable. Make sure you know where fire extinguishers are kept and how to use them. Do not weld on or near pipes, tubes, or hoses that are filled with fluid.
- Do not overfill the hydraulic oil tank. Any overflow could cause a fire. Immediately repair any hydraulic oil leaks and clean up any spills.
- Shut off all electrical power to the Vertical Reciprocating Conveyor (VRC) while filling the hydraulic oil tank.
- Materials and fluids soaked in hydraulic fluid should be stored in sealed metal containers and disposed of at proper places.



 Hydraulic fluid is slippery. Wipe up spills immediately to reduce the risk of falls or slips.

Section 21 | Hydraulic Installation and Start-up Procedures



www.pflow.com P 414 352 9000 F 414 352 9002 6720 N. Teutonia Ave. Milwaukee, WI 53209

General Hydraulic Information

- *Weepage* is the normal accumulation of fluid that passes the seals in the course of operation.
- *Leakage* is the fluid that leaks past worn or cut packing and seals. The VRC will not hold position under load.
- *Working Pressure (WP)* is the highest amount of pressure that the hose assembly will operate under.
- **Burst Pressure** is the maximum pressure at which the hose will generally rupture.
- *Date Code* is the date of manufacture usually imprinted on the hose.
- Be careful not to nick the extended rod or dent the cylinder casing. This will damage the cylinder seals or packing.
- Paint overspray on the hydraulic cylinder rod will damage the packing seals and void the manufacturer's warranty. Cover exposed rods with removable plastic or cardboard while painting or touching up the VRC.

General Hydraulic Precautions

- Always assume the hydraulic system is under pressure.
- If a carriage becomes stuck above the first floor level, secure the carriage at the stuck position by using chain falls or come-alongs before attempting to remove the obstruction.
- Make sure all pressure is relieved from the hydraulic system before disassembling any components. Fully lower the carriage before opening a line or component.
- The motor can be bumped in small increments in order to build hydraulic pressure by pressing the Send to 2 button on the push-button station and then pushing the Emergency Stop (E-stop) button on the push-button station one or two seconds later.
- Avoid contamination of the hydraulic system. Avoid allowing the ends of hoses to fall into oil or dirt. Before connecting any fitting or hose, make sure it is clean and free from debris. If contamination is suspected, flush the system and components.
- Do not install the NPT fittings too tightly. The fittings may crack.



ACAUTION

Connect all push-button stations, gate interlocks, and all hydraulic hoses before applying power to the pump motor. Never override any electrical component or manually operate the motor starter to operate the Vertical Reciprocating Conveyor (VRC).

NOTE

Keep the area around the hydraulic pump and motor clean and free from obstructions. Avoid hot spots. Any restriction to the required ventilation will increase the ambient temperature of the hydraulic pumps' location. The increased temperature affects the overall operation and shortens the life of the hydraulic system.

Install the Hydraulic Pump


Review the GA Drawing for Placement

Placement Considerations

Contact the PFlow Industries, Inc. Customer Support Department immediately concerning any questions.

Install the hydraulic pump and motor on a level, static, and solid foundation at the recommended floor level and general location listed on the PFlow Industries, Inc. General Arrangement (GA) drawing.

Install the hydraulic pump and motor in a location that is easily accessible. The ability to service and inspect the hydraulic pump and motor is an important consideration in the life of the hydraulic system. The oil breather cap, manifold block, pressure gauge, pressure switch, and oil filter must be visible and accessible.

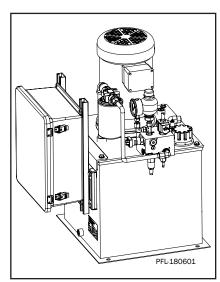

Hydraulic Pump and Motor Location Figure 21-1

Thread Sizes

Adapter – 3/4-16 Straight Thread O-ring (into the hydraulic pump), 13/16-16 O-ring Face Seal (to the elbow)

Elbow – 13/16-16 O-ring Face Seal (female) into the Adapter, 13/16-16 O-ring Face Seal (male) to the hose

Hose – 13/16-16 O-ring Face Seal (female) at both ends, 3/8" Inside diameter **Velocity Fuse** –3/4-16 Straight Thread O-ring (into the cylinder), 13/16-16 O-ring Face Seal (male) to the hose

Section 21 | Hydraulic Installation and Start-up Procedures

www.pflow.com P 414 352 9000 F 414 352 9002 6720 N. Teutonia Ave. Milwaukee, WI 53209

Clean the **Fittings and** Hoses

NOTE Leave the shipping protection (caps and plugs) installed in the hose fitting ends until the hoses are ready to be connected. A small, almost undetectable, amount of joint compound, dirt, lint, paint, or any other contaminant can prevent the hydraulic system from operating properly.

> Clean all mating fittings and hose ends carefully and thoroughly before attaching to the hose or cylinder.


Attach the **Fittings and** Hose to the **Upper Cylinder Port**

NOTE O-ring face seal fittings are sensitive to over and under-toque. Torque to proper specifications (e.g., 3/8" hose fittings 30 lb-ft [41 N-m]; 1/2" hose fitting 40 lb-ft [54 N-m].)


> The torque method of assembly is strongly recommended. If open sided torque wrenches are not available, use the Flats From Wrench Resistance (F.F.W.R.) method. Wrench tighten the nut onto the fitting body until wrench resistance is reached. Tighten the fitting such that one-half to three-quarter flats past a fixed point will seat the O-ring.

- 1. Remove the plug from the upper cylinder port. See Figure 21-2, Item 1.
- 2. Remove the plastic caps from the elbow See Figure 21-2, Item 2.
- 3. Insert the elbow into the upper cylinder port and tighten.
- 4. Remove the plastic caps from the velocity fuse. See Figure 21-2, Item 3.
- 5. Make sure the O-rings on the velocity fuse are seated properly and without any kinks. See Figure 21-3.
- 6. Insert the velocity fuse into the upper cylinder elbow with the inscribed arrow pointing down and away from the upper cylinder port. See Figure 21-2, Item 3 and Item 2.
- 7. Tighten the velocity fuse, then torque to 40 lb-ft (54 N-m). See Figure 21-2, Item 3.
- 8. Remove the plastic cap from one end of the 3/8" hose with the 1/2" fitting. See Figure 21-2, Item 4.
- 9. Attach the 1/2" fitting to the velocity fuse.
- 10. Tighten the 1/2" fitting, then torque to 40 lb-ft (54 N-m).

Repeat steps 1-10 for the other hydraulic cylinder.

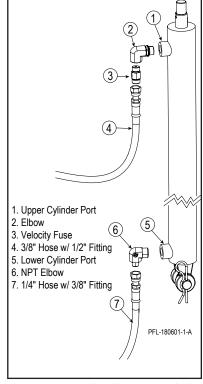

Connect Hydraulic Hose to Cylinder Figure 21-2

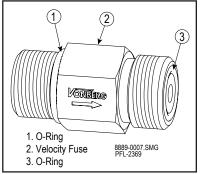

Directional Arrow on Velocity Fuse Figure 21-3

Section 21 | Hydraulic Installation and Start-up Procedures



www.pflow.com P 414 352 9000 F 414 352 9002 6720 N. Teutonia Ave. Milwaukee, WI 53209

Attach the
Fittings and
Hose to the
Lower Cylinder
Port

- 1. Remove the plug from the lower cylinder port. See Figure 21-4, Item 5.
- 2. Remove the plastic caps from the NPT elbow. See Figure 21-4, Item 6.
- 3. Wrap Teflon tape around the threads on the male end of the NPT elbow.

NOTE

Excessive amounts of Teflon tape or joint compound may get into the system and void applicable portions of the warranty. Teflon tape or paste is not required on flat faced O-ring fittings.

- 4. Insert the NPT elbow into the lower cylinder port and tighten.
- 5. Remove the plastic cap from one end of the 1/4" hose with the 3/8" fitting. See Figure 21-4, Item 7.
- 6. Attach the 3/8" fitting to the NPT elbow.
- 7. Tighten the 3/8" fitting, then torque to 30 lb-ft (41 N-m).

Repeat steps 1-7 for the other hydraulic cylinder.

More often than not, additional lengths of hydraulic hoses are required between the cylinder and hydraulic pump. The 1/2" and 3/8" unions both have O-ring seals in each end of the union.

- 1. Remove the plastic caps from the union. See Figure 21-5, Item 1.
- 2. Make sure the O-rings on the union are seated properly and without any kinks.
- 3. Attach the hose assembly to the union.
- 4. Tighten the hose assembly, then torque. 1/2" union to 40 lb-ft (54 N-m). 3/8" union to 30 lb-ft (41 N-m).


Route the Hydraulic Hoses

Join the


Hydraulic Hoses

Route the hydraulic hoses from the hydraulic cylinders to the hydraulic pump making sure to:

- Provide adequate slack without pulling taut.
- Avoid tangling with other VRC components.
- Avoid any twists, kinks, and sharp bends.

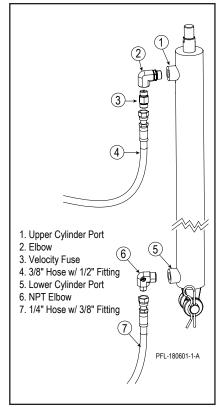

Connect Hydraulic Hose to Cylinder Figure 21-4

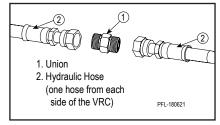

Connect Hydraulic Hose to Cylinder Figure 21-5


Section 21 | Hydraulic Installation and Start-up Procedures




www.pflow.com P 414 352 9000 F 414 352 9002 6720 N. Teutonia Ave. Milwaukee, WI 53209

Component Identification

Most components on the hydraulic pump motor unit are preset at the factory. See Figure 21-6 and Figure 21-7 for easy identification. Before making any adjustments, contact the PFlow Industries, Inc. Customer Support Department for assistance.

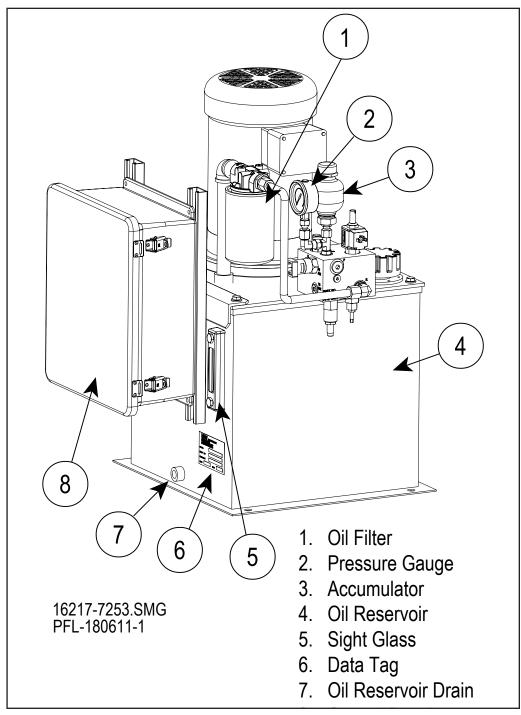

Components of Hydraulic Pump Figure 21-6

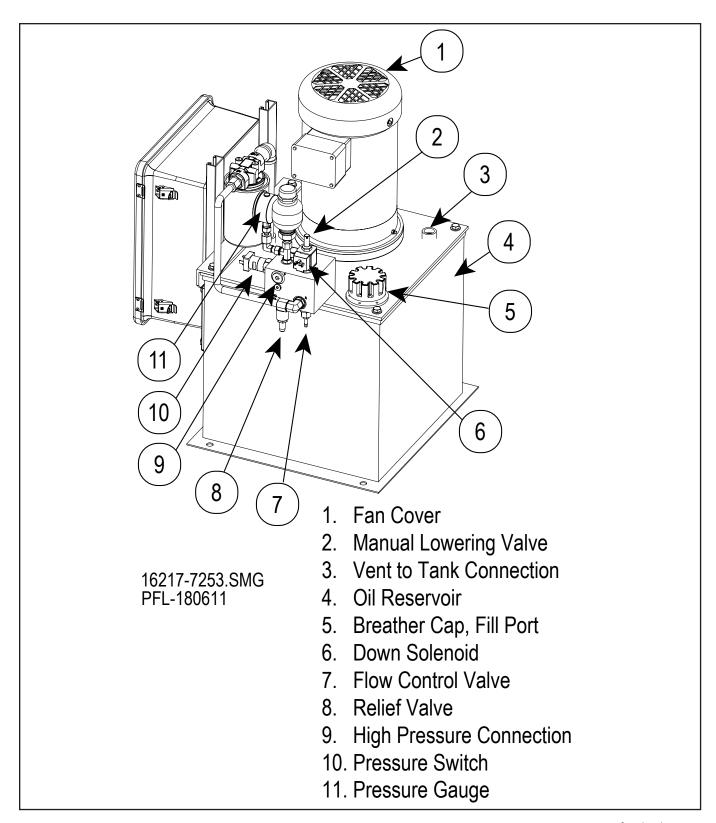


Components of Hydraulic Pump Figure 21-7

NOTE


Leave the shipping protection (caps and plugs) installed in the hose fitting ends until the hoses are ready to be connected. A small, almost undetectable, amount of joint compound, dirt, lint, paint, or any other contaminant can prevent the hydraulic system from operating properly.

Attach the Upper High Pressure Hoses

- 1. Remove the plastic caps from the 1/2" adapter. See Figure 21-8, Item 1.
- 2. Make sure the O-ring on the 1/2" adapter is seated properly and without any kinks.
- 3. Install the 1/2" adapter into the high pressure port on the tank marked "P".
- 4. Tighten the adapter, then torque to 40 lb-ft (54 N-m).
- 5. Remove the plastic caps from the 1/2" Tee. See Figure 21-8, Item 2.
- 6. Make sure the O-ring on the 1/2" Tee is seated properly and without any kinks.
- 7. Install the 1/2" Tee into the 1/2" adapter.
- 8. Attach the high pressure hose fittings to each end of the horizontal run of the 1/2" Tee. See Figure 21-8, Item 3.
- 9. Tighten the high pressure hose fittings, then torque to 40 lb-ft (54 N-m).
- 1. Remove the plastic caps from the 3/8" adapter. See Figure 21-9, Item 1.
- 2. Install the 3/8" adapter into the tank vent.
- 3. Tighten the adapter, then torque to 30 lb-ft (41 N-m).
- 4. Remove the plastic caps from the 3/8" Tee. See Figure 21-9, Item 2.
- 5. Wrap the side outlet of the 3/8" Tee with Teflon tape or joint compound.
- 6. Install the 3/8" Tee into the 3/8" adapter.
- 7. Attach the vent to tank hose fittings to each end of the horizontal run of the 3/8" Tee. See Figure 21-9, Item 3.
- 8. Tighten the vent to tank hose fittings, then torque to 30 lb-ft (41 N-m).

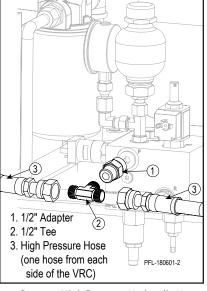

Connect High Pressure Hydraulic Hoses Figure 21-8

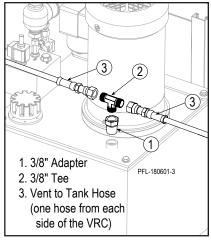

Connect Vent to Tank Hydraulic Hoses Figure 21-9

Attach the

Lower Vent to Tank Hoses

Section 21 | Hydraulic Installation and Start-up Procedures



www.pflow.com P 414 352 9000 F 414 352 9002 6720 N. Teutonia Ave. Milwaukee, WI 53209

Start-up Procedures

- 1. Confirm that all bolts on the VRC are tight.
- 2. Confirm that all finish welds are complete.
- 3. Confirm that the oil level in the sight glass on the side of the hydraulic tank is between the black line and the red line.

Confirm E-stop Safety Operation

- 1. While you and the carriage are at the first level, push in the E-stop button on the push-button station.
- 2. Push the Send to 2 button on the push-button station. The VRC should not move.
- 3. Pull out the E-stop button on the push-button station.



Confirm Motor Rotation

WARNING



Exposed Rotating Fan Blades! Keep fingers and other objects away from the rotating fan blades. Will cause severe injury. Make sure that power is disconnected before performing any action that requires touching the blades, such as inspections or blade replacement.

- 1. Remove the fan cover from the motor.
- 2. Push the Send to 2 button on the push-button station just long enough to confirm that the motor is rotating in the correct direction. Rotation should match the directional arrow on the motor housing. Push in the Emergency Stop (E-stop) button on the push-button station.

NOTE

If pushing in the E-stop button on the push-button station does not stop the VRC from moving, immediately disconnect power to the VRC.

If nothing happens when the Send to 2 button is pushed, or hydraulic pressure reaches the PSwitch PSI value but the carriage does not rise, contact PFlow Industries, Inc. Customer Support Department for troubleshooting assistance.

If the motor is not operating in the correct direction, stop the motor immediately. Have a qualified electrician inspect and switch the T1 and T2 wires of the incoming 3-phase power for the motor. Confirm that the motor rotation is correct after any wiring change has been made.

- 3. Replace the fan cover.
- 4. Pull out the E-stop button on the push-button station.

Make Sure There are No Leaks

- 1. Push the Send to 2 button on the push-button station.
- 2. Allow the carriage to raise off the ground three to five inches.
- 3. Push in the E-stop button on the push-button station.
- 4. Pull out the E-stop button on the push-button station.
- 5. Push the Send to 1 button on the push-button station.
- 6. Confirm that there are no leaks at any of the joints along the hydraulic system.

Section 21 | Hydraulic Installation and Start-up Procedures



www.pflow.com P 414 352 9000 F 414 352 9002 6720 N. Teutonia Ave. Milwaukee, WI 53209

Confirm Carriage Stops are Level with the Floor

- 1. Push the Send to 2 button on the push-button station. Push the E-stop button just before the carriage reaches the second level.
- 2. Adjust the carriage stop jack screws at the top of the column to allow the carriage deck to stop level with the floor on the second level.
- 3. Push the Send to 1 button on the push-button station. Make sure the underside of the carriage is shimmed properly and that the carriage deck stops level with the floor of the first level.
- 4. Push the Send to 2 button on the push-button station. Make sure the carriage deck stops level with the floor of the second level.

Confirm Pressure Readings

NOTE

The data plate on the side of the hydraulic pump housing includes the Relief PSI and Pressure Switch PSI values.

- 1. With the carriage deck at the first level, push the Send to 2 button on the push-button station.
- 2. Monitor the pressure gauge reading and record the amount of time that is taken for the carriage deck to reach the second level. The hydraulic pump should shut off within 20 seconds of reaching the second level. The pressure gauge reading at that time should be within 100 of the value listed on the data tag.

NOTE

If the pressure gauge on the hydraulic pump reaches the PSwitch PSI but the carriage does not raise, make a note of that value and contact PFlow Industries, Inc. Customer Support Department for troubleshooting assistance.

Confirm that the Pump Motor Shuts Off

Make sure that the hydraulic pump motor shuts off when the carriage deck reaches the second level.

NOTE

If the hydraulic pump motor does not shut off within 20 seconds of reaching the second level, push in the E-stop button. Push the Send to 1 button on the push-button station. Do not leave the VRC unattended or at an upper level if the pump motor fails to shut off. Components may overheat. Contact PFlow Industries, Inc. Customer Support Department for troubleshooting assistance.

Section 21 | Hydraulic Installation and Start-up Procedures

www.pflow.com P 414 352 9000 F 414 352 9002 6720 N. Teutonia Ave. Milwaukee, WI 53209


Confirm VRC Travel Times

- 1. Push the Send to 1 button on the push-button station.
- 2. Record the amount of time it takes for the carriage deck to reach the first level.

NOTE The speed in the up direction is not adjustable. A fixed displacement pump is used. To increase the travel time in the up direction will require a larger pump and motor, and likely a new control panel.

The time it takes the VRC to travel up and down should match. If the times do not match or the return speed is very slow, the flow control valve can be adjusted to increase the down travel time.

- 1. Remove the lock nut on the relief valve.
- 2. Using an 1/8" hex key wrench, turn the needle valve found inside the bottom of the relief valve. See Figure 21-10.
- 3. Clockwise rotation = reduced speed; Counter clockwise rotation = increased speed.
- 4. Re-test the travel times. Adjust the relief valve if necessary.
- 5. Replace the lock nut on the relief valve and finger tighten to prevent further movement of the needle valve.

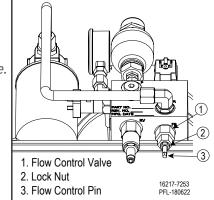

Flow Control Valve Figure 21-10

Confirm Gate Safety Operation

1. While you are at the first level and the VRC is traveling up, attempt to open the gate door. The door should not open while traveling, and the VRC should continue to travel up.

NOTE If the VRC stops but the gate door will not open, call PFlow Industries, Inc. Customer Support Department for troubleshooting assistance.

- 2. While the VRC is at the second level, attempt to open the first level gate door. The gate door should not open.
- 3. Push the Send to 1 button on the push-button station.
- 4. Attempt to open the first level gate door. The gate door should not open.
- 5. Attempt to open the first level gate door when the carriage has reached the first level. The gate door should open.

NOTE If the gate door does not open, refer to the interlock section of the installation manual for needed adjustments.

Confirm **Push-button Operation**

- 1. Close the gate door. Push in the E-stop button on the push-button station. Push the Send to 1 button on the push-button station. The VRC should not move.
- 2. Pull out the E-stop button on the push-button station. Push the Send to 2 button on the push-button station. The VRC should begin to travel up.

Repeat the E-stop Safety Operation steps, Gate Safety Operation steps, and the Push-button Operation steps at each level and at each push-button station.

Section 21 | Hydraulic Installation and Start-up Procedures



www.pflow.com P 414 352 9000 F 414 352 9002 6720 N. Teutonia Ave. Milwaukee, WI 53209



Conduct a Load Test

WARNING

Avoid Shifting Loads! Place the load in the center of the lift platform. Make sure that any portion of the load does not overhang the perimeter of the carriage. This could create an unstable load condition.

- 1. With the carriage deck at the first level, add weight up to, but not to exceed, the VRCs rated capacity.
- 2. Close the gate and push the Send to 2 button on the push-button station.
- 3. Monitor the position of the carriage deck as it reaches the second level.
- 4. Continue to monitor the position of the carriage deck. Allow the VRC to hold the lift at the upper level for a half hour without drifting down.

NOTE

If the carriage deck drifts down, make a note of the weight used, the amount of pressure on the pressure gauge, and the amount of time that the carriage deck held the position before drifting down. Push the send to 1 button and contact PFlow Industries, Inc. Customer Support Department for troubleshooting assistance.

www.pflow.com P 414 352 9000 F 414 352 9002 6720 N. Teutonia Ave. Milwaukee, WI 53209

Before You Begin

Read this entire manual.

The Purpose of the Motor Overload Sensor (MOL)

The PFlow Industries, Inc. D series Vertical Reciprocating Conveyor (VRC) is equipped with a Motor Overload Sensor (MOL). The MOL is prewired and located inside the electrical control panel. See Figure 21-1.

The MOL monitors the motor amp draw and provides enhanced over current protection of the lift motor. The MOL must be adjusted to the maximum "expected" current draw. If the motor current rises above the MOL set point, the MOL will trip. Tripping can be caused by a circuit malfunction, overloading the capacity of the lift, or an overhanging load trapped between floors.

Locate the Full Load Amperage (F.L.A.) Value

- 1. Review the electrical drawing J#-0050.
- 2. Locate the hydraulic pump motor information on page 1 or page 2. The F.L.A. value is listed after the HP value. See Figure 21-2. The information may also be found on the VRC Specification for this job.



Motor Overload Sensor Figure 21-1

Pump Motor Information Figure 21-2

Test and Calibrate the MOL

- 1. Turn the trip point dial to match the F.L.A. value.
- 2. Place the maximum product load on the carriage.

Run the carriage up.

Did the MOL trip?

Turn the trip point dial clockwise one hash mark. Start at ground level and run the carriage up.

Did the MOL trip?

Contact PFlow Industries, Inc. for assistance.

Run the carriage down.

Did the MOL trip?

Turn the trip point dial clockwise one

dial clockwise one hash mark. Start at ground level, run the carriage up, and then run the carriage down.

Did the MOL trip?

Contact PFlow Industries, Inc. for assistance.

The MOL is properly adjusted.

Section 22 | Adjust Motor Overload Sensor



www.pflow.com P 414 352 9000 F 414 352 9002 6720 N. Teutonia Ave. Milwaukee, WI 53209



Section 23 | 21 Series Installation Completion Checklist



www.pflow.com P 414 352 9000 F 414 352 9002 6720 N. Teutonia Ave. Milwaukee, WI 53209

Post Installation Checklist

Make sure all steps are completed. Sign and return to PFlow Industries, Inc. Customer Support Department via e-mail to csd@pflow.com

\checkmark	Verify Mechanical Completion									
	All bolts are tight.									
	Final bracing for the VRC is completed from front to back and from side to side. Inspect each level.									
	Final bracing for the gates and enclosures are completed. Inspect each level.									
	The gate door opens when the carriage is present. Inspect each level.									
	The gate door does not open when the carriage is not present. Inspect each level.									
	Excess gate interlock cables are routed as straight as possible and not spooled in coils tighter than 28" (711mm).									
	All operational signs are posted.									
	All weld marks, scrapes, etc. are touched up with paint.									
	The breather cap has been installed on the hydraulic pump.									
	The hydraulic oil level in the sight glass is between the black line and the red line.									
	The motor is rotating in the correct direction.									
	There are no hydraulic oil leaks.									
	The carriage deck is flush with the floor level and every level.									
	The hydraulic pump motor shuts off when the carriage decks reaches the second floor.									
	The sprocket and lift chains are centered within the chain block tube and Loctite is applied to all split collar and sprocket setscrews.									
	There is no excessive noise or binding during travel.									
	Additional options and accessories (e.g., DeckLocks, maintenance pins) are tested and working properly.									
	The installation site is clean and all debris is removed.									
	The customer received instructions regarding proper lift operation.									
	The customer received instructions regarding preventive maintenance of the VRC.									
	The customer received instructions regarding procedures in the event of a problem or safety related issues.									
	Identify any unsafe condition. Document and report the condition immediately to the customer and then PFlow Industries, Inc. Customer Support Department. Do not allow the lift to operate when unsafe conditions arise.									



Additional Notes or Follow-up Requirements

PFlow Serial Number	Customer/User	Date		
Mechanical Checklist Completed by	E-mail Address			
Company	Phone Number			

Section 23 | 21 Series Installation Completion Checklist



www.pflow.com P 414 352 9000 F 414 352 9002 6720 N. Teutonia Ave. Milwaukee, WI 53209

Post Installation Checklist

Make sure all steps are completed. Sign and return to PFlow Industries, Inc. Customer Support Department via e-mail to csd@pflow.com

\checkmark	Verify Electrical Completion							
	Make sure all electrical connections are tight and properly made.							
	The push-button stations operate correctly on all floor levels.							
	The emergency stop buttons operate correctly on all floor levels.							
	The MOL has been adjusted and the full load test is completed.							
	The gate door opens when the carriage is present. Inspect each level.							
	The gate door does not open when the carriage is not present. Inspect each level.							
	The VRC does not operate with any gate open.							
	Additional options and accessories (e.g., DeckLocks, maintenance pins) are tested and working properly.							
	The installation site is clean and all debris is removed.							
	The customer received instructions regarding electrical control panel location and power shutoffs.							
	The customer received instructions regarding procedures in the event of a problem or safety related issues.							
	Identify any unsafe condition. Document and report the condition immediately to the customer and then PFlow Industries, Inc. Customer Support Department. Do not allow the lift to operate when unsafe conditions arise.							



Additional Notes or Follow-up Requirements

PFlow Serial Number	Customer/User	Date		
Electrical Checklist Completed by	E-mail Address			
Company	Phone Number			

Section 24 | Installation Questionnaire



www.pflow.com P 414 352 9000 F 414 352 9002 6720 N. Teutonia Ave. Milwaukee, WI 53209

Thank You

PFlow Industries, Inc. would like to thank you for the opportunity to serve you. Your business is appreciated. Please help us to ensure that your expectations are met by taking a few minutes to tell us about the equipment and service that you have received. Complete the Installation Questionnaire and Acceptance Certificate. Return both forms to PFlow Industries, Inc. via e-mail to csd@pflow.com Additional space for comments is available on the next page.

			Yes √	No√						
Product Perception										
Was the equipment shipment	complete as expected?									
What items were missing, if ar	ny?									
Was the accomment in good on	Was the equipment in good condition?									
	Describe the equipment an good condition? Describe the equipment damage or concerns with the workmanship, if any.									
Describe the equipment dama	ge or concerns with the	e workmanship, if any.								
Did the equipment match the	Did the equipment match the General Arrangement (GA) drawing?									
Was the equipment dimension	ally correct with form,	fit, and function?								
Describe any problem areas in	ı detail.			_						
V 2										
Electrical Installation										
Was the electrical field wiring	completed as required	?								
Were there any issues with the	Were there any issues with the electrical components?									
	After the electrical installation was completed, was it necessary to return for									
final adjustments, testing, and										
	Were you made aware of any electrical problems?									
Describe any "No" answers in	detail.									
Testing				_						
Was the equipment tested at fu	ıll load capacity?									
Were all gates tested to ensure	proper operation and	interlock operation?								
PFlow Serial Number	ow Serial Number Customer/User									
Durani Addi			1							
Questionnaire Completed by		E-mail Address								
Company		Phone Number								

Section 24 | Installation Questionnaire



www.pflow.com P 414 352 9000 F 414 352 9002 6720 N. Teutonia Ave. Milwaukee, WI 53209



Section 25 | Acceptance Certification - VRC



www.pflow.com P 414 352 9000 F 414 352 9002 6720 N. Teutonia Ave. Milwaukee, WI 53209

Acceptance

We, the Customer, accept the equipment listed below as being properly installed, tested, and performing to our satisfaction. This form covers both the mechanical and the electrical installation of the equipment. This acceptance in no way releases either PFlow Industries, Inc. or the installing contractor(s) of any warranty obligations. If there are any exceptions or unresolved items, please include detailed information.

PFlow Serial Number: Model Numb							D DB		\square M	□ MQ	□ 21	CV	Other	
Job Na	ame:			•			•					•		
Site St	treet Address:													
Site M	Iailing Address:													
Site City:					5	State:	Zip Code:							
Custo	mer Contact Name:	:				(Contact	Titl	e:					
Custo	mer Contact Phone	: ()	Ext]	E-Mail:							
	Load Capacity:						Start-up	Dat	te:					
ned	Load Test:	□ Yes	□No	at % of lift capacity			Customer Initials:							
rfori	Operation Test:	□ Yes	□No					Comments:						
Tests Performed	Gate/Interlock Operation:	□ Yes	□No	□ Not Applicable										
Te	Other Test:													
	Other Test:													
		,	,											
Perso	nnel Instructed on	the Opera	ion and P	reventive Mai	ntenan	ce:								
Name:					Comp	any:	any:							
Name:					Company:									
Accepted by:								Aco	cepta	ance I	Date:			
Name/Phone:							PFlow Rep Present:							
Title:							Name:							
Company:								Co	mpa	ny:				

Please return a copy of this form to the PFlow Industries, Inc. Customer Support Department at csd@pflow.com.

Section 25 | Acceptance Certification - VRC



www.pflow.com P 414 352 9000 F 414 352 9002 6720 N. Teutonia Ave. Milwaukee, WI 53209

